

RM-30BP Compatibility (Rev.8.0)

“○”: work “X”: doesn't work “-”: NA

		HXR-NX200	PXW-Z190V/X190T	PXW-Z280V/X280T	FDR-AX700	HXR-NX80	PXW-Z90V/PXW-Z90T	HXR-NX5R	PXW-FS5		PXW-FS5M2
		V1.0	V1.0	V1.0	V1.00	V1.00	V1.00	V1.00/V1.10	V2.0	V3.0/V4.0	V1.0
Zoom		○	○	○	○	○	○	○	○	○	○
Iris	Auto/Manual	○	○	○	○	○	○	○	○	○	○
	Dial	○	○	○	○	○	○	○	○	○	○
	Push Auto Iris	○	○	○	○	○	○	○	○	○	○
Focus	Auto/Manual	○	○	○	○	○	○	○	○	○	○
	Dial	○	○	○	○	○	○	○	○	○	○
	Push Auto Focus	×	○	○	×	×	×	○	○	○	○
REC Start/Stop		○	○	○	○	○	○	○	○	○	○
WHT BAL		○	○	○	○	○	○	○	○	○	○
PRESET		○	○	○	○	○	○	○	○	○	○
A		○	○	○	○	○	○	○	○	○	○
B		○	○	○	○	○	○	○	○	○	○
WB SET		○	○	○	○	○	○	○	○	○	○
GAIN		○	○	○	○	○	○	○	○	○	○
GAIN SELECT		×	○	○	×	×	×	○	○	○	○
SHUTTER		○	○	○	○	○	○	○	○	○	○
(SHUTTER SELECT) (*1)		○	○	○	○	○	○	○	○	○	○
Menu		○	○	○	○	○	○	○	○	○	○
SEL/SET	Up/Down	○	○	○	○	○	○	○	○	○	○
	Right/Left	○	○	○	○	○	○	○	○	○	○
	Execute	○	○	○	○	○	○	○	○	○	○
CANCEL/BACK		-	○	○	×	×	×	-	-	-	-
THUMBNAIL		○	○	○	○	○	○	○	○	○	○
DISPLAY		○	○	○	○	○	○	○	○	○	○
ASSIGN1		○	○	○	○	○	○	○	○	○	○
ASSIGN2		○	○	○	○	○	○	○	○	○	○
ASSIGN3		○	○	○	○	○	○	○	○	○	○
ASSIGN4		○	○	○	○	○	○	○	○	○	○
ASSIGN5		○	○	○	○	○	○	○	○	○	○
ASSIGN6		-	○	○	○	○	○	○	○	○	○
ASSIGN DIAL		-	○	○	×	×	×	-	○	○	○
N D	Auto/Manual	-	○	○	×	×	×	-	×	○	○
	Dial	-	○	○	×	×	×	-	×	○	○
	Push Auto ND	-	○	○	×	×	×	-	-	-	-
TALLY (*2)		○	○	○	○	○	○	○	×	○	○
COUNTER RESET (*2)		○	○	○	○	○	○	○	○	○	○
Daisy Chain		○	○	○	○	○	○	○	○	○	○

- *1) Use the joystick up/down for SHUTTER SELECT.
- *2) Command from MCX-500. No dedicated key on the RM-30BP.
- *3) Not so smooth.
- *4) Very slow move when in low speed zoom operation.
- *5) Work on RM-1BP Focus.
- *6) Work on RM-1BP REC Start/Stop.
- *7) No REC Tally on RM-30BP.
- *8) Need to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
- *9) Need to press "WHT BAL" button on a camcorder first.

RM-30BP Compatibility (Rev.8.0)

“○”: work “X”: doesn't work “-”: NA

		PXW-Z150		PXW-FS7	PXW-FS7M2	PXW-X180 /X160		PXW-Z100	FDR-AX1	HXR-NX100	HXR-NX3	HXR-NX1
		V1.0	V2.0	V4.0	V1.0	V3.1	V4.0	V5.1	V4.0	V1.0	V2.0	V1.0
Zoom		○	○	○	○	○ (*4)	○ (*4)	○	○	○	○	○
Iris	Auto/Manual	○	○	○	○	×	○	×	×	○	○	○
	Dial	○	○	○	○	×	○	×	×	○	○	○
	Push Auto Iris	○	○	○	○	×	○	×	×	○	○	○
Focus	Auto/Manual	○	○	○	○	×	○	×	×	○	○	○
	Dial	○ (*3)	○	○	○	×	○	×	×	○	○	○
	Push Auto Focus	○	○	○	○	×	○	×	×	×	×	×
REC Start/Stop		○	○	○	○	×	○	○(*7)	○(*7)	○	○	○
WHT BAL		○	○	○	○	×	○	×	×	○(*9)	○	○
PRESET		○	○	○	○	×	○	×	×	○(*9)	○	○
A		○	○	○	○	×	○	×	×	○(*9)	○	○
B		○	○	○	○	×	○	×	×	○(*9)	○	○
WB SET		○	○	○	○	×	○	×	×	○(*9)	○	○
GAIN		○	○	○	○	×	○	×	×	○	○	○
GAIN SELECT		×	×	○	○	×	○	×	×	×	○	○
SHUTTER		○	○	○	○	×	○	×	×	○	○	○
(SHUTTER SELECT) (*1)		×	○	○	○	×	○	×	×	×	○	○
Menu		○	○	○	○	×	○	×	×	○	○	○
SEL/SET	Up/Down	○	○	○	○	×	○	×	×	○	○	○
	Right/Left	○	○	○	○	×	○	×	×	○	○	○
	Execute	○	○	○	○	×	○	×	×	○	○	○
CANCEL/BACK		-	-	○	○	×	○	×	×	-	-	-
THUMBNAIL		○	○	○	○	×	○	×	×	×	×	×
DISPLAY		○	○	○	○	×	○	×	×	○	○	○
ASSIGN1		○	○	○	○	×	○	×	×	○	○	○
ASSIGN2		○	○	○	○	×	○	×	×	○	○	○
ASSIGN3		○	○	○	○	×	○	×	×	○	○	○
ASSIGN4		○	○	○	○	×	○	×	×	○	○	○
ASSIGN5		○	○	○	○	×	○	×	×	○	○	○
ASSIGN6		○	○	○	○	×	○	×	×	-	○	○
ASSIGN DIAL		-	-	○	○	-	○	-	-	-	-	-
N D	Auto/Manual	-	-	-	○	×	○	-	-	-	-	-
	Dial	-	-	-	○	×	○	-	-	-	-	-
	Push Auto ND	-	-	-	○	×	-	-	-	-	-	-
TALLY (*2)		×	○	×	×	×	×	×	×	×	×	×
COUNTER RESET (*2)		○	○	○	○	×	○	×	×	○	○	○
Daisy Chain		○	○	○	○	○	○	×	×	○	×	×

- *1) Use the joystick up/down for SHUTTER SELECT.
- *2) Command from MCX-500. No dedicated key on the RM-30BP.
- *3) Not so smooth.
- *4) Very slow move when in low speed zoom operation.
- *5) Work on RM-1BP Focus.
- *6) Work on RM-1BP REC Start/Stop.
- *7) No REC Tally on RM-30BP.
- *8) Need to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
- *9) Need to press "WHT BAL" button on a camcorder first.

RM-30BP Compatibility (Rev.8.0)

“○”: work “X”: doesn't work “-”: NA

		HXR-NX5	HXR-NX70	HXR-MC2500	HXR-MC2000	HXR-MC1500	NEX-FS700/R	NEX-EA50	NEX-FS100	HVR-Z7	HVR-Z5
		V2	V3.0	V1.0			V3.2	V2.0	V2.0		
Zoom		○	○	○	○	○	○	○	-	○	○
Iris	Auto/Manual	○	×	○	×	×	○	○	○	○	○
	Dial	○	×	○(*8)	×	×	○	○	○	○	○
	Push Auto Iris	○	×	○	×	×	○	○	○	○	○
Focus	Auto/Manual	○	×	○	○	○	○	○	○	○	○
	Dial	○	×	○	×	×	○	○	○	○	○
	Push Auto Focus	○	-	○	×	×	×	×	○	○	○
REC Start/Stop		○	○	○	○	○	○	○	○	○	○
WHT BAL		○	×	○(*9)	×	×	○	○	○	○	○
PRESET		○	-	○(*9)	-	-	○	○	○	○	○
A		○	-	○(*9)	-	-	○	○	○	○	○
B		○	-	○(*9)	-	-	○	○	○	○	○
WB SET		○	×	○(*9)	×	×	○	○	○	○	○
GAIN		○	×	○	×	×	×	×	×	×	×
GAIN SELECT		○	×	×	×	×	×	×	×	×	×
SHUTTER		○	×	○	×	×	○	○	○	○	○
(SHUTTER SELECT) (*1)		○	×	×	×	×	○	○	○	○	○
Menu		○	○	○	×	×	○	○	○	○	○
SEL/SET	Up/Down	○	○	○	○	○	○	○	○	○	○
	Right/Left	○	○	○	○	○	○	○	○	-	-
	Execute	○	○	○	○	○	○	○	○	○	○
CANCEL/BACK		-	-	-	-	-	-	-	-	-	-
THUMBNAIL		×	-	×	-	-	×	×	×	-	-
DISPLAY		○	○	○	○	○	○	○	○	○	○
ASSIGN1		○	-	○	-	-	○	○	○	○	○
ASSIGN2		○	-	○	-	-	○	○	○	○	○
ASSIGN3		○	-	-	-	-	○	○	○	○	○
ASSIGN4		○	-	-	-	-	○	○	○	○	○
ASSIGN5		○	-	-	-	-	○	○	○	○	○
ASSIGN6		○	-	-	-	-	○	○	○	○	○
ASSIGN DIAL		-	-	-	-	-	-	-	-	-	-
N D	Auto/Manual	-	-	-	-	-	-	-	-	-	-
	Dial	-	-	-	-	-	-	-	-	-	-
	Push Auto ND	-	-	-	-	-	-	-	-	-	-
TALLY (*2)		×	×	×	×	×	×	×	×	×	×
COUNTER RESET (*2)		○	×	○	×	×	○	○	○	○	○
Daisy Chain		×	×	○	×	×	×	×	×	○	○

- *1) Use the joystick up/down for SHUTTER SELECT.
- *2) Command from MCX-500. No dedicated key on the RM-30BP.
- *3) Not so smooth.
- *4) Very slow move when in low speed zoom operation.
- *5) Work on RM-1BP Focus.
- *6) Work on RM-1BP REC Start/Stop.
- *7) No REC Tally on RM-30BP.
- *8) Need to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
- *9) Need to press "WHT BAL" button on a camcorder first.

RM-30BP Compatibility (Rev.8.0)

“○”: work “X”: doesn't work “-”: NA

		HVR-S270	HVR- HD1000	HVR-A1	HVR-V1	HVR-Z1	DSR-PD150P / PD177P /PD198P
Zoom		○	○	○	○	○	○
Iris	Auto/Manual	○	×	×	×	×	○
	Dial	○	×	×	×	×	○
	Push Auto Iris	○	×	×	×	×	○
Focus	Auto/Manual	○	○	×	○	×	○
	Dial	○	×	×	×	×	○
	Push Auto Focus	○	×	×	×	×	○
REC Start/Stop		○	○	○	○	○	○
WHT BAL		○	×	×	○	○	○
PRESET		○	-	-	×	×	○
A		○	-	-	×	×	○
B		○	-	-	×	×	○
WB SET		○	×	×	×	×	○
GAIN		×	×	×	×	×	×
GAIN SELECT		×	×	×	×	×	×
SHUTTER		○	×	×	×	×	○
(SHUTTER SELECT) (*1)		×	×	×	×	×	○
Menu		○	×	×	○	○	○
SEL/SET	Up/Down	○	-	×	○	×	○
	Right/Left	-	-	×	-	-	-
	Execute	○	-	×	○	×	○
CANCEL/BACK		-	-	-	-	-	-
THUMBNAIL		-	-	-	-	-	-
DISPLAY		○	○	○	○	○	○
ASSIGN1		○	-	×	×	×	○
ASSIGN2		○	-	-	×	×	○
ASSIGN3		○	-	-	×	×	○
ASSIGN4		○	-	-	×	×	○
ASSIGN5		○	-	-	×	×	○
ASSIGN6		○	-	-	×	×	○
ASSIGN DIAL		-	-	-	-	-	-
N D	Auto/Manual	-	-	-	-	-	-
	Dial	-	-	-	-	-	-
	Push Auto ND	-	-	-	-	-	-
TALLY (*2)		×	×	×	×	×	×
COUNTER RESET (*2)		○	×	○	○	○	○
Daisy Chain		○	○	○	○	○	○

- *1) Use the joystick up/down for SHUTTER SELECT.
- *2) Command from MCX-500. No dedicated key on the RM-30BP.
- *3) Not so smooth.
- *4) Very slow move when in low speed zoom operation.
- *5) Work on RM-1BP Focus.
- *6) Work on RM-1BP REC Start/Stop.
- *7) No REC Tally on RM-30BP.
- *8) Need to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.
- *9) Need to press "WHT BAL" button on a camcorder first.