# Canon

# **HD Camcorder**

# EOS C300 EOS C300 PL











HDMI

# Important Usage Instructions

### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

### WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO DRIPPING OR SPLASHING.

### WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

### COPYRIGHT WARNING:

Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.

### **FCC NOTICE**

HD Camcorder, EOS C300 / EOS C300 PL Systems.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.

One Canon Park, Melville, NY 11747, USA Tel No. 1-800-OK-CANON (1-800-652-2666)

The Mains plug is used as the disconnect device. The Mains plug shall remain readily operable to disconnect the plug in case of an accident.

### CAUTION:

- Danger of explosion if the wrong type of batteries are attached. Use only the same type of batteries.
- Do not expose batteries or product to excessive heat such as the inside of a car under direct sunlight, fire, etc.

EOS C300 / EOS C300 PL / CA-940N / CG-940 identification plate is located on the bottom.







### CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

# **Important Safety Instructions**

4

In these safety instructions the word "apparatus" refers to the Canon HD Camcorder EOS C300 / EOS C300 PL and all its accessories.

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.

- A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CAN ICES-3(B)/NMB-3(B)

### **Trademark Acknowledgements**

- SD and SDHC Logos are trademarks of SD-3C, LLC.
- CompactFlash is a trademark of SanDisk Corporation.
- The CF Logo is a trademark of CompactFlash Association.
- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple, Mac OS, Final Cut Pro are trademarks of Apple Inc., registered in the U.S. and other countries.
- Avid, Media Composer and NewsCutter are trademarks or registered trademarks of Avid Technology, Inc. or its subsidiaries in the United States and/or other countries.
- Wi-Fi is a registered trademark of the Wi-Fi Alliance.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.
- This device incorporates exFAT technology licensed from Microsoft.
- ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT
   COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED
   MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2
   PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET,
   SUITE 300, DENVER, COLORADO 80206.

# Highlights of the EOS C300/C300 PL

The Canon HD Camcorder EOS C300/C300 PL has been designed to meet the demanding needs and highest expectations of industry professionals. The following are just some of the many features that will help turn your creative vision into reality.

### **HD Recording**

# Large Super 35mm CMOS sensor and DIGIC DV III image processor

The camcorder is equipped with a large Super 35mm CMOS sensor that captures video at an effective pixel count of 8.29 megapixels (3840x2160). Combined with the DIGIC DV III image processor, the camcorder offers a center resolution of 1,000 TV lines\*. Furthermore, thanks to its fast scanning speed, the camcorder produces spectacular video with true-to-life color reproduction while reducing noise and "rolling shutter" artifacts. \* Varies depending on the lens used.

### Interchangeable Lenses

Enjoy the freedom and creative versatility of using interchangeable lenses to achieve exactly the look you want. The EOS C300 features an EF lens mount, allowing you to use a huge variety of high-quality Canon EF lenses, including the new high-end Cinema lenses, as well as other lenses. The EOS C300 PL features a PL lens mount, allowing you to use a vast array of Super 35mm cinematography lenses commonly used in motion picture production.

### Superb HD video

The camcorder uses the MPEG-2 Long GOP codec. Your recordings are saved as Material eXchange Format (MXF) files, which are compatible with major non-linear editing (NLE) software.

Moreover, the camcorder offers you a whole array of options when it comes to the video configuration of your recordings. By controlling the type of recording (NTSC-compatible, PAL-compatible or true 24.00P), bit rate, resolution and frame rate of your recordings you can select a video configuration to suit your needs from a total of 29 different combinations.

### Operability and Adaptability

### Freely customizable compact design

At its most compact configuration, the camcorder offers convenient and hassle-free hand-held operation. Modular components, including the supplied handle unit, monitor unit and grip unit will let you expand and adapt the configuration to match your shooting conditions ( $\square$  32).

### Improved displays

The articulated monitor unit can be rotated 270°, allowing for easy monitoring and operation from the side of the camcorder. When using the viewfinder, its improved ergonomic design will ensure a tight and comfortable fit. Both the 10.1 cm (4 in.) LCD screen and the viewfinder have 100% coverage so you can always perfectly frame your shots. Additionally, the rear panel will provide a quick and convenient overview of the main shooting functions currently in use.

### Recording media

The camcorder records video and audio to CompactFlash (CF) cards. You can even make lengthy recordings without worry because the camcorder features two CF card slots. When one CF card becomes full, the recording will automatically continue on the other one without interruption when you use relay recording (\(\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\supers

### Supplied Canon XF Utility software

Managing your recordings is as simple as using the supplied **Canon XF Utility** software. You can transfer your recordings to your computer, where you can view and manage them. Using the supplied plugins, you can then use the recordings with major NLE software\*.

\* Refer to Saving Clips to a Computer ( 143) for details on compatible software.

### Versatile Artistic Expression

### Special recording modes

The special recording modes ( 106) give you more creative control over your recordings. You can create a slow motion or fast motion effect in your recordings, record a certain number of frames at a set interval (ideal for nature shots and other subjects with little movement) or record a certain number of frames every time you press a button (ideal for stop motion animation).

### Custom picture settings

With custom picture settings ( 114), you can enjoy unparalleled image control to deliver the "look" you want by adjusting parameters, such as gamma and sharpness. The custom picture settings can be recorded onto an SD card, which allows multiple camcorders to use the same settings, or embedded in the recording itself.

Canon Log gamma for spectacular dynamic range You can easily apply the [CP CINEMA Locked] preset settings, especially designed with professional cinematography in mind (CD 58). Using the Canon Log gamma, you can get recordings with amazing dynamic range, allowing you to realize in post-production the artistic vision you desire.

# Advanced Professional Features and Flexibility

### Pro-level connectivity

An industry-standard HD/SD SDI terminal ( 141) for uncompressed HD signal output, embedded audio and SMPTE time code (LTC) give the camcorder the functionality of professional broadcast cameras. Genlock synchronization ( 88), the TIME CODE terminal ( 89, 90) and SYNC OUT terminal allow the camcorder to be part of any multi-camera shooting setup.

### Customization

The camcorder features several customization options. You can assign often-used functions to assignable buttons (☐ 111) so that you can call up those functions with the press of a single button. You can also register frequently-used menu settings in an easy-to-access personal menu (My Menu, ☐ 30). Custom functions (☐ 123) and custom onscreen displays (☐ 123) give you even more freedom to control many aspects of the camcorder's operation. Save custom picture and menu settings to an SD card so that you can transfer your setting preferences to other C300 / C300 PL camcorders in order to use them in the same way.

### Other Functions

### C300 Automatic Functions (AF/AE)

With compatible EF lenses, you can automatically adjust the aperture or focus once with the press of a single button (\$\sum\_{1}\$ 71, 79) and even use continuous autofocus (\$\sum\_{1}\$ 80), making it easier to support a simple one-person operation.

### Remote operation via Wi-Fi

You can attach the optional WFT-E6 Wireless File Transmitter to the camcorder and operate it remotely via Wi-Fi using the Wi-Fi Remote application ( 49). The Wi-Fi Remote application lets you monitor the image through live view and remotely control the focus, shutter speed, ISO speed/gain and other settings.

### Audio

Sound is recorded as 2-channel linear PCM audio (16-bit/48 kHz). You can use the MIC terminal for microphones with a Ø 3.5 mm mini-stereo plug or the two XLR audio input terminals (with phantom power supply) when recording.

### Video scopes

Check the brightness of the image using the waveform monitor (\$\sum 99\$), the color of the image using the vectorscope (\$\sum 100\$), or the focus using the edge monitor (\$\sum 100\$).

### Added and improved functionality

Other functions include the option to add metadata (\$\sum 96\$) and, using the optional GP-E1 GPS Receiver, even geotagging data (\$\sum 103\$) to your recordings, and the Intelligent System-compatible battery pack (\$\sum 188\$).

6

### 1. Introduction 11

About this Manual 11

Conventions Used in this Manual 11

Supplied Accessories 13

Names of Parts 14

Monitor Unit 19

Grip Unit 21

Handle Unit 21

### 2. Preparations 23

### Preparing the Power Supply 23

Using a Battery Pack 23

Using a Household Power Outlet 25

Turning the Camcorder On and Off 26

### Date, Time and Language Settings 27

Setting the Date and Time 27

Changing the Time Zone 27

Displaying the Date and Time while Recording 28

Changing the Language 28

### Using the Menus 29

Selecting an Option from the Menu 29

Using the Customized Submenu (My Menu) 30

### Preparing the Camcorder 32

Preparing the Lens 32

Attaching and Removing the Monitor Unit 36

Using the Viewfinder 37

Using the LCD Panel 38

Adjusting the Viewfinder/LCD Screen 39

Using a Tripod 40

Removing and Attaching the Grip Unit 40

Attaching the Handle Unit 41

Attaching a Shoulder Strap 41

Removing and Attaching the Terminal Covers 42

### Preparing Recording Media 43

Inserting a CF Card 43

Checking the Status of the CF Card Slots 43

Removing a CF card 44

Inserting and Removing an SD Card 44

Initializing the Recording Media 45

Switching Between the CF Card Slots 45

Selecting the CF Card Recording Method 46

Checking the Available Recording Time for CF

Cards 47

Recovering Data on the CF Card 47

Adjusting the Black Balance 48

Remote Operation Via the Wi-Fi Remote Application 49

Preparing the System for Wi-Fi Remote 49

### 3. Recording 51

### Recording Video 51

Preparing to Record 51

Recording 51

Remote Operation Using Wi-Fi Remote 54

Onscreen Displays 55

Rear Panel Displays 57

Canon Log Gamma and CINEMA Preset 58

### Video Configuration: Type of Recording, Bit Rate,

Resolution and Frame Rate 59

# Changing Main Camera Functions with the FUNC.

Button 61

Using the Direct Setting Mode 61

### Shutter Speed 62

Changing the Shutter Speed Mode and Value 63

Remote Operation Using Wi-Fi Remote 63

Flicker Reduction 64

### ISO Speed/Gain 65

Changing the ISO Speed or Gain Value 65

Using the Control Dial 66

Remote Operation Using Wi-Fi Remote 67

### ND Filter 68

Using the ND Filter 68

Remote Operation Using Wi-Fi Remote 68

### C300 Adjusting the Aperture 69

Manual Aperture 69

Momentary Automatic Aperture - Push Auto

Iris 71

Automatic Aperture 72

Exposure Compensation - AE Shift 72

Light Metering Mode 73

### White Balance 74

Setting the White Balance 74

Remote Operation Using Wi-Fi Remote 75

### Adjusting the Focus 77

Manual Focus 77

C300 One-Shot AF 79

G300 Continuous AF 80

Onscreen Markers and Zebra Patterns 82	Recording GPS Information (Geotagging) 103
Displaying Onscreen Markers 82	Reviewing a Recording 105
Displaying Zebra Patterns 83	Special Recording Modes 106
Setting the Time Code 84	Interval Recording Mode 106
Selecting the Running Mode 84	Frame Recording Mode 107
Selecting Drop or Non-Drop Frame 85	Slow & Fast Motion Mode 108
Putting the Time Code Display on Hold 86	Pre-recording Mode 110
Setting the User Bit 87	4.0
Synchronizing with an External Device 88	4. Customization 111
Connecting an External Device 88	Assignable Buttons 111
Reference Video Signal Input (Genlock	Changing the Assigned Function 111
Synchronization) 88	Using an Assignable Button 112
Time Code Signal Input 89	Custom Picture Settings 114
Reference Video Signal Output 90	Selecting Custom Picture Files 114
Time Code Signal Output 90	Editing a Custom Picture File's Settings 115
Recording Audio 91	Renaming Custom Picture Files 115
Connecting an External Microphone or External	Protecting Custom Picture Files 115
Audio Input Source to the Camcorder 91	Transferring Custom Picture Files 116
Selecting the Audio Input from the XLR Terminals 92	Embedding Custom Picture Settings in a Recording 117
Adjusting the Audio Level from the XLR	Available Custom Picture Settings 117
Terminals 93	Customizing Functions and Onscreen
Adjusting the Audio Level from the MIC	Displays 123
Terminal 94	Customizing Functions 123
Monitoring the Audio with Headphones 95	Customizing Onscreen Displays 123
Selecting the Audio Channel 95	Saving and Loading Camera Settings 124
Using Metadata 96	Saving Camera Settings to an SD Card 124
Setting a User Memo Created with Canon XF Utility 96	Loading Camera Settings from an SD Card 124
Setting a User Memo Using Wi-Fi Remote 97	5. Playback 125
Colors Bars/Audio Reference Signal 98	Playback 125
Recording Color Bars 98	Clip Index Screen 125
Recording an Audio Reference Signal 98	Playing Back Clips 127
Video Scopes 99	Onscreen Displays 128
Displaying a Video Scope 99	Playback Controls 129
Configuring the Waveform Monitor 99	Adjusting the Volume 129
Configuring the Vectorscope 100	
Configuring the Edge Monitor 100	
Adding Marks while Recording 101	
Adding Shot Marks while Recording 101	
Remote Operation Using Wi-Fi Remote 101	
Adding an <b>OK</b> Mark or <b>W</b> Mark to the Last Clip	

Recorded 102

Remote Operation Using Wi-Fi Remote 102

### 111

### Clip Operations 130

Using the Clip Menu 131

Displaying Clip Information 131

Adding **M** Marks or **M** Marks 132

Deleting **™** Marks or **™** Marks 132

Copying Clips 133

Deleting Clips 134

Deleting the User Memo and GPS

Information 134

Copying a Custom Picture File Embedded in a Clip 134

Displaying an Index Screen of Shot Marks 135 Displaying a Frame Index Screen of a Single

Clip 136

Adding Shot Marks 136

Deleting Shot Marks 137

Changing a Clip's Thumbnail 137

### 6. External Connections 139

### Video Output Configuration 139

Video Output Configuration by Terminal 139

### Connecting to an External Monitor 140

Connection Diagram 140

Using the HD/SD SDI Terminal 141

Using the HDMI OUT Terminal 141

Using the SYNC OUT Terminal 141

SD Output 142

Superimposing Onscreen Displays to Appear on an External Monitor 142

### Saving Clips to a Computer 143

System Requirements 143

Installing and Uninstalling Canon XF Utility

(Windows) 144

Installing and Uninstalling Canon XF Utility

(Mac OS) 146

Viewing the Software Instruction Manuals 149

### 7. Photos 151

### Taking Photos 151

Taking Photos in CAMERA Mode 151

Capturing Photos in MEDIA Mode 151

### Photo Playback 153

Displaying the [Photos] Index Screen 153

Viewing Photos 153

### Photo Operations 154

Using the Photo Menu 154

Deleting Photos 154

Protecting Photos 155

Copying Custom Picture Files 156

Photo Numbering 157

### 8. Additional Information 159

Menu Options 159

Displaying the Status Screens 169

Troubleshooting 176

List of Messages 179

Handling Precautions 182

Maintenance/Others 185

Optional Accessories 187

Specifications 192

Index 197

### 11

### **About this Manual**

Thank you for purchasing the Canon EOS C300/C300 PL. Please read this manual carefully before you use the camcorder and retain it for future reference. Should the camcorder fail to operate correctly, refer to *Troubleshooting* ( 176).


### Conventions Used in this Manual

- IMPORTANT: Precautions related to the camcorder's operation.
- (i) NOTES: Additional topics that complement the basic operating procedures.
- D: Reference page number.
- C300: Text that applies only to the model shown in the icon.
- The following terms are used in this manual.
  - "Screen" refers to the LCD screen and the viewfinder screen.
  - "CF card" refers to a CompactFlash (CF) card.
  - "SD card" refers to an SD or SDHC memory card.
  - "Recording media" refers to CF cards and SD cards.
- Photographs in the manual are simulated pictures taken with a still camera. Some screenshots have been altered to make them easier to read.
- Illustrations in the manual show the Canon EOS C300 camcorder with a Canon EF 50mm f/1.4 USM lens attached.

The arrow is used to abbreviate menu selections. For a detailed explanation on how to use the menus, refer to *Using the Menus* (\$\sum 29\$). For a concise summary of all available menu options and settings, refer to the appendix *Menu Options* (\$\sum 159\$).

### Operating modes

CAMERA indicates that a function is available in the operating mode indicated and CAMERA indicates that the function is not available. For a detailed explanation, refer to *Turning the Camcorder On and Off* ( 26).

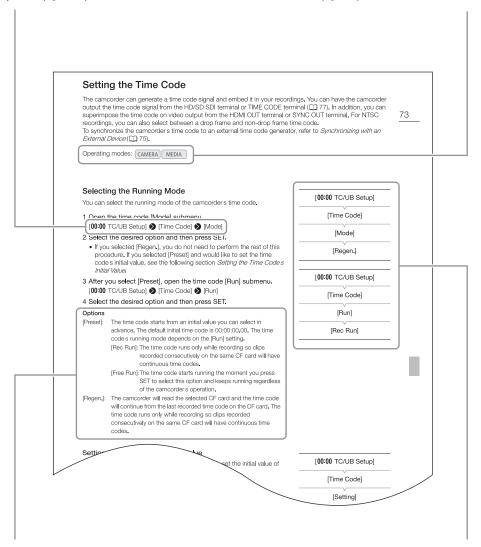


When a procedure requires selecting an option, the available options are listed within or after the procedure. Brackets [] are used to refer to menu options as they are displayed on screen.

When a function requires the use of the menu, the quick reference shows the submenus and, when applicable, the default setting for the menu item. The example illustration indicates that you can find the function by selecting the [00:00 TC/UB Setup] menu and then the [Time Code] menu item.

# **Supplied Accessories**

The following accessories are supplied with the camcorder.

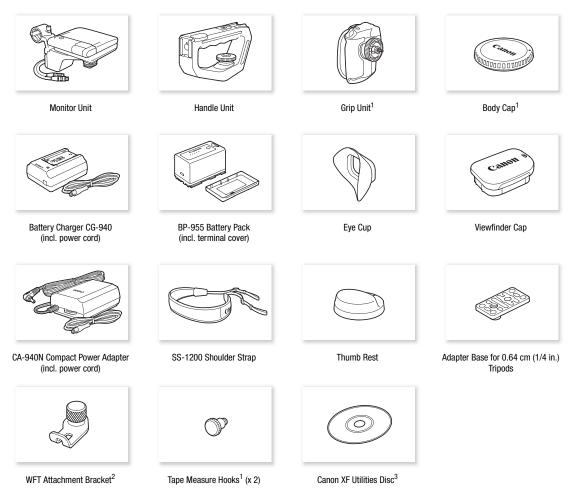


<sup>&</sup>lt;sup>1</sup> Comes pre-attached to the camcorder.

<sup>2</sup> Used to secure the optional WFT-E6 Wireless File Transmitter or optional GP-E1 GPS Receiver, when it is attached to the camcorder.


<sup>&</sup>lt;sup>3</sup> The Canon XF Utilities Disc includes software for saving and managing clips on a computer. For details on installing the software, refer to Saving Clips to a Computer ( 143). For more information on the functions, refer to the 'Canon XF Utility Instruction Manual' (PDF file) after you install the software.

### Names of Parts

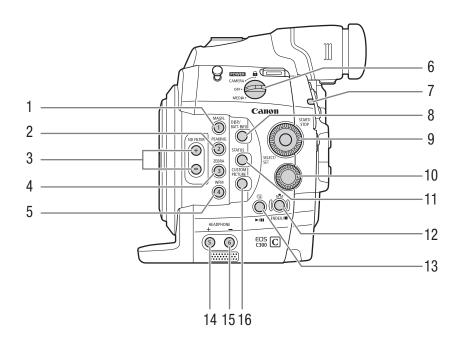


- 1 MAGN. (magnification) button ( 79)/ Assignable button 1 ( 111)
- 2 PEAKING button ( 78) / Assignable button 2 ( 111)
- 3 ND FILTER +/- buttons (☐ 68)
- 4 ZEBRA button (\$\sum 83)/ Assignable button 3 (\$\sum 111)
- 5 WFM (waveform monitor) button (☐ 99)/ Assignable button 4 (☐ 111)
- 6 **POWER** switch ( $\square$  26)
- 7 Tally lamp (💢 51)
- 8 DISP. (display) button (\$\sum 55,128)/BATT. INFO (battery information) button (\$\sum 24\$)
- 9 SELECT dial/SET button (\$\sum 29\$)

- 10 Control dial (\$\sum 66, 69)\$
- 11 STATUS button (XX 169)
- 12 ♣ (white balance adjustment) button (☐ 74)/ INDEX button (☐ 126)/■ (stop) button (☐ 127)
- 13 **⑤** (review recording) button (⋒ 105)/▶/**II** (play/pause) button (⋒ 127)
- 14 HEADPHONE + button (☐ 129)/Assignable button 5 (☐ 111)
- 15 HEADPHONE button (☐ 129)/Assignable button 6 (☐ 111)
- 16 CUSTOM PICTURE button (\$\square\$ 114)

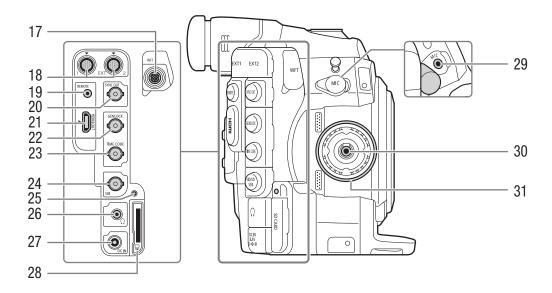


- 17 WFT terminal (\$\sum 49\$, 103)
- 18 EXT (external signal) terminals 1 and 2 ( 36)
- 19 REMOTE terminal For connecting commercially available remote controllers.
- 20 SYNC OUT (synchronizing signal output) terminal (\$\superscript{\Omega}\$ 90,141)
- 21 HDMI OUT terminal ( 141)
- 22 GENLOCK terminal (\$\square\$ 88)
- 23 TIME CODE terminal (\$\subseteq\$ 89, 90)

- 24 HD/SD SDI terminal ( 141)
- 25 SD card access indicator ( 44)
- 26 (headphone) terminal (\$\sum 95\$)
- 27 DC IN terminal (\$\sum 25\$)
- 28 SD card slot (\$\sum 44\$)
- 29 MIC (microphone) terminal (\$\sum 91\$)
- 30 Grip Unit connection terminal (\$\sum 40\$)
- 31 Grip Unit attachment thread ( 40)

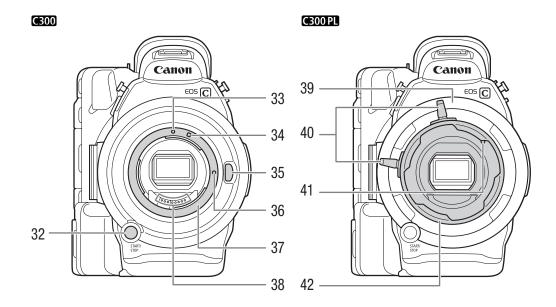


- 32 START/STOP button (\$\sum 51)\$
- **C300** EF Lens mount index (**QQ** 32)
- **C300** EF-S Lens mount index (<u>)</u> 32)
- 35 C300 Lens release button ( $\bigcirc$  32)
- **C300** EF Lens lock pin ( 32)
- **C300** EF Lens mount (**\(\iiii\)** 32)
- **C300** EF Lens contacts (**QQ** 32)

- **C300PL** PL Lens mount (<u>)</u> 36)
- 40 C300PL Bayonet ring handles (\$\sum 36\$)
- **C300 PL** PL Lens index pin (<u>)</u> 36)
- **C300 PL** Bayonet ring (**\( \)** 36)

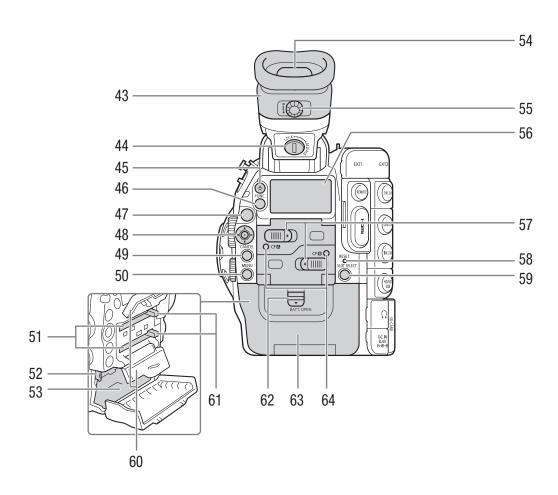


- 43 Viewfinder unit
- 44 Viewfinder unit LOCK/RELEASE screw ( 185)
- 45 🌣 (rear panel's backlight) button (💢 57)
- 46 FUNC. (main functions) button (\$\sum 61\$)
- 47 START/STOP button (\$\sum\_51\$)
- 48 Joystick ( 29)/SET button ( 29)
- 49 CANCEL button ( 29)
- 50 MENU button ( 29)
- 51 CF card slots A (top) and B (bottom) ( 43)
- 52 RELEASE (battery release) latch ( 24)
- 53 Battery compartment (\$\sum 24\$)
- 54 Viewfinder (\$\sum 37, 39)
- 55 Dioptric adjustment dial (\$\square\$ 38)
- 56 Rear panel (<u></u> 57)

- 57 CF card slot cover switches for CF card slots A (top) and B (bottom) ( 43)
- 58 RESET button ( 178)
- 59 SLOT SELECT (CF card slot selection) button (☐ 45, 126)
- 60 CF card slot covers for CF card slots A (top) and B (bottom)
- 61 CF card release buttons for CF card slots A (top) and B (bottom) ( 44)
- 62 BATT. OPEN (open battery compartment) switch ( 24)
- 63 Battery compartment cover ( 24)
- 64 CFA (CF card slot A) and CFB (CF card slot B) access indicators ( 43)

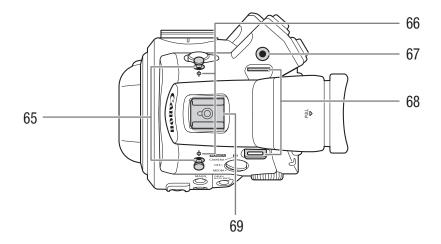

- 65 Tape measure hooks
  Use the hooks to accurately measure the distance from the focal plane.
- 66 φ Focal plane marks
- 67 Socket for the WFT Attachment Bracket (\$\square\$ 49)
- 68 Strap mounts (QQ 41)


69 Accessory shoe with mounting hole for 0.64 cm (1/4 in.) screws
For attaching accessories such as the optional VL-10Li II Battery Video Light.

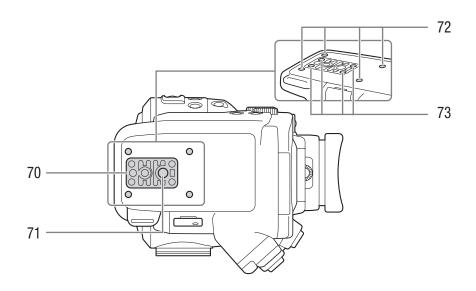

- 70 TB-1 Tripod Base for tripods with 0.95 cm (3/8 in.) screws ( 40)
- 71 Tripod socket (\$\sum 40\$)


- 72 Attachment sockets for the optional TA-100 Tripod Adapter ( 140)
- 73 Tripod base screws (\$\sum 40\$)

### **Monitor Unit**

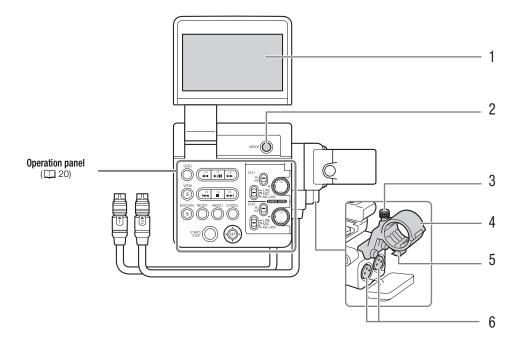

- 1 LCD panel
- 2 MIRROR button (\$\square\$ 38)
- 3 Microphone lock screw ( 91)
- 4 Microphone holder (\$\square\$ 91)
- 5 Microphone cable clamp (\$\sum 91\$)
- 6 XLR terminals CH1 (right) and CH2 (left) ( 91)


### Operation panel

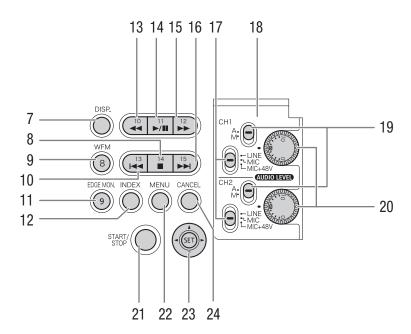

- 7 DISP. (display) button (\$\sum\_{55}\$, 128)
- 8 (stop) button (☐ 127)/ Assignable button 14 (☐ 111)
- 9 WFM (waveform monitor) button (☐ 99)/ Assignable button 8 (☐ 111)
- 10 ◄ (skip backward) button (☐ 129)/ Assignable button 13 (☐ 111)
- 11 EDGE MON. (edge monitor) button (\$\square\$ 99)/ Assignable button 9 (\$\square\$ 111)
- 12 INDEX button (126)
- 13 ◀◀ (fast reverse playback) button (☐ 129)/ Assignable button 10 (☐ 111)
- 14 ►/II (play/pause) button (☐ 127)/ Assignable button 11 (☐ 111)
- 15 ►► (fast playback) button (☐ 129)/ Assignable button 12 (☐ 111)

- 16 ►►I (skip forward) button (☐ 129)/ Assignable button 15 (☐ 111)
- 17 XLR terminal switches for CH1 (top) and CH2 (bottom) (\$\sum 92\$)
- 18 Protective cover for XLR audio controls ( 93)
- 19 AUDIO LEVED switches for CH1 (top) and CH2 (bottom) ( 93)
- 20 AUDIO LEVEL dials for CH1 (top) and CH2 (bottom) ( 93)
- 21 START/STOP button (\$\square\$ 51)
- 22 MENU button (<u> 29</u>)
- 23 Joystick ( 29)/SET button ( 29)
- 24 CANCEL button (\$\sum 29\$)


# **Grip Unit**

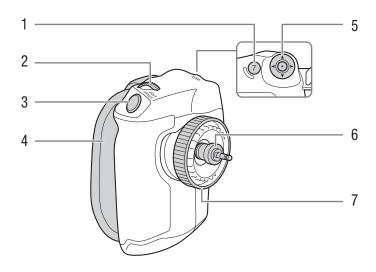

- 1 MAGN. (magnification) button ( 79)/ Assignable button 7 ( 111)
- 2 Control dial (\$\sum 66, 69)\$
- 3 START/STOP button (\$\square\$ 51)

- 4 Grip belt (<u></u> 41)
- 5 Joystick ( 29)/SET button ( 29)
- 6 Connection plug ( 40)
- 7 Lock screw (\$\sum 40\$)

### **Handle Unit**

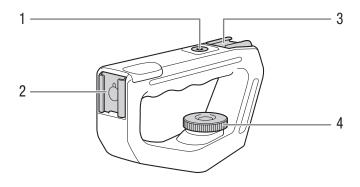

- 1 Mounting hole for 0.64 cm (1/4 in.) screws
- 2 Front accessory shoe

- 3 Top accessory shoe
- 4 Lock screw (\$\sum 41\$)

Names of Parts

2

# **Preparing the Power Supply**

You can power the camcorder using a battery pack or directly using the compact power adapter. If you connect the compact power adapter to the camcorder while a battery pack is attached, the camcorder will draw power from the power outlet.

Charge battery packs before use. For approximate charging times and recording/playback times with a fully charged battery pack, refer to *Charging Times* ( 188) and *Recording and Playback Times* ( 188).

### Using a Battery Pack

You can power the camcorder using the supplied BP-955 or an optional BP-950G, BP-970G or BP-975 Battery Pack\*. All four are compatible with Intelligent System, meaning that you can check the remaining battery time.

\* The optional BP-970G / BP-975 Battery Pack was not originally designed for use with this camcorder. Because of its size, you will not be able to close the battery compartment cover when using one (

183).

### Charging the Battery Pack

Charge battery packs using the supplied CG-940 Battery Charger. Before charging, remove the terminal cover of the battery pack.

- 1 Connect the power cord to the battery charger.
- 2 Plug the power cord into a power outlet.
- 3 Attach the battery pack to the battery charger.
  - Press lightly and slide the battery pack in the direction of the arrow until it clicks.
  - The CHARGE indicator starts flashing and also indicates the battery pack's approximate charge. The indicator will stay on when charging has completed.




- 4 When charging has completed, remove the battery pack from the battery charger.
- 5 Unplug the power cord from the power outlet and disconnect it from the battery charger.



• Do not connect to the battery charger any product that is not expressly recommended for use with this camcorder.


# (i) NOTES

- We recommend charging the battery pack in temperatures between 10 °C and 30 °C (50 °F and 86 °F). Outside the temperature range of 0 °C to 40 °C (32 °F to 104 °F), charging will not start.
- If there is a malfunction with the battery charger or battery pack, the charge indicator will go out and charging will stop.
- For handling precautions regarding the battery pack, refer to *Battery Pack* (1122).
- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- We recommend that you prepare battery packs to last 2 to 3 times longer than you think you might need.

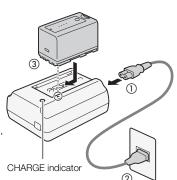


### Attaching the Battery Pack

- 1 Set the **POWER** switch to OFF.
- 2 Slide the BATT. OPEN switch in the direction of the arrow and open the battery compartment cover.
- 3 Insert the battery pack all the way into the compartment as shown in the illustration and press it gently toward the left until it clicks.
- 4 Close the battery compartment cover.

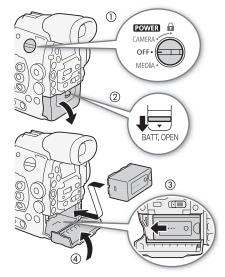

### Removing the Battery Pack

- 1 Set the **POWER** switch to OFF.
- 2 Slide the BATT. OPEN switch in the direction of the arrow and open the battery compartment cover.
- 3 Holding down the RELEASE latch, slide the battery pack toward the right and then pull it out.
- 4 Close the battery compartment cover.

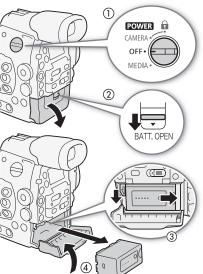


### Checking the Remaining Battery Charge

When the camcorder is turned on, you can check the remaining battery charge by looking at any recording/playback screen or the [Battery/Hour Meter] status screen ( 173). When the camcorder is turned off, use one of the following methods to check the approximate remaining battery charge.


Press the CHECK button on the battery pack. An indicator will light for approximately 3 seconds and show the approximate remaining battery charge.

*	0	0	0	0-25%
*	*	0	0	26-50%
*	*	*	0	51-75%
	*		$\equiv$	76-100%

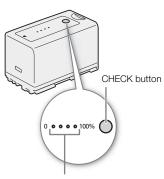

Battery charge indicator

Press the BATT. INFO button to display the remaining battery charge for 5 seconds. Depending on the battery life, the battery information may not be displayed.



# (i) NOTES

- The first time you use a battery pack, fully charge it and then use the camcorder until the battery pack is completely exhausted. Doing so will ensure that the remaining recording time will be displayed accurately.
- Repeatedly charging and discharging the battery pack will eventually shorten its battery life. You can check the battery life on the [Battery/Hour Meter] status screen ( 173) or the battery information screen (press the BATT. INFO button while the camcorder is turned off). Fully charging the battery pack and then discharging it will give you a more accurate reading.
- USA and Canada only: The Lithium ion/polymer battery that powers the product is recyclable.
   Please call 1-800-8-BATTERY for information on how to recycle this battery.




### Using a Household Power Outlet

You can also power the camcorder directly from a power outlet using the supplied CA-940N Compact Power Adapter.

- 1 Set the **POWER** switch to OFF.
- 2 Connect the compact power adapter's DC plug to the DC IN terminal on the camcorder.
- 3 Connect the power cord to the compact power adapter and plug it into a power outlet.
- **M**IMPORTANT
- Turn off the camcorder before connecting or disconnecting the compact power adapter.



 When using the camcorder with a household power outlet, you can change the battery pack while the power is on.

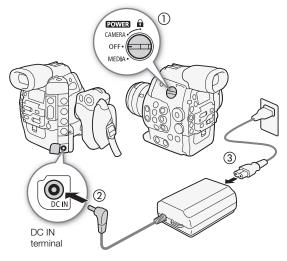

# Turning the Camcorder On and Off


The camcorder has two operating modes: CAMERA (CAMERA) mode for making recordings and MEDIA (MEDIA) mode for playing back recordings. Select the operating mode using the **POWER** switch.

### To turn on the camcorder

Set the **POWER** switch to CAMERA for CAMERA mode or MEDIA for MEDIA mode.





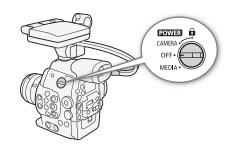

To turn off the camcorder Set the **POWER** switch to OFF.



26

# Date, Time and Language Settings

### Setting the Date and Time

You will need to set the date and time of the camcorder before you can start using it. When the camcorder's clock is not set, the [Date/Time] screen will appear automatically with the first field selected (month or day, depending on the country/region of purchase).

Operating modes: CAMERA MEDIA




- 1 Push the joystick up/down or turn the SELECT dial to change the month/day then move (▶) to the next field.
  - To move to the next field you can also press SET (press the joystick itself or press the SET button).
- 2 Change the rest of the fields in the same way.
- 3 Select (▶) [Set] and then press SET to start the clock and close the screen.
- (i) NOTES
- You can change the date format and the clock format (12/24 hours) with the [► Other Functions]
   Set Clock]
   Date Format] setting.
- When the built-in rechargeable lithium battery is exhausted, the date and time setting may be lost. In such case, recharge the built-in lithium battery ( 184) and set the time zone, date and time again.
- Using the optional GP-E1 GPS Receiver, you can have the camcorder adjust settings automatically according to the date/time information received from the GPS signal (\imp 103).

### Changing the Time Zone

Change the time zone to match the time zone of your location. The default setting is [UTC-05:00 New York] or [UTC+01:00 Central Europe], depending on the country/region of purchase. The time zones are based on Coordinated Universal Time (UTC).

Operating modes: CAMERA MEDIA

- 1 Press the MENU button.
- 2 Push the joystick up/down or turn the SELECT dial to select [ Other Functions].
- 3 Select [Time Zone] in a similar fashion.
- 4 Push the joystick up/down or turn the SELECT dial to change the time zone.
- 5 Press SET to set the time zone and then press the MENU button to close the menu.

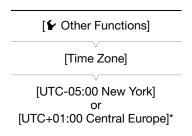

<sup>\*</sup> Depending on the country/region of purchase.

You can display the date and time on the screen.

Operating modes: CAMERA MEDIA

1 Press the MENU button.

- 2 Push the joystick up/down or turn the SELECT dial to select [ LCD/VF Setup].
- 3 Select [Custom Display 2] and then [Date/Time] in a similar fashion.
- 4 Push the joystick up/down or turn the SELECT dial to select the information to display.
  - Select [Off] to record without displaying the date and time.
- 5 Press SET and then press the MENU button to close the menu.
  - The selected date/time display will appear at the bottom of the screen.

### Changing the Language

The default language of the camcorder is English. You can change it to German, Spanish, French, Italian, Polish, Russian, Simplified Chinese, Korean or Japanese. Please note that some settings and screens will be displayed in English, regardless of the language setting.

[Language ]

[ LCD/VF Setup]

[Custom Display 2]

[Date/Time]

[Off]

Operating modes: CAMERA MEDIA


- 1 Press the MENU button.
- 2 Push the joystick up/down or turn the SELECT dial to select [ Other Functions].
- 3 Select [Language 🗐] in a similar fashion.
- 4 Push the joystick up/down or turn the SELECT dial to select a language.
- 5 Press SET to change the language and then press the MENU button to close the menu.

28

# Using the Menus

In CAMERA mode, many of the camcorder's functions can be adjusted from the menu for general settings, which opens after pressing the MENU button. You can also register frequently used menu settings in a customized submenu (My Menu) for easy access. In MEDIA mode, press the MENU button to open the menu for general settings or SET to open the clip menu for clip operations. For details about the available menu options and settings, refer to Menu Options (11) 159).

Operating modes: CAMERA MEDIA

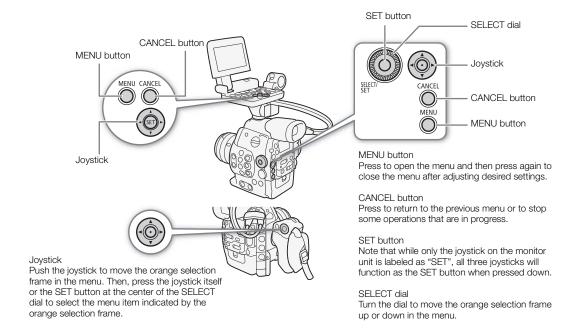

## Selecting an Option from the Menu

The following is a step-by-step explanation of how to select an option from the menu. In the procedures throughout the rest of this manual, opening and closing the menu is assumed and not included in the procedure.

### 1 Press the MENU button.

- The menu opens with the orange selection frame indicating the menu item that was selected the previous time the menu was closed (unless the camcorder was turned off).
- 2 Push the joystick up/down or turn the SELECT dial to select the desired submenu.
- 3 Push the joystick right or press SET.
  - The orange selection frame will appear on a menu item in the submenu.
  - Press the CANCEL button, push the joystick left, or select [5] to return to the previous submenu.
- 4 Push the joystick up/down or turn the SELECT dial to select the desired menu item.
  - If a submenu contains many menu items, a scroll bar will appear on the right side of the submenu indicating that you must scroll up or down to see other menu items.
  - A mark next to a menu item indicates another submenu. Repeat steps 3 and 4.
- 5 Push the joystick right or press SET.

- The orange selection frame will appear on a setting option.
- Press the CANCEL button to return to the previous submenu.
- 6 Push the joystick up/down or turn the SELECT dial to select the desired setting option and then press SET.
  - Depending on the menu item, additional selections may be necessary.
- 7 Press the MENU button to close the menu.
- i NOTES
- Unavailable items may appear grayed out.
- Pressing the MENU button at any time closes the menu.

### Using the Customized Submenu (My Menu)

You can register up to 14 frequently used menu settings under the My Menu submenu for easy access. Furthermore, if you set an assignable button to [My Menu] ( 111), you can press the button to access your registered menu settings even faster and more easily.

# Adding Menu Settings 1 Open the My Menu [Register] screen. [★ My Menu] ♠ [Edit] ♠ [Register] • The menu will change to blue to indicate you are selecting menu settings to add to the My Menu submenu. [Register]

2 Navigate the menus to find the menu setting you want to add and then press SET.

Press the CANCEL button to cancel the operation and return to the

3 Select [OK] and then press SET twice.

regular menu.

• The menu setting you registered will now appear under the My Menu submenu.

Rearranging Menu Settings	[★ My Menu]
1 Open the My Menu [Move] screen.	[ A wy wend]
[★ My Menu] ♦ [Edit] ♦ [Move]	[Edit]
2 Push the joystick up/down or turn the SELECT dial to select the setting you want to move and then press SET.	[Move]
<ul> <li>An orange \$\\$\ \text{icon will appear next to the setting you selected to move.}</li> </ul>	

3 Push the joystick up/down or turn the SELECT dial to move the setting to the desired position and then press SET.

### 


### Resetting the My Menu Submenu

- 1 Reset all the menu settings registered to the My Menu submenu.
  - [★ My Menu] ♦ [Edit] ♦ [Reset All]
- 2 Select [OK] and then press SET twice.



# **Preparing the Camcorder**

This section outlines the basic preparations for the camcorder such as attaching a lens and attaching the modular units to the camcorder: monitor unit, grip unit, handle unit, thumb rest, eye cup, etc. Your camcorder is nothing if not versatile and you can choose the configuration that best fits your needs and shooting conditions.

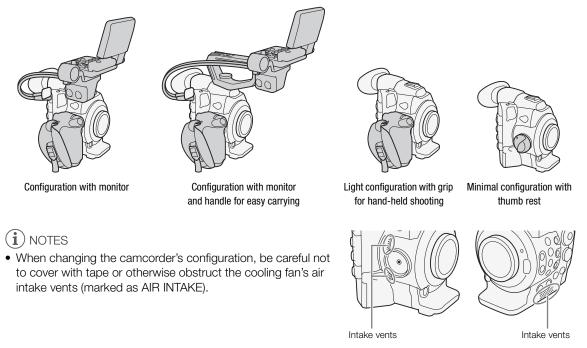

### Preparing the Lens

As much as possible, attach and remove the lens quickly and in a clean environment free of dust. Refer also to the instruction manual of the lens used.



### **IMPORTANT**

 When attaching/removing a lens, avoid direct sunlight or strong light sources. Also, be careful not to drop the camcorder or lens.



- Be careful not touch the lens mount or any components inside the lens mount area.
- Replace the body cap to the lens mount immediately after removing the lens from the camcorder.
- Keep the body cap clean and free from dust or dirt particles.

3

### C300 Attaching an EF Lens

- 1 Set the **POWER** switch to OFF.
- 2 Remove the body cap from the camcorder and any dust caps from the lens.
- 3 Attach the lens to the camcorder and turn the lens in the direction of the arrow until it clicks in place.
  - EF lenses: Align the red mark on the lens with the red EF Lens mount index mark on the camcorder.
  - EF-S lenses: Align the white mark on the lens with the white EF-S Lens mount index mark on the camcorder.

# (i) NOTES


 Turning on the image stabilization function of an EF lens may reduce the effective usage time of the battery pack. When image stabilization is not necessary, for example if the camcorder is fixed to a tripod, it is recommended to turn it off.

(2)

- Depending on the lens used, you may experience one or more of the following limitations.
  - The lens model name may be shortened when displayed on the screen.
  - You may not be able to focus manually when the focus mode switch is set to AF.
  - You may not be able to use the focus preset function (super telephoto lenses).
  - The power zoom function of lenses equipped with this function cannot be used.

### © Removing an EF Lens

- 1 Set the **POWER** switch to OFF.
- 2 Hold down the lens release button and turn the lens all the way in the direction of the arrow until it stops.
- 3 Remove the lens and replace the body cap to the camcorder and the dust cap to the lens.

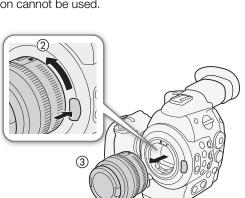

### Changing a Lens While Maintaining the Time Code's Progress

If you set an assignable button to [LENS EXCHANGE] ( 111), you can press the button to change the lens while the camcorder is turned on and the time code is running.

Operating modes: CAMERA MEDIA

- 1 Set an assignable button to [LENS EXCHANGE] ( 111).
- 2 Press and hold the assignable button for 1 second.
  - The camcorder enters lens exchange mode and the tally lamp will flash twice every 2 seconds. During this time, the time code will continue running.
  - While the camcorder is in lens exchange mode, only the POWER switch
    and the selected assignable button can be operated. Also, the LCD screen will turn off and output from
    the video terminals will be put on hold.
- 3 Remove the lens attached to the camcorder and attach the new lens.
  - Do not set the **POWER** switch to OFF.
- 4 Press the assignable button again.
  - The camcorder exits lens exchange mode.
  - Opening a CF card slot cover or removing the SD card will also cause the camcorder to exit lens exchange mode.

### **C300** Peripheral Illumination Correction

Depending on the characteristics of the lens used, the image around the corners of the picture may seem darker due to light fall-off or peripheral illumination drop. If the camcorder has correction data available for the EF lens used, it can apply this correction data to compensate as necessary.

Operating modes: CAMERA MEDIA

- 1 Attach the lens you want to use.
- 2 Open the peripheral illumination correction screen.


[Periph. Illum. Corr.]

- If correction data is available, the lens model name will appear on the screen.
- If correction data is not available, [Periph. Illum. Corr.] will appear grayed out. Visit your local Canon Web site and check if there is correction data available for the lens you are using. If so, download the necessary update package and upgrade the camcorder's firmware following the instructions supplied therein.
- 3 Select [On] and then press SET.
  - As long as [► Camera Setup] (Periph. Illum. Corr.] is set to [On], the camcorder will automatically apply
    the appropriate correction data.



### About lens correction data:

- The camcorder contains a register of correction data for compatible lenses that were available at the time the camcorder went on sale. Correction data for future lenses will be made available as part of the regular updates released for the camcorder's firmware. For more details, visit your local Canon Web site.
- Depending on the recording conditions, noise may appear in the periphery of the image as a result of the correction.
- The level of correction will be lower for lenses that cannot provide distance information.



- The level of correction will be lower the higher the ISO speed/gain setting used.
- No correction will be applied when correction data is not available for the lens attached.
- When using EF-S lenses, peripheral illumination fall-off may be more pronounced.
- When using non-Canon lenses, peripheral illumination will not be corrected. Even if the [• Camera Setup]
  - Periph. Illum. Corr.] setting is available (not grayed out), it is recommended to set it to [Off].

### (300) Updating the Firmware of an EF Lens

You can update the lens firmware of the EF lens attached to the camcorder. For details about firmware updates for EF lenses, visit your local Canon Web site.

Operating modes: CAMERA

CAMERA MEDIA

1 Download the lens firmware update file from the Canon Web site and save it on an SD card. Insert the SD card containing the lens firmware update into the SD card slot. [**∳** Other Functions]

[Lens Firmware]

2 Attach to the camcorder the lens you wish to update and open the [Lens Firmware] submenu.

[ ✓ Other Functions] ✓ [Lens Firmware]

- The current lens firmware version will appear on the screen.
- If the [Lens Firmware] submenu is grayed out, the attached lens may not support firmware updates or the SD card used may not contain a valid lens firmware file. Check the lens and SD card and repeat the procedure from the beginning.
- 3 Select [OK] and then press SET.
- 4 Select the lens firmware file (file extension .LFU) and then press SET.
- 5 Select [OK] and then press SET.
  - The lens firmware will be updated. Once in progress, the lens firmware update cannot be canceled.
- 6 When the confirmation message appears, press SET.

# IMPORTANT


- Be sure to observe the following precautions while the lens firmware is being updated.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not remove the lens.
  - Do not operate any buttons or controls on the camcorder.
  - Do not open the SD card compartment cover and do not remove the SD card.

# (i) NOTES

- The lens firmware cannot be updated while pre-recording is activated.
- We recommend that you power the camcorder from a household power outlet using the compact power adapter or use a sufficiently charged battery pack.
- When using an optional EF Extender, remove the Extender before performing the procedure.

### C300PL Attaching a PL Lens


- 1 Set the **POWER** switch to OFF.
- 2 Hold a bayonet ring handle and turn the bayonet ring counter-clockwise to remove the body cap and remove any dust caps from the lens.
- 3 Attach the lens to the camcorder aligning a groove on the lens with the PL lens index pin on the mount.
- 4 Turn the bayonet ring clockwise to fix the lens in place.

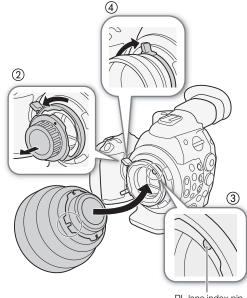

### PL lens index pin

### **C300PL** Removing a PL Lens

- 1 Turn the bayonet ring counter-clockwise.
- 2 Remove the lens and replace the body cap to the camera and the dust cap to the lens.

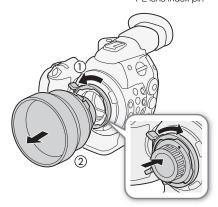


### Attaching and Removing the Monitor Unit

You can attach the monitor unit to the accessory shoe on the camcorder or that on the handle unit. Further ahead you will find details about using the LCD panel and adjusting the LCD screen ( 38).

### Attaching the Monitor Unit

- 1 Set the **POWER** switch to OFF.
- 2 Insert the attachment base of the monitor unit to the camcorder's or the handle unit's accessory shoe.
  - Use the attachment base at the bottom of the monitor unit to attach it directly to the camcorder. Use the attachment base at the back of the monitor unit to attach it to the accessory shoe on the front of the handle unit.
- 3 Tighten the monitor unit's lock screw.
- 4 Connect the monitor unit's cables to the camcorder.
  - Align the ▼ marks on the cables and terminals. Then. connect cable number 1 (with the white line) to the camcorder's EXT 1 terminal and cable number 2 to the EXT 2 terminal.

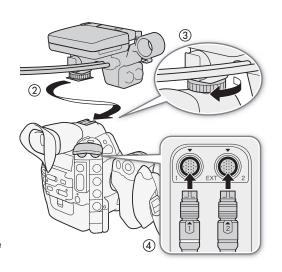

#### Removing the Monitor Unit

- 1 Set the **POWER** switch to OFF.
- 2 Disconnect the monitor unit's cables from the camcorder's EXT 1 and EXT 2 terminals.
  - Pull back the metallic tips of the cable to release the cable and then disconnect the cable.
- 3 Unscrew the lock screw and then gently slide out the monitor unit from the accessory shoe.

#### Using the Viewfinder


#### Adjusting the Viewfinder's Position

- 1 Gently pull out the viewfinder until it stops.
- 2 Adjust the viewfinder's angle as necessary.

#### Attaching and Detaching the Eye Cup

Attach the eye cup so that it covers the rubber portion of the viewfinder unit.


- The dioptric adjustment dial can be operated even with the eye cup attached.
- For left eye use, attach the eye cup so that the protruding portion faces the opposite side.

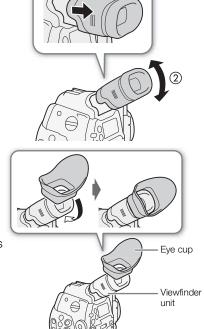

Detach the eye cup as shown in the illustration.




Turn on the camcorder and adjust the dioptric adjustment dial.

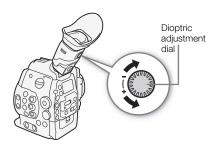


#### Attaching the Viewfinder Cap

Pointing the viewfinder lens at the sun or other strong light sources may cause damage to internal components. When you are not using the viewfinder, make sure to attach the viewfinder cap to the viewfinder. This will also protect the viewfinder from scratches and dirt. Attach the viewfinder cap by inserting it into the rubber portion of the viewfinder unit.

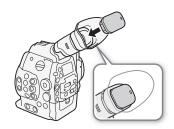

#### Using the LCD Panel


The whole monitor unit can be rotated 270° sideways allowing for easy monitoring and operation from the side of the camcorder. Additionally, the independently articulated LCD panel can be rotated 180° sideways and 270° up and down. In combination, you can position the LCD panel at a comfortable angle whatever the shooting style you need.



2 Open the LCD panel and adjust the screen to the desired position.

#### Adjusting the LCD Panel for Shoulder Mounted Use

- 1 Open the LCD panel 90° until it is perpendicular to the monitor unit.
- 2 Rotate the LCD panel 180° left.
- 3 Rotate the LCD panel 180° forward.
- 4 Press the MIRROR button until the image is displayed in the correct orientation.
  - Repeatedly pressing the MIRROR button will change the displayed image in the following order: Image inverted horizontally → Image inverted horizontally and vertically → Image inverted vertically → Original image.

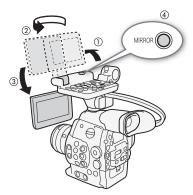

You can use the viewfinder and watch the LCD screen at the same time

- About the LCD and viewfinder screens: The screens are produced using
  extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to
  specification. Less than 0.01% of the pixels may occasionally misfire or appear as black, red, blue or green
  dots. This has no effect on the recorded image and does not constitute a malfunction.
- You can set the LCD screen to black & white (\$\square\$ 39).

- If you are not interested in using the viewfinder while the monitor unit is attached, you can set [ LCD/VF Setup] 
  [LCD/VF Simul.] to [Off] to conserve the camcorder's power. Even when [LCD/VF Simul.] is set to [Off], closing the LCD panel will automatically activate the viewfinder.
- While recording with the LCD panel rotated in a different direction or angle (for example, facing toward the subject), you can press the MIRROR button repeatedly to invert the image on the screen horizontally, vertically or both ways.

### Adjusting the Viewfinder/LCD Screen

You can adjust the brightness, contrast, color, sharpness, and backlight of the viewfinder and LCD screen independently of each other. These adjustments will not affect your recordings.

Operating modes: CAMERA

CAMERA MEDIA

1 Open the setup menu for the viewfinder or LCD screen.

- 2 Select [Brightness], [Contrast], [Color], [Sharpness] or [Backlight] and then press SET.
- 3 Adjust the setting and then press SET.
  - Repeat steps 2 and 3 to adjust other settings as necessary.

(i) NOTES

• If you set an assignable button to [LCD Setup] or [VF Setup] (\(\sum\_{111}\)), you can press the button to open the respective submenu.

#### Setting the Screen to Black & White

The viewfinder and LCD screen display in color by default but you can set them to black & white. Even when the screen is black & white, onscreen text and icons will still be displayed in color.


Operating modes: CAMERA

nodes: CAMERA MEDIA

- 1 Open the [LCD/VF B&W] submenu.
  - [ LCD/VF Setup] ▶ [LCD/VF B&W]
- 2 Select [On] and then press SET.

i) NOTES

 If you set an assignable button to [LCD/VF B&W] (\( \subseteq 111 \)), you can press the button to turn the black & white display on and off.

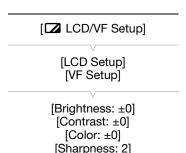

[Backlight: Normal]

[ LCD/VF Setup]

[LCD/VF B&W]


[Off]



#### Using a Tripod with 0.64 cm (1/4 in.) Mounting Screws

To use a tripod with 0.64 cm (1/4 in.) mounting screws, first attach the supplied tripod adapter base to the camcorder and then attach the tripod to the adapter base.

- 1 Remove the original TB-1 tripod base from the camcorder.
  - Remove the 4 screws and then remove the base.
- 2 Attach the supplied tripod adapter base for 0.64 cm (1/4 in.) tripods.
  - Firmly screw in the 4 screws.
- 3 Attach the tripod.
  - Firmly screw in the tripod screw.

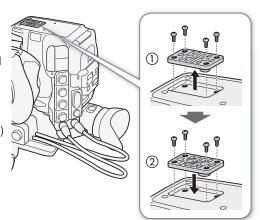


#### Removing and Attaching the Grip Unit

The grip unit comes originally attached to the camcorder. You can remove it and replace it with the thumb rest should the minimal configuration be necessary.

#### Removing the Grip Unit

- 1 Set the **POWER** switch to OFF.
- 2 Unscrew the grip unit's lock screw and gently detach the grip unit.
  - The grip unit contains an internal connection cable so be sure not to pull it too forcefully.
- 3 Disconnect the grip unit's connection plug.
- 4 Screw the thumb rest onto the camcorder.

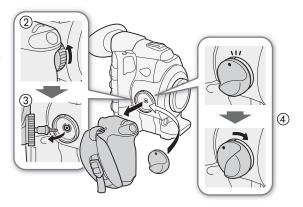


40

#### Attaching the Grip Unit

The grip unit can be attached in any of 24 positions (at 15° intervals) to give you a convenient grip angle for high- and low-angle shooting.

- 1 Set the **POWER** switch to OFF.
- 2 Unscrew the thumb rest and remove it from the camcorder.
- 3 Firmly insert the grip unit's plug all the way into the grip unit connection terminal on the camcorder.
  - Make sure to insert the plug all the way in, until the white line around the terminal is not visible.
  - If the plug is not correctly connected (for example, if the white line around the terminal is partly visible), all the controls on the camcorder may be disabled.
- 4 Attach the grip unit to the camcorder aligning it at the desired angle and tighten the grip unit's lock screw.

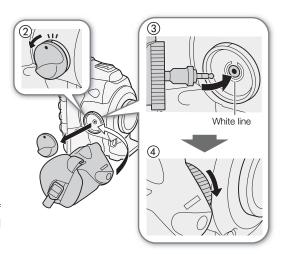


#### Adjusting the Grip Belt

Adjust the grip belt so that you can reach the START/STOP button on the grip unit with your index finger but still have a comfortable but secure grip.



#### IMPORTANT

• Be careful not to drop the camcorder when adjusting the grip belt.

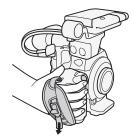


#### Attaching the Handle Unit

- 1 Insert the attachment base at the bottom of the handle unit to the camcorder's accessory shoe.
- 2 Tighten the handle unit's lock screw while gently pressing it down.



 You can use the accessory shoe or the socket for 0.64 cm (1/4 in.) screws on the handle unit to attach a variety of commercially available accessories.

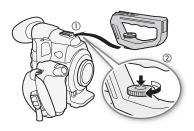

#### Attaching a Shoulder Strap

Pass the ends through the strap mount and adjust the length of the strap.



#### **IMPORTANT**

• Be careful not to drop the camcorder when attaching or adjusting the shoulder strap.



## Removing and Attaching the Terminal Covers

You can remove the plastic covers of the following terminals and SD card slot to access them more readily.

- EXT 1 and EXT 2
- SYNC OUT
- GENLOCK and TIME CODE
- HD/SD SDI
- CH1 and CH2

(XLR terminals on the monitor unit)

- (headphones)
- DC IN
- SD card slot
- REMOTE and HDMI OUT
- MIC
- WFT

#### Removing the Terminal Covers

Open the terminal cover and gently pull it straight out.

#### Attaching the Terminal Covers

Insert the connecting strip into the opening to attach the terminal cover.



• If the connecting strip is difficult to grasp, use a pair of tweezers or similar tool.



42

## **Preparing Recording Media**

The camcorder records clips to � CompactFlash (CF) cards and photos\* to SN SD and SDHC memory cards. The camcorder is equipped with two CF card slots. Initialize recording media ( 45) when you use them with this camcorder for the first time.

\* The camcorder can record custom picture files and a camera settings file onto the SD card as well. The SD card serves also to store user memo files created with the supplied software Canon XF Utility that you can then read and embed in the clips' metadata.

#### Compatible CF cards

You can use UDMA-compatible\* Type I CF cards with a capacity of at least 512 MB with the camcorder. For more details on cards that can be used, visit your local Canon Web site.

\* The Ultra Direct Memory Access (UDMA) specification allows data to be transferred between the CF card and device at high transfer speeds (measured in MB/s). Depending on the CF card, you may not be able to record even when using a UDMA-compatible CF card.





• Proper operation cannot be guaranteed for all CF cards.

## Inserting a CF Card

You can insert a CF card into CF card slot A or slot B. If you have two CF cards, you can use both slots.

- 1 Slide the CF card slot cover switch in the direction of the arrow.
  - The CF card slot cover will open upward (slot A) or downward (slot B).
- 2 Insert the CF card straight, with the label facing up, all the way into the slot.
- 3 Close the CF card slot cover.
  - Do not force the cover closed if the CF card is not correctly inserted.




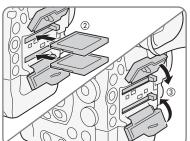

## Checking the Status of the CF Card Slots

You can check the status of the CF card slots immediately by looking at the CF $\mathbf{A}$ /CF $\mathbf{B}$  access indicator. Refer to the following table.

Access indicator color	CF card slot status
Red	Accessing CF card.
Green	Recording/playback is possible and the CF card slot is selected for recording/playback.
Indicator off	A CF card is not inserted, the CF card slot is not currently selected, or the CF card is not being accessed.



- 1 Wait until the access indicator for the card slot with the CF card to be removed is off.
- 2 Slide the CF card slot cover switch in the direction of the arrow.
  - The CF card slot cover will open upward (slot A) or downward (slot B).
- 3 Push the CF card release button.
  - The release button partially pops out.
- 4 Push in the CF card release button to release the CF card.
- 5 Pull the CF card all the way out and close the CF card slot cover.



44

- Observe the following precautions while the CFA or CFB access indicator is illuminated in red. Failure to do so may result in permanent data loss.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not open the cover of the CF card slot being accessed.

## (i) NOTES

 If you set the [✔ Other Functions] Ŋ [Media Access LED] function to [Off], the access indicators will not illuminate.


#### Inserting and Removing an SD Card


- 1 Turn off the camcorder.
- 2 Open the SD card slot cover.
- 3 Insert the SD card all the way into the SD card slot until it clicks.
  - The SD card slot is positioned at an angle. Align the SD card straight in relation to the SD card slot, with the label facing the lens.
- 4 Close the SD card slot cover.
  - Do not force the cover closed if the SD card is not correctly inserted.

## IMPORTANT

- Observe the following precautions while the SD card access indicator is flashing. Failure to do so may result in permanent data loss.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not remove the SD card.
- Turn off the camcorder before inserting or removing an SD card. Inserting or removing the SD card with the camcorder on may result in permanent data loss.
- SD cards have front and back sides that are not interchangeable. Inserting an SD card facing the wrong direction can cause a malfunction of the camcorder. Be sure to insert the SD card as described in step 3.

- To remove the SD card: Push the SD card once to release it. When the SD card springs out, pull it all the way out.
- If you set the [✔ Other Functions] [Media Access LED] function to [Off], the access indicators will not illuminate.

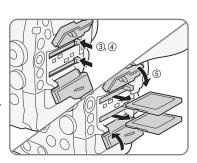

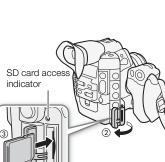

#### Initializing the Recording Media

The first time you use any recording media with this camcorder, initialize it first. You can also initialize a recording media to permanently delete all the data it contains.

When initializing an SD card, you can select quick initialization, which clears the file allocation table but does not physically erase the stored data, or complete initialization, which deletes all data completely.

Operating modes: CAMERA

CAMERA MEDIA

1 Open the [Initialize Media] submenu.

[ Other Functions] (Initialize Media)

2 Select [CF A], [CF B] or [SD Card] and then press SET.

# [► Other Functions]

#### To initialize a CF card

- 3 Select [OK] and then press SET.
- 4 When the confirmation message appears, press SET.
  - The CF card is initialized and all the data it contains is erased.

#### To initialize an SD card

- 3 Select [Complete] (complete initialization) or [Quick] (quick initialization) and then press SET.
- 4 Select [OK] and then press SET.
  - If you are using the [Complete] initialization option, press SET twice to cancel the operation while it is in progress. You can use the SD card but all data will be erased.
- 5 When the confirmation message appears, press SET.
  - The SD card is initialized and all the data it contains is erased.



- Initializing a recording media will permanently erase all data, including clips with an M mark, protected photos, and custom picture files. Lost data cannot be recovered. Make sure you save important recordings in advance.
- Depending on the SD card, the complete initialization may take up to a few minutes.


## (i) NOTES

- While recording on a CF card, you can initialize another CF card in the other CF card slot.
- If you set an assignable button to [Initialize Media] ( 111), you can press the button to open the initialization submenu.

## Switching Between the CF Card Slots

The camcorder features two CF card slots, CF (A) (CF card slot A) and CF (B) (CF card slot B). If both slots contain a CF card, you can switch between them as necessary.

Operating modes: CAMERA MEDIA



#### Press the SLOT SELECT button.

The access indicator of the selected CF card slot will illuminate in green. On the screen, the CF card selected
is indicated with a ▶ mark next to CF card icon and in the rear panel, with a ▼ mark on top of the CF card
icon.

# i NOTES

- If both CF card slots contain a CF card and you open the cover of the selected slot, the camcorder will automatically switch to the other slot.
- You cannot use the SLOT SELECT button to switch between CF card slots while recording.
- When using an optional WFT-E6 Wireless File Transmitter, you can also switch between CF card slots remotely by pressing [SLOT SELECT] on the Wi-Fi Remote screen.



#### Selecting the CF Card Recording Method

The camcorder features two useful CF card recording methods, relay recording and double slot recording.

Relay recording: This function allows you to continue recording on another CF card without interruption if the CF card you are using becomes full. Relay recording is available from CF card slot A to CF card slot B, and vice versa.

Double slot recording: This function records the same clip simultaneously to both CF cards, which is a convenient way to make a backup copy of your recording while you record.

Operating modes: CAMERA MEDIA

#### To use relay recording

By default, this function is activated. If it has been deactivated, follow the procedure below to activate it.


- 1 Open the [Relay Rec] submenu.
  - [★ Other Functions] ♠ [Relay Rec]
- 2 Select [On] and then press SET.

#### To use double slot recording

- 1 Open the [Double Slot Rec] submenu.
  - [ ✓ Other Functions] ◆ [Double Slot Rec]
- 2 Select [On] and then press SET.



- When the bit rate is set to 50 Mbps (\$\sum\_{\text{59}}\$), relay recording is not available during slow motion recording.
- If a CF card becomes full during double slot recording, recording on both cards will stop. On the other hand, if an error occurs with one of the cards, recording will continue on the other card.
- Double slot recording cannot be used with relay recording or slow & fast motion recording.

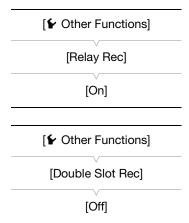

#### Checking the Available Recording Time for CF Cards

When the camcorder is in CAMERA mode, the display on the upper left of the screen indicates which CF card slot is in use and the available recording time (in minutes\*) that remains on each CF card. The same information is displayed in the rear panel. When the camcorder is in MEDIA mode, the available recording time is displayed only in the rear panel.

On the [Media] status screen ( 171), you can check the total space and used space of each recording media, as well as the available recording time\* on each CF card and the available number of photos on the SD card.

#### Recovering Data on the CF Card

Some actions, such as suddenly turning off the camcorder or removing the CF card while data is being recorded, can cause data errors on the CF card. In such case, you may be able to recover the data on the CF card.

Operating modes: CAMERA MEDIA

- 1 Insert the CF card with the data to be recovered into the camcorder.
- 2 When the screen prompts you to recover the data, select [OK] and then press SET.
- 3 When the confirmation message appears, press SET.



- This procedure will delete clips shorter than 10 seconds in length. Additionally, up to 10 seconds will be deleted from the end of clips on the CF card.
- In some cases, data may not be recovered, such as when the FAT32 file system is corrupted or the CF card is physically damaged.
- While recording on a CF card, you can recover data from another CF card by inserting it into the other CF card slot.

 $<sup>^{\</sup>star}$  The approximate available recording time is based on the current bit rate ( $\coprod$  59).

## Adjusting the Black Balance

You can have the camcorder adjust the black balance automatically when ambient temperature changes considerably or if there is a noticeable change in a true black video signal.

[ Camera Setup]

[ABB]

Operating modes: CAMERA MEDIA

1 Open the [ABB] screen.

[► Camera Setup] [ABB]

2 Attach the body cap to the lens mount.

• If a lens was attached, remove the lens and replace the body cap.

3 Select [OK] and then press SET.

• The automatic black balance procedure will start.

4 When the confirmation message appears, press SET.

If the body cap is not correctly attached, [Error] will appear on the screen. Press SET and repeat the
procedure from the beginning.

(i) NOTES


· Adjusting the black balance may be necessary in the following cases:

- When using the camcorder for the very first time or after a long period of not using it.
- After sudden or extreme changes in ambient temperature.
- After changing the ISO speed/gain settings.
- The automatic black balance procedure will take approximately 40 seconds when the frame rate is set to 23.98P or 24.00P.
- During the adjustment of the black balance, you may notice some irregular displays appear on the screen. This is not a malfunction.
- Resetting the camcorder's settings using the [✔ Other Functions] ◆ [Reset] ◆ [All Settings] or [Camera Settings] menu option will reset also the black balance adjustment. In such case, perform the procedure again.

48

## Remote Operation Via the Wi-Fi Remote Application

You can attach an optional WFT-E6 Wireless File Transmitter to the camcorder's WFT terminal and operate the camcorder remotely via Wi-Fi Remote, a Web browser application that can be accessed using the Web browser on any device compatible with Wi-Fi networks\*. The Wi-Fi Remote application lets you monitor the image through live view, start and stop recording and remotely control the shutter speed, ISO speed/gain and other settings. You can also create, edit and transfer a metadata profile, set various shot marks and check the recording media, remaining recording time, time code, etc.







#### Preparing the System for Wi-Fi Remote

To be able to operate the camcorder remotely via the Wi-Fi Remote application you will need to attach an optional WFT-E6 Wireless File Transmitter to the camcorder's WFT terminal and complete the wireless network setup. Download 'WFT-E6 Wireless File Transmitter - Guide for Canon Camcorders' (PDF file) from your local Canon Web site and follow the instructions to complete the necessary setup.



Remote Operation Via the Wi-Fi Remote Application



## **Recording Video**

This section explains the recording basics. Before you begin recording, make a test recording first to check if the camcorder operates correctly. Record for approximately 6 minutes at 50 Mbps (\$\subseteq\$ 59). Should the camcorder fail to operate correctly, refer to *Troubleshooting* (\$\subseteq\$ 176). For details on recording audio, refer to *Recording Audio* (\$\subseteq\$ 91).

Operating modes:	CAMERA	MEDIA
------------------	--------	-------

#### Preparing to Record


- 1 Attach the monitor unit, handle unit, grip unit, etc. as necessary to build the desired configuration ( 32).
- 2 Attach a charged battery pack to the camcorder (1 24).
- 3 Insert a CF card into a CF card slot ( $\bigcirc$  43).
  - Insert another CF card into the other CF card slot to use relay recording ( 46) or double slot recording ( 46).
- 4 Attach a lens ( 32, 36).
- 5 Adjust the viewfinder.



The camcorder can add a user memo (\$\sum 96\$) to a clip as you record. It can be used to store information such
as the clip name, camera operator and filming location. However, you must set the user memo before
recording.

#### Recording

- 1 Set the **POWER** switch to CAMERA (<u> 26</u>).
  - The camcorder turns on in CAMERA mode and enters record pause mode.
  - The access indicator for the CF card slot selected for recording illuminates in red and then changes to green.

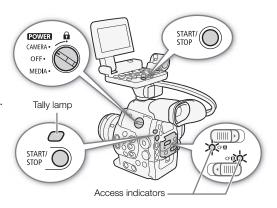




#### 2 Press the START/STOP button to begin recording.

- Recording starts. The tally lamp illuminates and the recording indicator [● REC] appears at the top of the screen.
- You can use the START/STOP button on the back of the camcorder, the front of the camcorder (next to the lens mount), the grip unit or the monitor unit.

#### 3 Press the START/STOP button to pause the recording.

- The clip\* is recorded to the CF card and the camcorder enters record pause mode. The tally lamp will also go out.
- \* "Clip" refers to one movie unit from the point you press the START/STOP button to start recording until you press again to pause the recording. You can also include custom picture settings (\(\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\super

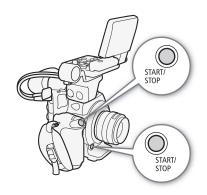

## 


- Observe the following precautions while the CFA or CFB access indicator is illuminated in red. Failure to do so may result in permanent data loss.
  - Do not open the CF card slot cover of the CF card slot being accessed and remove the CF card.
  - Do not disconnect the power source or turn off the camcorder.
- Be sure to save your recordings regularly (
   143), especially after making important recordings. Canon shall
   not be liable for any loss or corruption of data.

- You can use [✔ Other Functions] [Rec Review] (□ 105) to review part or all of the last clip recorded.
- If you set an assignable button to [Add M Mark] or [Add M Mark] (☐ 111), you can press the button to add an M mark or M mark to the last clip recorded.
- You can use [► Other Functions] ➤ [Clips] ➤ [Delete Last Clip] (☐ 166) to delete the last clip recorded.
  However, you cannot delete the last clip if double slot recording is on.
- When you set the [✔ Other Functions] ◆ [SDI Rec Command] setting to [On] and you connect the camcorder to another device using the HD/SD SDI terminal, if you start or stop recording with the camcorder, the other device will also start or stop recording.

#### Locking the Controls in Recording Mode

Once in CAMERA mode, you can set the POWER switch to (key lock) to lock all the physical controls (buttons and switches) on the camcorder\*, save for the START/STOP button. With the [ Other Functions (Custom Function ) START/STOP] setting, you can even choose to lock all buttons, including the START/STOP button. In such case, you can use Wi-Fi Remote to operate the camcorder. This is useful in preventing settings from being changed due to inadvertently pressing one of the buttons. Return the POWER switch to the CAMERA position to reactivate the controls.

\* The Wi-Fi Remote application also has a key lock function that is limited only to the controls on the application's screens (you will still be able to use the controls on the camcorder). Press [a] to lock the application's controls; press [a] to reactivate them

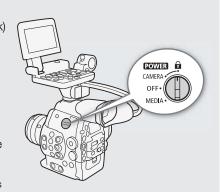

#### **About Clips**

When the camcorder records a clip, it also assigns a 6-character clip name consisting of a 2-character prefix (letters or numerals) and 4 numerals (for example, "AA0001"). The last 4 numbers serve as a running counter that increases every time a clip is recorded. You can set the initial clip name in advance using the [ Other Functions] [ Clips] [ Title Prefix] and [ Number Setting] settings. You cannot change the clip name after the clip is recorded.

- If you are recording with two CF cards and the CF card you are using becomes full while recording, the clip will continue uninterrupted on the other CF card when relay recording ( 46) is activated. In such case, the recording will be recorded as separate clips.
- If you record using the custom picture and metadata settings, those settings will be recorded with the clip. For more details, refer to *Custom Picture Settings* ( 114) and *Using Metadata* ( 196).
- The video (stream) file in a clip will be split approximately every 2 GB for clips with a long recording time (approximately every 1 GB during slow motion recording). Even in such case, playback will be continuous.

#### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\square$  49), you can start and stop recording from a Wi-Fi-enabled device using the Wi-Fi Remote application.


- 1 Press [LIVE VIEW ON/OFF] to show the camcorder's live view image on the Wi-Fi Remote screen.
  - 2 Press [START/STOP] to begin recording.
    - The recording operation indicator changes from [STBY] to [●REC], the center of the START/STOP button lights up in red and the time code display starts running on the Wi-Fi Remote screen.
    - Press [START/STOP] again to pause the recording.



#### **Onscreen Displays**

Refer to this section for an explanation of the various screen displays that appear in CAMERA mode. You can use the custom display function (

123) to turn off individual onscreen displays if they are not required.

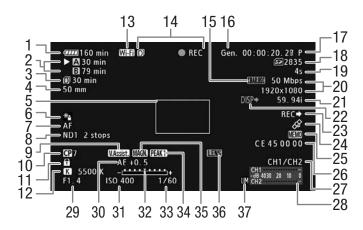

When displaying the date and time ( 28):



- 1 Remaining battery time (\$\square\$ 56)
- 2 CF card status/available recording time (\$\sum\_56\$)
- 3 Remaining recording time for double slot recording (☐ 46)
- 4 C300 Current focal length of an attached EF lens<sup>1</sup>
- 5 G300 One-shot AF's autofocus frame ( 79)
- 6 C300 Light metering ( 73)
- 7 **C300** Focus mode (C) 77)
- 8 ND filter ( 68)
- 9 View assistance (\$\sum 58)\$
- 10 Custom picture ( 114)
- 11 Key lock (\$\sum 53)\$
- 12 White balance ( 74)
- 13 Wi-Fi<sup>2</sup> (☐ 49) white connected to a Wi-Fi network; yellow - connecting to or disconnecting from a Wi-Fi network.
- 14 Recording operation ( 56)
- 15 Character recording ( 123)
- 16 Genlock ( 88)
- 17 Time code (<u></u> 84)
- 18 SD card status

- 19 Interval counter (\$\sum 106\$)
- 20 Bit rate/Resolution (\$\sum 59\$)
- 21 Frame rate<sup>3</sup> (<u> 59</u>)
- 22 Output displays (\$\sum 142\$)
- 23 SDI recording command ( 168)
- 24 GPS signal<sup>4</sup> (☐ 103). Continuously on satellite signal acquired; blinking - satellite signal not acquired.
- 25 User memo (XX) 96)
- 26 User bit (<u></u> 87)
- 27 Audio output channel (\$\sum 95\$)
- 28 Audio level meter (\$\sum 93, 94)\$
- 30 **C300** AE shift (<u> 72</u>)
- 31 ISO speed/Gain (\$\subseteq\$ 65)
- 32 **C300** Exposure bar ( 72)
- 33 Shutter speed ( 62)
- 34 Peaking (<u> 78</u>)
- 35 Magnification ( 79)
- 36 **C300** Lens error warning (**179**)
- 37 Audio peak limiter (\$\subseteq\$ 93)
- 38 Date/time (<u></u> 28)

<sup>&</sup>lt;sup>1</sup> The displayed value is an estimate.

<sup>&</sup>lt;sup>2</sup> Only when an optional WFT-E6 Wireless File Transmitter is connected to the camcorder.

<sup>&</sup>lt;sup>3</sup> During slow & fast motion recording mode, this indicates the shooting frame rate.

<sup>&</sup>lt;sup>4</sup> Only when an optional GP-E1 GPS Receiver is attached to the camcorder.

You can press the DISP. button to switch the onscreen displays in the following sequence.
 Show all onscreen displays → show only onscreen markers\* → hide all onscreen displays.

#### \* Only when the [ LCD/VF Setup] (Markers] setting is enabled.

#### 1 Remaining battery time

- The icon shows a rough estimate of the remaining charge as a percentage of the full charge of the battery pack. The remaining recording/playback time of the battery pack is displayed, in minutes, next to the icon.
- IIII → IIIII → IIII → IIIII → IIII → IIII → IIII → IIII → IIIII → IIII → IIIII → IIII → IIII → IIII → II
- Depending on the conditions under which the camcorder and the battery pack are used, the actual battery charge may not be indicated accurately.

#### 2 CF card status/available recording time

- The following indicates the CF card status.
  - A/B Can record on CF card
  - ✓ No CF card or cannot record on CF card

The CF card selected for recording is indicated with a ▶ mark.

#### 14 Recording operation

● REC
 STBY
 ● INT REC
 Interval recording
 INT STBY (INT flashes)
 ● FRM REC
 Record pause
 Interval record pause
 Frame recording

● FRM STBY Frame record pause (after starting recording)
FRM STBY (FRM flashes) Frame record pause (before starting recording)

● S&F REC Slow & fast motion recording
S&F STBY Slow & fast motion record pause


● PRE REC Pre-recording (after pressing the START/STOP button)
PRE REC STBY Pre-recording (before pressing the START/STOP button)

• When double slot recording ( 46) is activated, the disconvill appear to the left of the operation indicator.

56

#### **Rear Panel Displays**

You can check the following information on the rear panel. This allows you to easily adjust main camera functions like the shutter speed, white balance and ISO speed/gain even when the monitor unit is not attached to the camcorder without having to use the viewfinder.

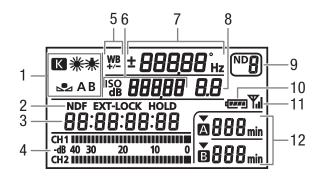

- 1 White balance (\$\impreceip 74)\$
- 2 Time code settings: NDF Non-drop frame (☐ 85) /EXT-LOCK External time code signal locked (☐ 89) / HOLD Time code display on hold (☐ 86)
- 3 Time code (<u></u> 84)
- 4 Audio level meter<sup>1</sup> (\$\sum 93, 94)
- 5 White balance fine-tuning (\$\sum 74\$)
- 6 ISO speed/ **... 5.0** Gain ( 65)
- 7 Shutter speed (\$\sum\_ 62\$)/White balance
  - Shutter speed<sup>2</sup> (mode set to [Speed], [Slow] or [Off])
  - **16000** Shutter speed (mode set to [Angle])
  - 5994 Hz Shutter speed (mode set to [Clear Scan])
  - **±** White balance fine-tuning<sup>3</sup> (☐ 74)
  - **5500** White balance, color temperature<sup>3</sup> ( $\bigcirc$  75)

- 8 **C300** Aperture value (<u></u> 69)
- 9 ND filter (\$\square\$ 68)
- 10 Approximate remaining battery time<sup>1</sup>
- 11 Wi-Fi<sup>4</sup> ( 49)
- 12 CF card status and available recording time<sup>1</sup>

2 In these shutter speed modes, only the denominator is displayed - 100 indicates a shutter speed of 1/100, etc.

<sup>3</sup> Only displayed while adjusting the setting.

#### Adjusting the Brightness of the Rear Panel

Repeatedly pressing the 3: (backlight) button will change the brightness of the rear panel in the following order: Backlight on (bright)  $\rightarrow$  Backlight on (dim)  $\rightarrow$  Backlight off.




<sup>&</sup>lt;sup>1</sup> Displayed also in MEDIA mode.

<sup>&</sup>lt;sup>4</sup> Only when an optional WFT-E6 Wireless File Transmitter is connected to the camcorder.

#### Canon Log Gamma and CINEMA Preset

You can easily set the camcorder to use a number of preset picture-related settings especially designed with professional cinematography and motion picture production in mind. With the CINEMA preset settings, the gamma and color matrix ( 117) will be set to the advanced Canon Log setting, which makes full use of the newly developed image sensor to offer spectacular dynamic range. On the other hand, other custom picture settings will not be available.

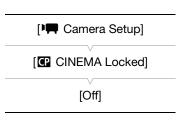

Clips recorded using Canon Log gamma need to be processed in post-production. During post-production, you can apply a LUT (look-up table) to clips recorded using Canon Log gamma to view the clips with more natural colors. For details about available LUTs, visit your local Canon Web site.

- 1 Open the [C CINEMA Locked] submenu.
  - [► Camera Setup] [ CINEMA Locked]
- 2 Select [On] and then press SET.
  - All picture-related settings will be set according to the CINEMA preset values.
  - [CP LOCKED] appears on the left of the screen.


#### Checking Clips Recorded with Canon Log Gamma (View Assistance)

When Canon Log gamma is used, the image displayed on the screen will appear darker than usual. You can use the view assistance function to display an image that approximates the one that would be obtained using normal gamma settings. View assistance is only applied on the camcorder screen; it will not affect your recordings or the video signal output from the various terminals.

1 Open the [View Assist.] submenu.

[ ∠ LCD/VF Setup] ▶ [View Assist.]

- 2 Select [On] and then press SET.
  - V.Assist. will appear on the lower left of the screen.



## Video Configuration: Type of Recording, Bit Rate, Resolution and Frame Rate

Before you record, select the bit rate, resolution (frame size) and frame rate that best match your creative needs. The options available will depend on the type of recordings you select: NTSC-compatible, PAL-compatible or true 24.00P recordings. A single CF card can contain only one type of recordings.

Operating modes: CAMERA MEDIA

#### Selecting the Type of Recording

#### For true 24.00P recordings

- 1 Open the [24.00P] submenu.
  - [ ◆ Other Functions] ◆ [24.00P]
- 2 Select [On] and then press SET.
  - The camcorder will reset and restart in 24.00P mode.

#### For recordings compatible with analog NTSC/PAL broadcast standards

- 1 Open the [NTSC/PAL] submenu.
  - [ ✓ Other Functions] ✓ [NTSC/PAL]
- 2 Select [NTSC] or [PAL] and then press SET.
  - The camcorder will reset and restart in the selected mode.

#### Selecting the Bit Rate and Resolution

- 1 Open the [Bit Rate/Resolution] submenu to set the bit rate and resolution.
  - [★ Other Functions] ★ [Bit Rate/Resolution]
- 2 Select the desired option and then press SET.
  - The selected bit rate and resolution will appear on the upper right of the screen.

#### Selecting the Frame Rate

This procedure is not necessary for true 24.00P recordings.

- 1 Open the [Frame Rate] submenu to set the frame rate.
  - [★ Other Functions] ★ [Frame Rate]
- 2 Select the desired option and then press SET.
- The selected frame rate will appear on the upper right of the screen.

(i)	NOTES
	INOTES

- A single CF card cannot be used to record different types of recordings (NTSC/PAL/24.00P).
- For details on the signal output from each terminal, refer to *Video Output Configuration* ( 139).

[ Other Functions]

[24.00P]

[Off]

[ Other Functions]

[NTSC/PAL]

[NTSC] or [PAL]\*

Depending on the country/region of purchase.

[ Other Functions]

[Bit Rate/Resolution]

[50 Mbps 1920x1080]

[ Other Functions]

[Frame Rate]

[59.94i] or [50.00i]\*

Depending on the country/region of purchase.

#### Available bit rate, resolution and frame rate settings

<b>-</b>		[24.00P] set to [0n]	[NTSC/PAL] set to [NTSC]				[NTSC/PAL] set to [PAL]		
Bit rate*	Resolution	Frame rate		[Frame Rate] setting					
		24.00P	59.94i	59.94P	29.97P	23.98P	50.00i	50.00P	25.00P
50 Mbps	1920 x 1080	•	•	_	•	•	•	_	•
(CBR 4:2:2)	1280 x 720	•	-	•	•	•	-	•	•
OF Mhns	1920 x 1080	_	•	-	•	•	•	-	•
35 Mbps (VBR 4:2:0)	1440 x 1080	-	•	-	-	-	•	-	-
(VDIT 4.2.0)	1280 x 720	_	ı	•	•	•	-	•	•
25 Mbps (CBR 4:2:0)	1440 x 1080	-	•	-	•	•	•	_	•

<sup>\*</sup> The first line indicates the bit rate (in Mbps); the second line indicates in parentheses whether the bit rate is constant (CBR) or variable (VBR), and the color sampling.

FUNC.

## Changing Main Camera Functions with the FUNC. Button

You can adjust three main camera functions –shutter speed, white balance and ISO speed/gain– using the FUNC. button (direct setting mode). In direct setting mode, you can change settings using the LCD screen/ viewfinder or using only the rear panel, which is convenient when the monitor unit is not attached to the camcorder.

This section will explain the basic operation of the direct setting mode. For specific details about the functions please refer to the each function's section: shutter speed ( $\bigcirc$  62), white balance ( $\bigcirc$  74), ISO speed/gain ( $\bigcirc$  65).

Operating modes: CAMERA MEDIA

#### Using the Direct Setting Mode

- 1 Press the FUNC. button.
  - On the screen: The onscreen display of the function to be adjusted will be highlighted in orange.
    - On the rear panel: Only the icon (white balance) or value (ISO speed, gain, shutter speed) of the function to be adjusted will be displayed.
  - Repeatedly pressing the FUNC. button will change the function to be adjusted in the following order: White balance → ISO speed/gain
     → Shutter speed → Direct setting mode off.
- 2 Push the joystick up/down or turn the SELECT dial to select the desired value (ISO speed, gain, shutter speed) or desired white balance mode and then press SET.
  - The selected value will be set and the camcorder will exit the direct setting mode.
  - On the screen: The onscreen display of the selected function will return to normal. On the rear panel: The display will return to normal (all displays will reappear).
  - Depending on the function selected, additional adjustment may be possible or necessary before pressing SET.

- The camcorder will automatically end the direct setting mode in the following cases.
  - If no operation was performed for more than 6 seconds.
  - If the menu, custom picture menu or a status screen was opened.
  - If the aperture was adjusted or the ND filter setting was changed.
  - If the control dial's function is set to [ISO/Gain] and you operate the control dial while adjusting the white balance or shutter speed in direct setting mode.

## **Shutter Speed**

Set the shutter speed based on the recording conditions. For example, you may want to set slower shutter speeds in darker environments. The camcorder offers the following 5 modes.

Operating modes: CAMERA MEDIA

[Speed]: Allows you to set the shutter speed (in fractions of a second). You can select the increment to use when adjusting the shutter speed between 1/3-stop and 1/4-stop increments.

[Angle]: You can set the shutter angle to determine the shutter speed.

[Clear Scan]: Set the frequency in order to record CRT computer monitors without displaying black bands or flicker on the screen.

[Slow]: You can set slower shutter speeds to obtain brighter recordings in places with insufficient lighting. This mode is not available during slow & fast motion recording mode.

[Off]: The camcorder uses a standard shutter speed based on the frame rate.

#### **Available Shutter Speeds**

The available shutter speeds vary depending on the frame rate.

Shutter speed mode		Frame rate (NTSC and 24.00P recordings)					
		59.94i / 59.94P 29.97P		23.98P / 24.00P			
Off <sup>1</sup>		1/60	1/30	1/24			
Speed <sup>1,2</sup>	1/3-stop	1/60, 1/80, 1/100, 1/125, 1/160, 1/200,	1/30, 1/40, 1/50, 1/60, 1/80, 1/100,	1/25, 1/30, 1/40, 1/50, 1/60, 1/80,			
	increments	1/250, 1/320, 1/400, 1/500, 1/640,	1/125, 1/160, 1/200, 1/250, 1/320,	1/100, 1/125, 1/160, 1/200, 1/250,			
		1/800, 1/1000, 1/1250, 1/1600, 1/2000	1/400, 1/500, 1/640, 1/800, 1/1000,	1/320, 1/400, 1/500, 1/640, 1/800,			
			1/1250, 1/1600, 1/2000	1/1000, 1/1250, 1/1600, 1/2000			
1/4-stop increments		1/60, 1/75, 1/90, 1/100, 1/120, 1/150,	1/30, 1/34, 1/40, 1/48, 1/60, 1/75, 1/90,	1/24, 1/30, 1/34, 1/40, 1/48, 1/60, 1/75,			
		1/180, 1/210, 1/250, 1/300, 1/360,	1/100, 1/120, 1/150, 1/180, 1/210, 1/250,	1/90, 1/100, 1/120, 1/150, 1/180, 1/210,			
		1/420, 1/500, 1/600, 1/720, 1/840,	1/300, 1/360, 1/420, 1/500, 1/600, 1/720,	1/250, 1/300, 1/360, 1/420, 1/500, 1/600,			
		1/1000, 1/1200, 1/1400, 1/1700,	1/840, 1/1000, 1/1200, 1/1400, 1/1700,	1/720,1/840, 1/1000, 1/1200, 1/1400,			
		1/2000	1/2000	1/1700, 1/2000			
Angle <sup>1</sup>		360°, 240°, 216°, 180°, 120°, 90°,	360°, 240°, 216°, 180°, 120°, 108°,	360°, 345.6°, 288°, 240°, 180°,			
		60°, 45°, 30°, 22.5°, 15°, 11.25°	90°, 60°, 45°, 30°, 22.5°, 15°,	172.8°, 144°, 120°, 90°, 86.4°, 72°,			
			11.25°	60°, 45°, 30°, 22.5°, 15°, 11.25°			
Clear Scan <sup>1</sup>		59.94 Hz to 250.27 Hz	29.97Hz to 250.27 Hz	23.98 Hz or 24.00 Hz to 250.27 Hz			
Slow <sup>3</sup>		1/4, 1/8, 1/15, 1/30	1/4, 1/8, 1/15	1/3, 1/6, 1/12			

Shutter speed mode		Frame rate (PAL recordings)				
		50.00i / 50.00P	25.00P			
Off <sup>1</sup>		1/50	1/25			
Speed <sup>1,2</sup> 1/3-stop increments  1/4-stop increments		1/50, 1/60, 1/80, 1/100, 1/125, 1/160, 1/200, 1/250, 1/320,	1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/125, 1/160,			
		1/400, 1/500, 1/640, 1/800, 1/1000, 1/1250, 1/1600,	1/200, 1/250, 1/320, 1/400, 1/500, 1/640, 1/800, 1/1000,			
		1/2000	1/1250, 1/1600, 1/2000			
		1/50, 1/60, 1/75, 1/90, 1/100, 1/120, 1/150, 1/180, 1/210,	1/25, 1/29, 1/33, 1/40, 1/50, 1/60, 1/75, 1/90, 1/100, 1/120,			
		1/250, 1/300, 1/350, 1/400, 1/500, 1/600, 1/700, 1/800,	1/150, 1/180, 1/210, 1/250, 1/300, 1/350, 1/400, 1/500, 1/600,			
		1/1000, 1/1200, 1/1400, 1/1600, 1/2000	1/700, 1/800, 1/1000, 1/1200, 1/1400, 1/1600, 1/2000			
Angle <sup>1</sup>		360°, 300°, 240°, 180°, 150°, 120°, 90°, 60°, 45°, 30°,	360°, 300°, 240°, 180°, 150°, 120°, 90°, 75°, 60°, 45°,			
		22.5°, 15°, 11.25°	30°, 22.5°, 15°, 11.25°			
Clear Scan <sup>1</sup>		50.00 Hz to 250.78 Hz	25.00 Hz to 250.78 Hz			
Slow <sup>3</sup>		1/3, 1/6, 1/12, 1/25	1/3, 1/6, 1/12			

<sup>&</sup>lt;sup>1</sup> During slow & fast motion recording mode, available values will vary depending on the selected shooting frame rate.

<sup>&</sup>lt;sup>2</sup> In the Wi-Fi Remote application, all shutter speeds (1/3-stop and 1/4-stop increments) will be available from the same list.


<sup>&</sup>lt;sup>3</sup> Not available during slow & fast motion recording mode.

#### Changing the Shutter Speed Mode and Value

- 1 Open the shutter [Mode] submenu.
- 2 Select the desired mode and then press SET.
  - If you selected [Speed] (the default value) you can select the increment scale to use when adjusting the shutter speed; otherwise, skip to step 5.
- 3 Open the [Shutter Increment] submenu.
- 4 Select [1/3 stop] or [1/4 stop] and then press SET.
- 5 Adjust the shutter speed, angle value or clear scan frequency using the direct setting mode.
  - Repeatedly press the FUNC. button to highlight the shutter speed display, select the desired value and then press SET. For details refer to *Using the Direct Setting Mode* ( 61).




If you set an assignable button to [FUNC. Shutter] (
 111), you can
press the button to enter the direct setting mode with the shutter speed
highlighted and ready to be adjusted.

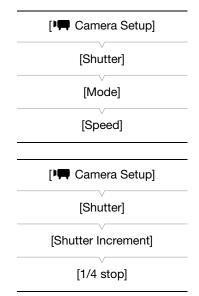

#### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\bigcirc$  49), you can adjust the shutter speed remotely from a Wi-Fiendbled device using the Wi-Fi Remote application.

- 1 Press [SPEED] on the Wi-Fi Remote screen.
- 2 Select the desired mode.
- 3 Press the current shutter speed, angle value or clear scan frequency and select the desired value from the list.
  - You may need to scroll up/down to see all the available values.
  - The selected value will be displayed on the Wi-Fi Remote screen and will be applied on the camcorder.

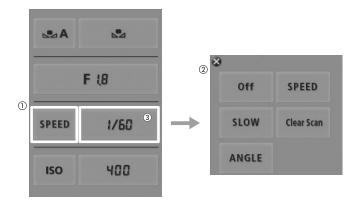

#### **Using Slow Shutter Mode**

When recording in dark surroundings, you can obtain a brighter picture by using slow shutter mode. You can also use this mode when you wish to add certain effects to your recordings, such as blurring the background during panning shots or recording a moving subject with an afterimage trail.

• Image quality may not be as good as when using faster shutter speeds in brighter surroundings.

## (i) NOTES

- Closing down the aperture when recording under bright conditions may cause the picture to appear soft or out
  of focus. To avoid the loss of sharpness due to diffraction, use a faster shutter speed, a denser ND filter
  ( 68) or open up the aperture.
- When the shutter speed mode is set to [Slow], bright red, green or blue dots may appear on the screen. In such case, use a faster shutter speed or select a lower ISO speed or gain value (\$\sum\$ 65).
- Even when using the [C7: EOS Std.] preset custom picture file, if you set the camcorder to a certain shutter speed, you may not get the exactly the same image brightness as you would on an EOS digital SLR camera set to the same shutter speed.


#### Flicker Reduction

You can perform the following procedure to have the camcorder automatically detect and reduce flicker.

1 Open the [Flicker Reduction] submenu.

[ Camera Setup] (Flicker Reduction)

2 Select [Automatic] and then press SET.



- When recording under artificial light sources such as fluorescent, mercury or halogen lamps, the screen may flicker depending on the shutter speed. You may be able to avoid flicker by setting the shutter mode to [Speed] and the shutter speed to a value matching the frequency of the local electrical system: 1/50\* or 1/100 for 50 Hz systems, 1/60 or 1/120 for 60 Hz systems.
- \* May not be available depending on the frame rate.

## ISO Speed/Gain

Depending on the shooting conditions you may want to adjust the brightness of the image. You can do so by changing the ISO speed or gain value to adjust the sensitivity of the sensor.

Operating modes: CAMERA

CAMERA MEDIA

#### Available ISO speed and gain settings

	Increment	Normal range	Extended range <sup>1</sup>
	1-stop increments	$320^2$ , 400, 800, $<850>^3$ , 1600, 3200, 6400, 12800, 20000 <sup>2, 4</sup>	25600, 51200, 80000 <sup>2</sup>
ISO Speed	1/3-stop increments	320, 400, 500, 640, 800, <850> <sup>3</sup> , 1000, 1250, 1600, 2000, 2500, 3200, 4000, 5000, 6400, 8000, 10000, 12800, 16000, 20000	25600, 32000, 40000, 51200, 64000, 80000
Gain	Normal	-6 dB, -3 dB, 0 dB, 3 dB, 6 dB, 9 dB, 12 dB, 15 dB, 18 dB, 21 dB, 24 dB, 27 dB, 30 dB	33 dB, 36 dB, 39 dB, 42 dB
	Fine	0 dB to 24 dB in 0.5 dB increments	-

<sup>&</sup>lt;sup>1</sup> Settings available only when [Image Camera Setup] → [ISO/Gain] → [Extended Range] is set to [On].

#### Changing the ISO Speed or Gain Value


- 1 Open the ISO Speed/Gain [Select] submenu.
  - [► Camera Setup] [ISO/Gain] [Select]
- 2 Select [ISO] or [Gain] and then press SET.

#### If you selected [ISO] (the default value):

- 3 Open the [ISO Increment] submenu to select the increment to use when adjusting the ISO speed.
- 4 Select [1 stop] or [1/3 stop] and then press SET.
- 5 Adjust the ISO speed using the direct setting mode.
  - Repeatedly press the FUNC. button to highlight the ISO speed display, select the desired value and then press SET. For details refer to *Using the Direct Setting Mode* ( 61).

#### If you selected [Gain]:

- 3 Open the [Gain] submenu to select the increment to use when adjusting the gain.
- 4 Select [Normal] (3-dB increment) or [Fine] (0.5-dB increment) and then press SET.
- 5 Adjust the gain using the direct setting mode.
  - Repeatedly press the FUNC. button to highlight the gain display, select the desired value and then press SET. For details refer to *Using* the Direct Setting Mode ( 61).

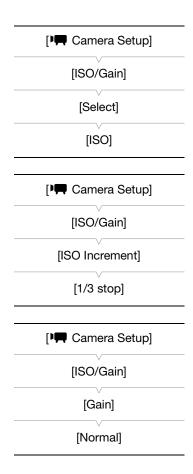

<sup>&</sup>lt;sup>2</sup> The minimum and maximum ISO speeds are available even when the 1-stop increment scale is selected.

<sup>&</sup>lt;sup>3</sup> ISO speed required for a suitable dynamic range for Canon Log gamma. Equivalent to a gain value of 2.5 dB.

<sup>&</sup>lt;sup>4</sup> This value is only available when [Extended Range] is set to [Off].

• If you set an assignable button to [FUNC. ISO/Gain] ( 111), you can press the button to enter the direct setting mode with the ISO speed/gain highlighted and ready to be adjusted.

#### Using the Control Dial

You can adjust the value of the ISO speed or gain using the control dial on the camcorder or that on the grip unit.

You will need to set a control dial's function to [ISO/Gain] in advance. You can select the function assigned to each control dial independently.


#### Assigning ISO Speed/Gain Control to a Control Dial

- 1 Open the [Control Dial] (control dial on the camcorder) or [Grip Ctrl Dial] (control dial on the grip unit) submenu.
  - [► Other Functions] ► [Custom Function] ► [Control Dial] or [Grip Ctrl Dial]
- 2 Select [ISO/Gain] and then press SET.

#### Changing the ISO Speed or Gain Value

To select whether to change the ISO speed or the gain, perform steps 1 to 4 in the previous procedure. Turn the control dial assigned to [ISO/Gain] to set the desired ISO speed or gain value.



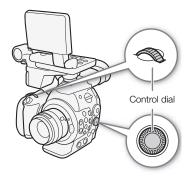

[ Other Functions]

[Custom Function]

[Control Dial] [Grip Ctrl Dial]


**C300** [Iris], **C300PL** [Off]

66

#### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\square$  49), you can adjust the ISO speed/gain remotely from a Wi-Fi-enabled device using the Wi-Fi Remote application.

- 1 To change the gain value, press [ISO] and then [Gain] on the Wi-Fi Remote screen.
- 2 Press the current ISO speed or gain value and select the desired value from the list.
  - You may need to scroll up/down to see all the available values.
  - The selected value will be displayed on the Wi-Fi Remote screen and will be applied on the camcorder.

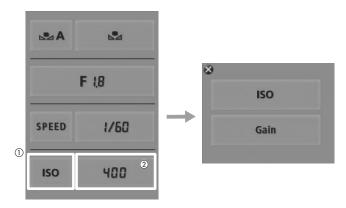


- When high ISO speeds or gain levels are set, the picture may flicker slightly. ISO 12800 / 30 dB gain and higher values in particular, allow you to shoot video with a higher sensitivity but are more prone to the appearance of noise.
- When high ISO speeds or gain levels are set, bright red, green or blue dots may appear on the screen. In such case, use a faster shutter speed ( 62) or select a lower ISO speed or gain value.
- When the ISO speed or gain level is changed, some noise may appear momentarily on the screen. Do not adjust the ISO speed/gain level while recording.

#### **ND Filter**

Using the ND filters allows you keep the aperture within an appropriate range when recording in bright surroundings\*.

\* Closing down the aperture when recording under bright conditions may cause the picture to appear soft or out of focus. To avoid the loss of sharpness due to diffraction, use a denser ND filter or a faster shutter speed (\$\sup\$ 62).

Operating modes: CAMERA MEDIA

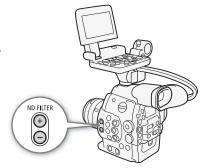

#### Using the ND Filter

Press the ND FILTER + or - button to select the desired ND filter setting.

Repeatedly pressing ND FILTER + button will change the ND filter setting in the following order: [ND1 2 stops]
 → [ND2 4 stops] → [ND3 6 stops] → ND filter off. (The ND FILTER - button cycles through the settings in reverse order.)

#### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\bigcirc$  49), you can adjust the ND filter remotely from a Wi-Fi-enabled device using the Wi-Fi Remote application.

Press [ND +] or [ND -] on the Wi-Fi Remote screen.

- The function is identical to that of the ND FILTER + and buttons on the camcorder.
- The selected ND filter setting will be displayed on the Wi-Fi Remote screen and will be applied on the camcorder.





- Depending on the scene, the color may change when turning the ND filter on/off. Setting a custom white balance ( 74) may be effective in such case.
- If you set an assignable button to [ND +] or [ND -] ( 111), you can press the button to cycle through the ND filter settings.

## **C300** Adjusting the Aperture

You can affect the brightness of your recordings or change the depth of field by adjusting the aperture. For example, use a small aperture value for a shallow depth of field that isolates the subject in focus and nicely blurs the background. Available aperture values will vary depending on the lens attached to the camcorder. The camcorder offers 3 ways to adjust the aperture. By default, the camcorder is set to manual aperture. The aperture mode can only be changed when a lens compatible with automatic aperture is attached to the camcorder.

Manual aperture: Adjust the aperture value manually using the control dial on the camcorder or on the grip unit, or remotely, using the Wi-Fi Remote application.

Momentary automatic aperture - Push Auto Iris: During manual aperture, press an assignable button or use the Wi-Fi Remote application to temporarily adjust the aperture automatically.

Automatic aperture\*: The camcorder adjusts the aperture automatically.

\* Available only with lenses compatible with automatic aperture (\$\square\$ 192).


Operating modes: CAMERA MEDIA

#### Manual Aperture

#### Using the Control Dial


You can adjust the aperture value of an EF lens using the control dial on the camcorder or that on the grip unit. You can select the function assigned to each control dial independently.

By default, both control dials' function is set to aperture control. If it has been changed, follow the procedure below to set a control dial's function to [Iris] in advance.

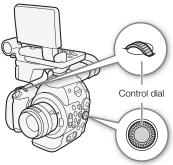

#### To assign aperture control to a control dial

- 1 Open the [Control Dial] (control dial on the camcorder) or [Grip Ctrl Dial] (control dial on the grip unit) submenu.
  - [✔ Other Functions] [Custom Function] [Control Dial] or [Grip Ctrl Dial]
- 2 Select [Iris] and then press SET.

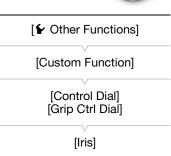


#### To change the aperture mode and value

1 Open the aperture [Mode] submenu.

- This submenu is available only with lenses compatible with automatic aperture. Otherwise, start from step 3.
- 2 Select [Manual] and then press SET.
- 3 Open the [Iris Increment] submenu.

[► Camera Setup] [Iris] [Iris Increment]

- 4 Select [1/2 stop], [1/3 stop] or [Fine] and then press SET.
- 5 Turn the control dial assigned to [Iris] to adjust the aperture.
  - The selected aperture value will appear on the lower left of the screen.
  - When [► Camera Setup] [Iris] [Iris Increment] is set to [Fine], the actual increments will be smaller than 1/3 stop but the onscreen display will show the closest 1/3-stop aperture value.

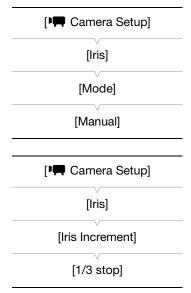

## (i) NOTES

- You can use the [► Other Functions] → [Custom Function] →
  [Control Dial Dir.] or [Grip Ctrl Dial Dir.] setting (□ 123) to change the
  direction of the adjustment when you turn the control dial on the camcorder or on the grip unit, respectively.
- If you set an assignable button to [Iris +] or [Iris -] ( 111), you can press the button to respectively open up or close the aperture.

#### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\bigcirc$  49), you can adjust the aperture value remotely from a Wi-Fiendbled device using the Wi-Fi Remote application.

- 1 On the camcorder, set [ Camera Setup] [Iris] [Mode] to [Manual] ( 70).
  - This is only necessary when using a lens compatible with automatic aperture. For other lenses, [Manual] is the default setting and cannot be changed.
- 2 Press the current aperture value on the Wi-Fi Remote screen.
- 3 Select the desired aperture value from the list.
  - You may need to scroll up/down to see all the available values.
  - Alternatively, you can press IRIS [+] to open the aperture or IRIS [-] to close the aperture in 1/8-stop increments. (Onscreen displays will show the closest 1/3-stop aperture value.)
  - The selected value will be displayed on the Wi-Fi Remote screen and will be applied on the lens.





- When using an EF lens with no lens contacts, such as a Canon Cinema lens, you cannot adjust the aperture using the camcorder. Adjust the aperture using the lens.
- When using an EF lens that can correct the aperture value according to the position of the zoom, you can use the [▶ Camera Setup] ▶ [Iris] ▶ [Zoom-Iris Correct.] setting to activate this correction.

#### Momentary Automatic Aperture - Push Auto Iris

During manual aperture, you can use the push auto iris function to have the camcorder temporarily take control and automatically adjust the aperture (f/stop) for an optimal exposure.

#### Using an Assignable Button

To use the push auto iris function, you must first set an assignable button to [PUSH AUTO IRIS] in advance.

- 1 Set [► Camera Setup] ▶ [Iris] ▶ [Mode] to [Manual] (☐ 70).
  - This is only necessary when using a lens compatible with automatic aperture. For other lenses, [Manual] is the default setting and cannot be changed.
- 2 Set an assignable button to [PUSH AUTO IRIS] ( 111).
- 3 Press and hold the assignable button.
  - The camcorder will automatically adjust the aperture to obtain optimal exposure. As long as you hold the assignable button pressed down, A will appear on the screen next to the aperture value.
  - When you release the assignable button, the selected f/stop will be set as the aperture value. Automatic aperture mode will end and the A icon next to the aperture value will disappear.

#### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\square$  49), you can activate the push auto iris function remotely from a Wi-Fi enabled device using the Wi-Fi Remote application.

- 1 On the camcorder, set [ Camera Setup] (Iris] (Mode] to [Manual] ( 70).
  - This is only necessary when using a lens compatible with automatic aperture. For other lenses, [Manual] is the default setting and cannot be changed.

#### 2 Press [PUSH AUTO IRIS].

- The camcorder will automatically adjust the aperture to obtain optimal exposure. During the adjustment, May will appear on the camcorder's screen next to the aperture value.
- During the automatic adjustment, the aperture value on the Wi-Fi Remote screen will be grayed out. Once the adjustment is finished, the aperture value will turn black and be available again.



#### **Automatic Aperture**

When a lens compatible with automatic aperture is attached to the camcorder, you can have the camcorder automatically adjust the aperture (f/stop).

1 Open the aperture [Mode] submenu.


2 Select [Automatic] and then press SET.

 When the camcorder is set to automatic aperture, M will appear on the screen next to the aperture value.



72

If you set an assignable button to [Iris Mode] ( 111), you can press the
button to toggle between the [Automatic] and [Manual] settings when a
lens compatible with automatic aperture is attached to the camcorder.

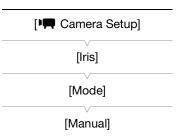

## **Exposure Compensation - AE Shift**

Use AE shift to compensate the exposure that was set using automatic aperture, in order to darken or lighten the image. You can select from 15 available AE shift levels.

You can compensate the exposure using the control dial on the camcorder or that on the grip unit. By default, both control dials' function is set to aperture control. If it has been changed, set a control dial's function to [Iris] in advance (\$\sum\_{\text{0}}\$ 69).



1 Open the [AE Shift] submenu.

[► Camera Setup] [AE Shift]

- 2 Select an AE shift level and then press SET.
  - The selected AE shift level will be displayed above the exposure bar and the camcorder will attempt to adjust the exposure accordingly.

[ Camera Setup]
[AE Shift]
[±0]


#### Available AE Shift Levels

+2.0	+1.5	+1.25	+1.0	+0.75	+0.5	+0.25	<b>±</b> 0
-0.25	-0.5	-0.75	-1.0	-1.25	-1.5	-2.0	

- During manual aperture, you can also set the AE shift level by turning a control dial assigned to [Iris] while holding the assignable button set to [PUSH AUTO IRIS] pressed down.
- If you set an assignable button to [AE Shift +] or [AE Shift -] ( 111), you can press the button to adjust the AE shift level.

### The Exposure Bar

The ▼ on top of the exposure bar indicates optimal exposure without any shift (AE±0); the scale markings indicate the deviation from optimal exposure in 1/2 EV increments. The indicator inside the exposure bar represents the current exposure. When the difference between current and optimal exposure is larger than ±2 EV, the indicator will flash at the edge of the exposure bar. Optimal exposure will change depending on the light metering mode (□ 73) used.



### **Light Metering Mode**

Select the light metering mode to match the recording conditions. Using the appropriate setting will ensure that the camcorder obtains the most suitable exposure level when automatic aperture is used.

1 Open the [Light Metering] submenu.

[Image Camera Setup] (Light Metering)

- 2 Select the desired option and then press SET.
  - The icon of the selected mode appears on the left of the screen.

# [Light Metering] [Standard]

### Options

[Backlight] \*: Suitable when recording backlit scenes.

[Standard]: Averages the light metered from the entire screen, giving more weight to the subject in the center.

[Spotlight] : Use this option when recording a scene in which only a certain part of the picture is lit, for example,

when the subject is lit by a spotlight.



• If you set an assignable button to [Backlight] or [Spotlight] ( 111), you can press the button to change the light metering mode.

74

The camcorder uses an electronic white balance process to calibrate the picture and ensure accurate colors under different lighting conditions. There are 3 methods of setting the white balance.

Custom white balance: You can use a white object to establish the white balance and set it to one of two custom white balance positions, 🛂 A or 🛂 B.

Set color temperature: Allows you to set the color temperature between 2,000 K and 15,000 K.

Preset white balance: Set the white balance to \* (daylight) or \* (incandescent lamp). Preset white balance settings can be further fine-tuned within a range of -9 to 9.

When recording under fluorescent lights, we recommend setting the custom white balance.

Operating modes: CAMERA MEDIA



- The [Color Matrix] and [White Balance] custom picture settings ( 121) take precedence over the white balance settings.
- You can use the [► Other Functions] → [Custom Function] → [Shockless WB] setting (□ 123) to make the transition look smoother when you change the white balance settings.

### Setting the White Balance

- 1 Set the white balance mode using the direct setting mode.
  - Press the FUNC. button to highlight the white balance icon and select the desired white balance mode.
  - To apply the setting as it is, press SET. To establish the custom white balance, fine-tune the preset white balance settings or change the color temperature, continue the procedure as described below before pressing SET.
  - For details refer to *Using the Direct Setting Mode* ( 61).

### If you selected one of the custom white balance settings ♣A or ♣B:

If a custom white balance has not yet been stored, the custom white balance icon ♣A or ♣B and default value (5,500 K) will flash slowly. To establish the custom white balance:

- 2 Point the camcorder at a white object so that it fills the whole screen.
  - Use the same lighting conditions you plan to use when recording.
- - The ♣ A or ♣ B icon will flash quickly.
  - Make sure the white object fills the screen until the procedure is completed.
  - After the icon stops flashing, the procedure is completed and the camcorder will exit the direct setting mode. The setting is retained even if you turn off the camcorder.

### If you selected one of the preset white balance settings, \* or \*:

You can fine-tune the preset values within a range of -9 to 9.

- 2 Press the № button.
  - On the screen: The adjustment value ±0 will appear next to the white balance icon, highlighted in orange.
     On the rear panel: The adjustment value ±0 will appear.



- 3 Push the joystick up/down or turn the SELECT dial to change the adjustment value and then press SET.
  - The selected adjustment value will be set and the camcorder will exit the direct setting mode.
  - On the screen: The selected adjustment value will appear next to the white balance icon.

    On the rear panel: The adjustment value display will disappear and the display will return to normal (all displays will reappear). The white balance fine-tuning icon # will appear to indicate that an adjustment has been made.

### If you selected the color temperature setting, **K**:

You can set the color temperature between 2,000 K and 15,000 K in 100 K increments.

- - On the screen: The default color temperature value (5,500 K) will be highlighted in orange. On the rear panel: The default color temperature value will appear.
- 3 Push the joystick up/down or turn the SELECT dial to change the color temperature value and then press SET.
  - The selected color temperature will be set and the camcorder will exit the direct setting mode.
  - On the screen: The selected color temperature will appear next to the white balance icon.
     On the rear panel: The color temperature value will disappear and the display will return to normal (all displays will reappear).

# (i) NOTES

• If you set an assignable button to [FUNC. WB] (\(\simega\) 111), you can press the button to enter the direct setting mode with the white balance icon highlighted and ready to be adjusted.

### Remote Operation Using Wi-Fi Remote


After completing the necessary preparations (\$\sum 49\$), you can adjust the white balance remotely from a Wi-Fi-enabled device using the Wi-Fi Remote application.

- 1 Press [♣A] on the Wi-Fi Remote screen.
- 2 Select the desired white balance mode.

### If you selected ☀, ☀ or **(**:

- 3 Press the adjustment value [∰ ±0] (☀, ☀) or color temperature [5500K] (▶) and then select the desired value from the list.
  - You may need to scroll up/down to see all the available values.

• The selected value will be displayed on the Wi-Fi Remote screen and will be applied on the camcorder.

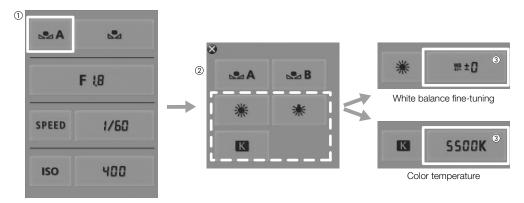


### If you selected SA or B:

- 3 Point the camcorder at a white object so that it fills the whole screen.
  - Use the same lighting conditions you plan to use when recording.
  - Make sure the white object fills the screen until the procedure is completed.

### 4 Press [♣].

- If a custom white balance has not yet been stored, [♣] will flash slowly.
- During the procedure, [♣] will flash quickly. When it stops flashing, the procedure is completed and the setting will be applied on the camcorder.

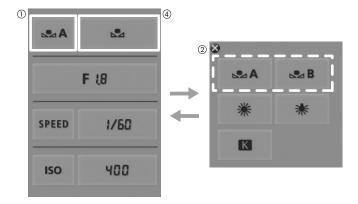

# (i) NOTES

- Using the custom white balance setting:
  - Readjust the custom white balance if you turn the ND filter on/off or when the light source has changed.
  - Very rarely and depending on the light source, ▶ may keep flashing (it will change to a slow flashing). You can still use the setting even in such case.

# Adjusting the Focus

**C300PI** The camcorder does not have automatic focus control and focusing is done manually using the focus ring on the attached lens.

The camcorder offers 3 ways to focus. The camcorder's AF mode can only be changed when a lens compatible with automatic aperture is attached to the camcorder.

Manual focus: Adjust the focus manually using the focus ring on the attached lens, or remotely, using the Wi-Fi Remote application.

One-shot AF: During manual focus, press an assignable button or use the Wi-Fi Remote application to temporarily let the camcorder focus automatically.

Continuous AF\*: The camcorder focuses automatically all the time.

\* Available only with lenses compatible with automatic aperture (\$\square\$ 192).

### C300 Focusing Methods and Required Settings

Focusing Method		Focus Mode Switch on the EF Lens	[PR Camera Setup] > [AF Mode] setting <sup>1</sup>	
Manual Focus	Focus Ring	MF or AF <sup>2</sup>		
Manual Focus	Wi-Fi Remote	AF	_	
One-shot AF	Assignable Button set to [ONE-SHOT AF]	AF	[One Shot]	
Olie-Silot Al	Wi-Fi Remote	, Al		
Continuous AF <sup>1</sup>		AF	[Continu.]	

<sup>&</sup>lt;sup>1</sup> Available only with lenses compatible with automatic aperture ( 192).

Operating modes: CAMERA MEDIA

### **Manual Focus**

Using the Focus Ring

Turn the focus ring on the lens to adjust the focus.

• ©300 When using an EF lens set the focus mode switch to MF. With some EF lenses, you may be able to operate the focus ring even when the focus mode switch on the lens is set to AF.

### **©300** Remote Operation Using Wi-Fi Remote

After completing the necessary preparations (\$\sum 49\$), you can adjust the focus remotely from a Wi-Fi-enabled device using the Wi-Fi Remote application.

- 1 Set the focus mode switch on the EF lens to AF (autofocus) mode.
  - [AF] will appear on the left of the screen.
- 2 Press one of the [FOCUS] controls to adjust the focus as necessary.
  - Press one of the controls on the [NEAR] side to focus closer or one of the controls on the [FAR] side to focus farther away.
  - There are three levels of adjustment [ < ]/[ > ] is the smallest and [<<]/[>>>] the largest.

<sup>&</sup>lt;sup>2</sup> Depending on the lens, the focus ring may be disabled when the focus mode switch is set to AF.



# (i) NOTES

- If the focus mode switch on the EF lens is set to MF, you will not be able control the focus through remote operation. Depending on the lens used, remote operation may not work correctly.
- If you operate the zoom after focusing, the focus on the subject may be lost.
- If you focus manually and then leave the camcorder with the power turned on, the focus on the subject may be lost after a while. This possible slight shift in focus is a result of the internal temperature rising in the camcorder and lens. Check the focus before resuming shooting.
- While the camcorder is focusing, do not touch the end of the lens or focus ring while they are moving.

### Using the Focus Assistance Functions


In order to focus more accurately, you can use two focus assistance functions – peaking, which creates a clearer contrast by emphasizing the outlines of the subject, and magnification, which enlarges the image on the screen. You can use both functions simultaneously for greater effect.


You can also use the [ $\blacktriangleright$  Other Functions]  $\blacktriangleright$  [Custom Function]  $\blacktriangleright$  [F. Assist. B&W] setting ( $\bigcirc$  123) to switch the screen to black & white while using the focus assistance functions.

### Peaking

The camcorder offers two peaking levels.

- 1 Press the PEAKING button.
  - The peaking icon (PAKI) or PAKE) appears at the lower center of the screen and the outlines in the image will be emphasized, depending on the focus.
  - Press the button again to turn off peaking.
- 2 Open the [Select] submenu (under [Peaking]) to select the peaking level.
  - [ ∠ LCD/VF Setup] [Select] (under [Peaking])
- 3 Select the desired level and then press SET.

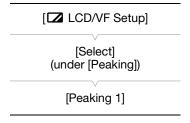

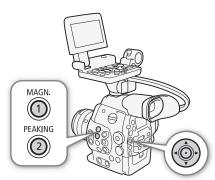

[ Camera Setup]

[AF Mode]

[One Shot]

### Magnification

- 1 Press the MAGN, button.
  - MAGN appears at the lower center of the screen and the center of the screen is magnified approximately 2 times\*.
  - A white frame representing the whole screen area is displayed on the top left of the screen. The orange frame within it represents the approximate part of the image shown magnified.
- 2 If necessary, use the joystick (▲▼ ◀►) or SELECT dial to move the orange frame around and check other parts of the image.
  - C300 Set the focus mode switch on an EF lens to MF in advance.
  - You can move the orange frame 5 steps vertically or horizontally. Press the CANCEL button to return the magnification frame to the center position.
- 3 Press the MAGN. button again to cancel the magnification.
- \* The magnification that appears on the LCD screen and on the viewfinder screen is different. The magnification also differs based on the video configuration.

# (i) NOTES

- Peaking/Magnification appears only on the camcorder screen. It will not appear on an external monitor connected to the camcorder and will not affect your recordings.
- When using the camcorder's screen to focus:
  - The camcorder features professional video scopes (\$\sum 99\$). You can display the edge monitor to help you focus even more accurately.
  - You can use peaking together with the edge monitor. In such case, the gain and frequency of the peaking effect will be adjusted automatically according to the gain settings of the edge monitor.

### © One-Shot AF

During manual focus, you can use the one-shot AF function to have the camcorder focus automatically only once on the subject at the center of the screen.

### Using an Assignable Button

To use the one-shot AF function, you must first set an assignable button to [ONE-SHOT AF] in advance.

1 Open the [AF Mode] submenu.

[ Camera Setup] (AF Mode]

• This submenu is available only with lenses compatible with automatic aperture. Otherwise, start from step 3.

2 Select [One Shot] and then press SET.

- 3 Set the focus mode switch on the EF lens to AF (autofocus) in advance.
  - [AF] will appear on the left of the screen.
- 4 Set an assignable button to [ONE-SHOT AF] ( 111).
- 5 Press and hold the assignable button.
  - The AF frame will appear at the center of the screen and the camcorder will focus automatically. When correct focus has been achieved, the AF frame turns green.
  - If the camcorder cannot focus automatically, the AF frame will turn red.
  - The AF frame will disappear when you release the assignable button.

After completing the necessary preparations ( 49), you can use the one-shot AF function remotely from a Wi-Fi enabled device using the Wi-Fi Remote application.

- 1 On the camcorder, set [ Camera Setup] (AF Mode] to [One Shot] ( 79).
  - This is only necessary when using a lens compatible with automatic aperture. For other lenses, [One Shot] is the default setting and cannot be changed.

### 2 Press [ONE-SHOT AF].

- An AF frame appears at the center of the live view screen and the camcorder will focus automatically.
- The AF frame turns green (correct focus) or red (when the camcorder cannot focus automatically) and then disappears after a few seconds.



### © Continuous AF


When a lens compatible with automatic aperture is attached to the camcorder, you can have the camcorder focus automatically.

[ Camera Setup]

[AF Mode]

[One Shot]

- 1 Set the focus mode switch on the EF lens to AF (autofocus) in
  - [AF] will appear on the left of the screen.
- 2 Open the [AF Mode] submenu.
  - [Image: Camera Setup] (AF Mode)
- 3 Select [Continu.] and then press SET.



# (i) NOTES

### About the autofocus (AF) functions:

- One-shot AF is available for any EF lens equipped with autofocus (AF) function; Continuous AF is available
  only for lenses compatible with automatic aperture (1192). Refer to the instruction manual of the lens
  used.
- Autofocus (one-shot AF or continuous AF) is not available during slow & fast motion recording mode.
- One-shot AF is not available when the shutter mode is set to [Slow] and the shutter speed is set to 1/4 or 1/3.
- The point where the camcorder focuses may change slightly depending on shooting conditions, such as subject, brightness and zoom position. Check the focus before resuming shooting.

80

- Autofocus may take longer in the following cases.
  - When the frame rate is set to 29.97P, 25.00P, 24.00P or 23.98P.
  - With some EF lenses, the camcorder may take longer to focus automatically or may not be able to focus correctly. Visit your local Canon Web site for the latest information.
- Autofocus may not work well on the following subjects or in the following cases. In such case, focus manually.
  - Reflective surfaces
  - Subjects with low contrast or without vertical lines
  - Fast moving subjects
  - Through dirty or wet windows
  - Night scenes

### **Onscreen Markers and Zebra Patterns**

Using onscreen markers allows you to make sure your subject is correctly framed and is within the appropriate safe area. The zebra patterns help you identify areas that are overexposed. The onscreen markers and zebra pattern will not affect your recordings.

Operating modes: CAMERA MEDIA

### **Displaying Onscreen Markers**

The camcorder offers 5 types of onscreen markers. You can display multiple onscreen markers simultaneously.

1 Open the [Markers] submenu.

[ ∠ LCD/VF Setup] ▶ [Markers]

- 2 Select a marker you wish to display, select [White] or [Gray] and then press SET.
  - Select [Off] to turn off the selected marker.
  - You can display multiple markers simultaneously. Repeat this step as necessary.
  - If you selected [Safety Zone] or [Aspect Marker], continue to step 3.
     Otherwise, you can skip to step 4.
- [Markers]

  [Center]
  [Horizontal]
  [Grid]
  [Safety Zone]
  [Aspect Marker]
- 3 Select [Safety Zone Area] or [Aspect Ratio], select the desired option and then press SET.
- 4 Select [Enable], select [On] and then press SET to enable the onscreen markers.
  - All of the selected onscreen markers will be displayed.
  - Select [Off] to turn off all onscreen markers.

### **Options**

[Center]: Displays a small marker that indicates the center of the screen. [Horizontal]: Displays a horizontal line to help you compose level shots.


[Grid]: Displays a grid that allows you to frame your shots correctly (horizontally and vertically).


[Safety Zone]: Displays indicators that show various safe areas, such as the action safe area and text safe area.

Available options for [Safety Zone Area] are [95%], [92.5%], [90%] and [80%].

[Aspect Marker]: Displays markers that indicate various aspect ratios to help you keep your shot within that area.

Available options for [Aspect Ratio] are [2.35:1], [1.85:1], [1.75:1], [1.66:1], [14:9], [13:9] and [4:3].

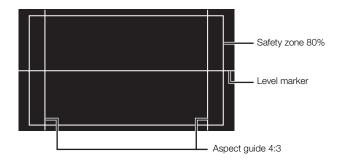

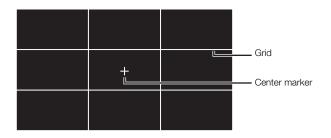


# (i) NOTES

- You can turn off all other onscreen displays, leaving only the onscreen markers (\$\sum\_{\sum}\$ 55).
- If you set an assignable button to [Markers] ( 111), you can press the button to turn the onscreen markers on and off.

### **Displaying Zebra Patterns**

The camcorder has a zebra pattern feature that shows black and white diagonal stripes over areas that are overexposed. This is displayed only on the screen and will not affect your recordings. There are two types of zebra patterns and you can display both simultaneously. Zebra 1 lets you identify areas within a certain range ( $\pm 5\%$  of a specified level) while zebra 2 lets you identify areas that are over a specified level. When you display both simultaneously and they overlap, only zebra 1 will be displayed in those areas.

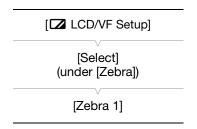

- 1 Open the zebra pattern [Select] submenu.
  - [ ∠ LCD/VF Setup] ▶ [Select] (under [Zebra])
- 2 Select [Zebra 1], [Zebra 2] or [Zebra 1&2] and then press SET.
- 3 Open the zebra level submenu.
  - [ LCD/VF Setup] ▶ [Zebra 1 Level] or [Zebra 2 Level]
- 4 Select a zebra level and then press SET.
- 5 Press the ZEBRA button to activate the selected zebra pattern.
  - Alternatively, before closing the menu, you can also select [Zebra], select [On] and then press SET.



# (i) NOTES

You can use the [ LCD/VF Setup] [Zebra HD Output] setting to display the zebra pattern on an external
monitor connected to the HD/SD SDI terminal (HD output only), SYNC OUT terminal (HD-Y signal output only)
or HDMI OUT terminal (HD output only).

# **Setting the Time Code**

In CAMERA mode, the camcorder can generate a time code signal and embed it in your recordings. You can have the camcorder output the time code signal from the HD/SD SDI terminal or TIME CODE terminal ( 90). In MEDIA mode, you can output the time code of the clip being played back through the same terminals. Additionally, you can superimpose the time code on video output from the HDMI OUT terminal or SYNC OUT terminal. For NTSC recordings, you can also select between a drop frame and non-drop frame time code. To synchronize the camcorder's time code to an external time code generator, refer to Synchronizing with an External Device ( 88).

Operating modes: CAMERA MEDIA

### Selecting the Running Mode

You can select the running mode of the camcorder's time code.

- 1 Open the time code [Mode] submenu.

  [00:00 TC/UB Setup] ▶ [Time Code] ▶ [Mode]
- 2 Select the desired option and then press SET.
  - If you selected [Regen.], you do not need to perform the rest of this
    procedure. If you selected [Preset] and would like to set the time
    code's initial value, see the following section Setting the Time Code's
    Initial Value.
- 3 After you select [Preset], open the time code [Run] submenu. [00:00 TC/UB Setup] ▶ [Time Code] ▶ [Run]
- 4 Select the desired option and then press SET.

### Options

[Preset]:

The time code starts from an initial value you can select in advance. The default initial time code is 00:00:00.00. The time code's running mode depends on the [Run] setting.

[Rec Run]: The time code runs only while recording so clips recorded consecutively on the same CF card will have continuous time codes.

[Free Run]:The time code starts running the moment you press SET to select this option and keeps running regardless of the camcorder's operation.

[Regen.]: The camcorder will read the selected CF card and the time code will continue from the last recorded time code on the CF card. The time code runs only while recording so clips recorded consecutively on the same CF card will have continuous time codes.

[ <b>00:00</b> TC/UB Setup]
[Time Code]
[Mode]
[Regen.]
[ <b>00:00</b> TC/UB Setup]
[Time Code]
[Run]

[00:00 TC/UB Setup]

[Time Code]

[Setting]

### Setting the Time Code's Initial Value

If you set the time code mode to [Preset], you can set the initial value of the time code.

1 Open the time code [Setting] submenu.

[00:00 TC/UB Setup] ➤ [Time Code] ➤ [Setting]

- 2 Select [Set] and then press SET.
  - The time code setting screen appears with an orange selection frame indicating the hours.
  - To reset the time code to [00:00:00.00], select [Reset] instead. If the running mode is set to [Free Run], the time code will be reset the moment you press SET and keep running continuously from 00:00:00.00.
- 3 Use the joystick (▲▼) or SELECT dial to set the hours and press SET to move to the minutes.
- 4 Change the rest of the fields (minutes, seconds, frame) in the same way.
  - Press the CANCEL button to close the screen without setting the time code.
- 5 Select [Set] and press SET to close the screen.
  - If the running mode is set to [Free Run], the time code will start running from the selected time code the moment you press SET.

### Selecting Drop or Non-Drop Frame


When [ $\mbox{\ensuremath{\mbox{$\lorep8$}}}$  Other Functions]  $\mbox{\ensuremath{\mbox{$\lorep8$}}}$  [NTSC/PAL] is set to [NTSC], you can select between a drop frame (DF) or non-drop frame (NDF) time code, depending on how you plan to use your recordings.

In the following cases, the time code is set to non-drop frame (NDF) and cannot be changed.

- [✔ Other Functions] [NTSC/PAL] is set to [PAL]
- [► Other Functions] ► [24.00P] is set to [On]
- 1 Open the [DF/NDF] submenu.

[00:00 TC/UB Setup] ► [Time Code] ► [DF/NDF]

- 2 Select [DF] or [NDF] and then press SET.
  - The time code display will differ depending on the setting. When you select [DF], the time code will appear
    as [00:00:00.00]; when you select [NDF], it will appear as [00:00:00:00].

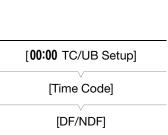

[DF]

### Putting the Time Code Display on Hold

If you set an assignable button to [Time Code Hold] ( $\square$  111), you can press the button to freeze the display of the time code\*. While the time code display is put on hold, [H] will appear on the screen next to the time code and [HOLD] will appear on the rear panel.

The time code continues to run normally while the time code display is on hold. When you resume the time code display, the current time code will be displayed.

\* The time code signal output from the HD/SD SDI terminal or TIME CODE terminal will not be put on hold. The time code superimposed on the video signal output from the other terminals will be put on hold.

### About the Time Code Display

An icon may appear next to the time code depending on the operation. Refer to the following table.

Icon	Description
R	The time code is set to [Regen.].
Р	The time code is set to [Preset] and the running mode is set to [Rec Run].
F	The time code is set to [Preset] and the running mode is set to [Free Run].
Е	Time code signal is coming from an external source.
Н	Time code display is on hold.
No icon	Time code during clip playback.

# i NOTES


- When [✔ Other Functions] ▶ [24.00P] is set to [On] or [✔ Other Functions] ▶ [Frame Rate] is set to [23.98P], the frames value in the time code runs from 0 to 23. When [Frame Rate] is set to [25.00P], [50.00i] or [50.00P], it runs from 0 to 24. For other [Frame Rate] settings, it runs from 0 to 29.
- When you are using interval recording, frame recording or slow & fast motion recording mode, you cannot select the [Free Run] running mode. Conversely, when you are using pre-recording mode, [Free Run] is set automatically and cannot be changed.
- When you mix drop frame and non-drop frame time codes, there might be a discontinuity in the time code at the point where the recording starts.
- As long as the built-in rechargeable lithium battery is charged and you selected the [Free Run] running mode, the time code continues to run even if you disconnect all other power sources. However, this is less accurate than when the camcorder is on.
- If you set an assignable button to [Time Code] (☐ 111), you can press the button to open the [00:00 TC/UB Setup] ➤ [Time Code] submenu.

# Setting the User Bit

The user bit display can be selected from the date or the time of recording, or an identification code consisting of 8 characters in the hexadecimal system. There are sixteen possible characters: the numbers 0 to 9 and the letters A to F.

If user bit information is being received along with an external time code, you can also record the external user bit on the recording media.

Operating modes: CAMERA MEDIA

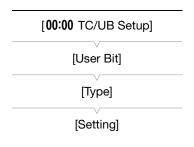

1 Open the user bit [Type] submenu.

[00:00 TC/UB Setup] > [User Bit] > [Type]

- 2 Select the desired user bit type and press SET.
  - Select [Setting] to set your own identification code, [Time] to use the time as user bit, or [Date] to use the
    date as the user bit.
  - If you selected [Time] or [Date], you do not need to perform the rest of the procedure. If you selected [Setting], continue the procedure to set the identification code.
- 3 Select [Set] and then press SET.
  - The user bit setting screen appears with an orange selection frame on the leftmost digit.
  - To reset the user bit to [00 00 00 00], select [Reset] instead.
- 4 Use the joystick (▲▼) or SELECT dial to select the first character and press SET to move to the next digit.
  - Change the rest of the digits in the same way.
  - Press the CANCEL button to close the screen without setting the user bit.
- 5 Select [Set] and press SET to close the screen.

# Synchronizing with an External Device

Using genlock synchronization, you can synchronize this camcorder's video signal to that of an external video device. Similarly, using an external time code signal, you can synchronize this camcorder's time code to the external signal. Using the external time code signal with multiple cameras allows you to set up a multi-camera recording. You can also output the time code signal from this camcorder to achieve the same result. If you output the time code from the HD/SD SDI terminal to an editing device, the editor can create video with the same time code.

### Connecting an External Device


When synchronizing the camcorder to an external signal, input a reference video signal\* through the GENLOCK terminal or output the camcorder's signal as a reference signal for an external device through the SYNC OUT terminal.

When synchronizing a time code signal, use the TIME CODE terminal. Be sure to set the TIME CODE terminal to input or output in advance.

Connect the external device to the camcorder as shown in the following diagram.

\* For the reference video signal, you can use an analog blackburst or tri-level signal.

### Connection Diagram

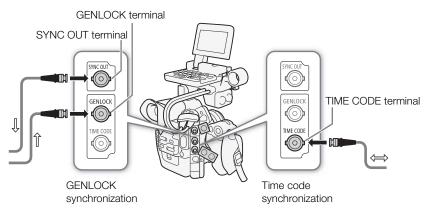


### Reference Video Signal Input (Genlock Synchronization)

When a reference sync signal (analog blackburst or tri-level signal) is input through the GENLOCK terminal, the phases of the camcorder's V and H sync will automatically be synchronized to it. The phase difference between the external Genlock signal and the camcorder is initially set to 0. The H phase can be adjusted within the range of approximately ±0.4 H (HD equivalent).

Operating modes: CAMERA MEDIA

- 1 Open the [Genlock Adjust.] submenu.
  - [★ Other Functions] ★ [Genlock Adjust.]
- 2 Adjust the phase to the desired level, select [Set] and then press SET.
  - Use the joystick (▲▼) or SELECT dial to select the value for each field and press SET to move to the next field.



### Time Code Signal Input

An external SMPTE-standard LTC timing signal received from the TIME CODE terminal will be recorded as the time code. The user bit of the external timing signal can also be recorded. Before connecting the device, set the TIME CODE terminal to input. Also, you must set the running mode of the time code to [Free Run] ( \$\sum 84).

[00:00 TC/UB Setup] [Time Code] [TC In/Out] [ln]

[00:00 TC/UB Setup]

Operating modes: (CAMERA)



- 1 Open the [TC In/Out] submenu.
  - [00:00 TC/UB Setup] ▶ [Time Code] ▶ [TC In/Out]
- 2 Select [In] and then press SET.

### Recording the User Bit of an External Signal

The user bit of an external time code signal can also be recorded with the time code itself.

- 1 Open the user bit [Rec Mode] submenu.
- 2 Select [External] and then press SET.



### $(\,\mathbf{i}\,)$ notes

- The Genlock signal synchronization stabilizes after approximately 10 seconds. When the camcorder locks on an external Genlock signal, Gen. will appear on the upper right of the screen.
- If the external Genlock signal is incorrect or there is no input signal, the external time code that is recorded may be incorrect.
- While a time code signal is being received, the external time code's drop-frame bit will be used (if the external time code is non-drop frame, [NDF] will appear on the rear panel).
- When an external time code signal is received, the camcorder's own time code will be synchronized to it and the synchronization will be maintained even if you disconnect the cable from the TIME CODE terminal. However, performing any of the following actions while the cable is not connected will cause the synchronization to be disrupted; the correct time code will be restored once you reconnect the cable.
  - Turning the camcorder off/on
  - Changing the operating mode to MEDIA mode
  - Changing the video configuration
  - Changing the frame rate
- If the external time code signal is incorrect or there is no input signal, the internal time code set in the [00:00 TC/UB Setup] [Time Code] submenu will be recorded instead.
- When the camcorder locks on an external time code signal, [EXT-LOCK] appears on the rear panel.

### Reference Video Signal Output

You can output the camcorder's video signal as a reference sync signal (analog blackburst or tri-level signal) through the SYNC OUT terminal to synchronize an external device to this camcorder.


Operating modes: CAMERA MEDIA

1 Open the [SYNC Output] submenu.

[ Video Setup] ▶ [SYNC Output]

2 Select [HD Sync] (tri-level signal) or [Blk Burst]\* (black burst) and then press SET.

\* Not available for 24.00P recordings.



### Time Code Signal Output

The time code will be output from the TIME CODE terminal as an SMPTE-standard LTC timing signal. The user bit will also be output. Before connecting the device, set [00:00 TC/UB Setup] > [Time Code] > [TC In/Out] to [Out] to change the TIME CODE terminal to output (☐ 89). If you set the [☐ Video Setup] > [SDI Output] setting to [HD] or [SD], the embedded time code will be output from the HD/SD SDI terminal.

Operating modes: CAMERA MEDIA

(i) NOTES

• The user bit of the time code signal is output while the camcorder is recording in CAMERA mode or during playback of a clip in MEDIA mode. When [✔ Other Functions] ◆ [24.00P] is set to [On] or [✔ Other Functions] ◆ [Frame Rate] is set to [23.98P] and the [00:00 TC/UB Setup] ◆ [User Bit] ◆ [Output Mode] setting is set to [Pulldown], the user bit will be 2:3 pulldown data. In other words, when a 23.98P or 24.00P recording is output from the HD/SD SDI terminal, the signal is converted to 59.94i / 59.94P or 60.00i / 60.00P using the 2:3 pulldown method. An external device can receive the data used in this conversion (2:3 pulldown data) to convert the signal to the original 1080/23.98P or 1080/24.00P specifications.

90

# **Recording Audio**

The camcorder features two-channel linear PCM audio recording and playback with a sampling frequency of 48 kHz. You can record audio using commercially available microphones (XLR terminal, MIC terminal) or line input (XLR terminal). You can select the audio input independently for channel 1 and channel 2. An audio signal will also be output with the video signal from the HD/SD SDI terminal. You can record this audio signal on an external recorder.

Operating modes: CAMERA MEDIA


### Connecting an External Microphone or External Audio Input Source to the Camcorder

In order to use the XLR terminals, the monitor unit must be attached to the camcorder. The monitor unit features two XLR terminals (CH1/CH2) that can be used to record audio independently to the two audio channels. In addition to XLR microphones, you can also attach to the camcorder's MIC terminal commercially available condenser microphones with their own power supply and a  $\emptyset$  3.5 mm mini-stereo plug\*. If the monitor unit is attached to the camcorder, you can use the microphone holder on the monitor unit.

\* For PAL recordings, use commercially available microphones with a cable no longer than 3 m.

Follow the procedure below to attach a microphone (refer also to the following illustration). To connect an external device to the camcorder, plug the device's cable into the camcorder's XLR terminal (4).

- 1 Loosen the microphone lock screw (1), open the microphone holder and insert the microphone (2).
- 2 Tighten the lock screw and put the microphone cable through the microphone cable clamp under the microphone holder (③).
- 3 Plug the microphone cable into the desired XLR terminal (4) or the MIC terminal (5).

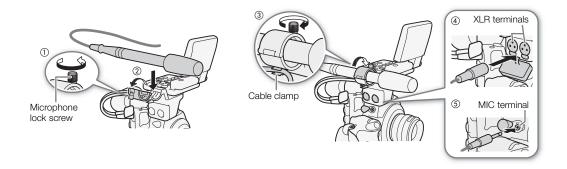


### Selecting the Audio Input from the XLR Terminals

Using the XLR terminals CH1 and CH2, you can record audio independently to the two audio channels from a microphone or analog audio input source. Note that the camcorder's MIC terminal is given priority over the XLR terminals. To record audio from the XLR terminals, be sure not to connect any microphones to the MIC terminal.

### Switching Between Microphone and Line Input

Set the XLR terminal switch of the desired channel to LINE or MIC.

- To supply a microphone with phantom power, set the switch to MIC+48V instead. Make sure to connect the microphone first, before turning the phantom power on. Keep the microphone connected when turning off the phantom power.
- When using the XLR terminal to record to only one channel, use the CH1 terminal.

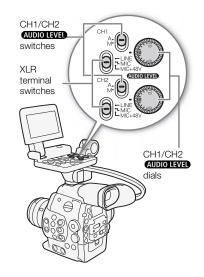

### Selecting the Recording Channel

You can select to which channel the camcorder will record audio.

- 1 Open the [XLR Rec Channel] submenu.
  - [♪)) Audio Setup] > [Audio Input] > [XLR Rec Channel]
- 2 Select the desired option and then press SET.

### Options


[CH1]: Records audio to each channel separately. Audio input

into CH1 is recorded to channel 1, while audio input into

CH2 is recorded to channel 2.

[CH1/CH2]: Audio input into CH1 is recorded to both channels. Audio

input into CH2 will not be recorded.

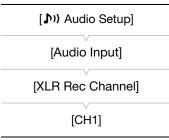



 When connecting a microphone or device that does not support phantom power, make sure to set the XLR terminal switch to MIC or LINE, respectively. If you set the switch to MIC+48V, the microphone or device may be damaged.

### Adjusting the Audio Level from the XLR Terminals

You can set the audio recording level for audio input from the XLR terminals to auto or manual for each channel.

### Automatic Audio Level Adjustment

Set the AUDIO LEVEL switch of the desired channel to A (automatic) to let the camcorder automatically adjust that channel's audio level.

# **NOTES**

 When both CH1 and CH2 are set to the same audio input (external microphone or external line input), if the audio level is set to automatic, you can use the (♪)) Audio Setup) > (Audio Input) > (XLR ALC Link) setting to link the audio level adjustment of both channels.



CH1/CH2

AUDIO LEVEL switches

### Manual Audio Level Adjustment

You can set the audio level for each channel manually from - to 18 dB.

- 1 Set the AUDIO LEVEL switch of the desired channel to M.
- 2 Turn the corresponding **AUDIO LEVEL** dial to adjust the audio level.
  - For reference, the 0 corresponds to -∞, 5 corresponds to 0 dB. and 10 corresponds to +18 dB.
  - As a guideline, adjust the audio recording level so that the audio level meter on the screen or rear panel will go to the right of the 18 dB mark (one mark right of the 20 dB mark) only occasionally.
  - Closing the protective cover for XLR audio controls will prevent the audio controls from being changed inadvertently.

# CH1/CH2 **AUDIO LEVEL** dials

# (i) NOTES

- If at least one of the channels is set to manual audio level adjustment, you can also activate the audio peak limiter to prevent audio distortions. When activated, the audio peak limiter will limit the amplitude of audio input signals when they exceed -6 dBFS. Use the [1) Audio Setup (Audio Input) (Limiter) setting.
- · We recommend using headphones when adjusting the audio level. If the input level is too high, audio may become distorted even if the audio level indicator shows an appropriate level.
- If you set an assignable button to [Audio Level] ([ 111), you can press the button to turn the onscreen audio level indicator on and off.

### Adjusting the Microphone's Sensitivity

You can adjust the microphone's sensitivity if the XLR terminal switch is set to MIC or MIC+48V.

- 1 Open the desired XLR terminal's sensitivity submenu.
  - (N) Audio Setup (Audio Input) (XLR1 Mic Trimming) or (XLR2 Mic Trimming)
- 2 Select the desired level and then press SET.

### **Available Sensitivity Levels**

|--|

[Audio Setup]

[Audio Input]

[XLR1 Mic Trimming]

[XLR2 Mic Trimming]

### Activating the Microphone's Attenuator

You can activate the microphone's attenuator (20 dB) if the XLR terminal switch is set to MIC or MIC+48V.

- 1 Open the desired XLR terminal's microphone attenuator submenu. [♠1) Audio Setup] ◆ [Audio Input] ◆ [XLR1 Mic Att.] or [XLR2 Mic Att.]
- 2 Select [On] and then press SET.

# [Audio Setup] [Audio Input] [XLR1 Mic Att.] [XLR2 Mic Att.]


### Adjusting the Audio Level from the MIC Terminal

You can adjust the audio recording level of a microphone attached to the MIC terminal to auto or manual. You can set the audio level manually within a range of 0 to 99.

- 1 Open the [MIC Mode] submenu.
  - (Audio Setup) (Audio Input) (MIC Mode)
- 2 Select [Automatic] or [Manual] and then press SET.
  - If you selected [Automatic], you do not need to perform the rest of the procedure. If you selected [Manual], continue the procedure to set the microphone's audio recording level.
- 3 Open the [MIC Level] submenu.

[**)** Audio Setup] (Audio Input) (MIC Level)

- 4 Use the joystick (▲▼) or SELECT dial to set the audio recording level and then press SET.
  - As a guideline, adjust the audio recording level so that the audio level meter on the screen or rear panel will go to the right of the 18 dB mark (one mark right of the 20 dB mark) only occasionally.

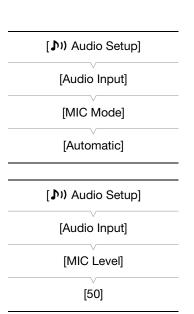

# (i) NOTES

- We recommend using headphones when adjusting the audio level. If the input level is too high, audio may become distorted even if the audio level indicator shows an appropriate level.
- If you set an assignable button to [Audio Level] ( 111), you can press the button to turn the onscreen audio level indicator on and off.

### Activating the Microphone's Attenuator

If the audio level is too high and the sound sounds distorted, activate the microphone attenuator (20 dB).

1 Open the [MIC Att.] submenu.

[ **)** Audio Setup] (Audio Input) (MIC Att.)

2 Select [On] and then press SET.

[🔊) Audio Setup]
[Audio Input]
[MIC Att.]
[Off]


### Monitoring the Audio with Headphones


Connect headphones\* to the \(\Omega\) (headphone) terminal to monitor the recorded audio. Press the HEADPHONE +/- buttons to adjust the volume.

\* For PAL recordings, use commercially available headphones with a cable no longer than 3 m.



You can also adjust the headphone volume with the [1) Audio Setup]
 [Audio Output] [Headphone Volume] setting.



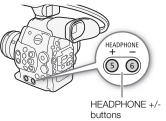

### Selecting the Audio Channel

You can select the audio channel that is output from the  $\Omega$  (headphone) terminal.

Operating modes: CAMERA

CAMERA MEDIA

1 Open the [Channel] submenu.

[**J**)) Audio Setup] (Audio Output) (Channel)

2 Select the desired option and then press SET.

# [Audio Setup] [Audio Output] [Channel] [CH1/CH2]

### **Options**

 $[CH1/CH2]: \quad \hbox{Audio from CH1 is output from the left audio channel and audio from CH2 is output from the right audio}$ 

channel.

[CH1/CH1]: Audio from CH1 is output from both the left and right audio channels. [CH2/CH2]: Audio from CH2 is output from both the left and right audio channels.

[All/All]: Audio from CH1 and CH2 is mixed and output from both the left and right audio channels.

# (i) NOTES

 If you set an assignable button to [Audio Output CH] ( 111), you can press the button to change the audio channel directly.

# **Using Metadata**

The camcorder automatically adds metadata to clips while they are being recorded. You can use the supplied **Canon XF Utility** software to check and search for specific metadata. You can also create and transfer a user memo remotely using the Wi-Fi Remote application ( $\bigcirc$  49).

### Metadata Components

Metadata		Checking content				
IVI <del>C</del> IAUAIA	Camcorder	Canon XF Utility	Wi-Fi Remote	Canon XF Utility		
User Memo: clip title, creator, location and description.	_	<b>●</b> <sup>1</sup>	•	•		
GPS information: altitude, latitude and longitude.	●2	<b>●</b> <sup>3</sup>	•	•		
Recording data: Shutter speed, ISO speed/gain value, etc.	_4	_	-	•		
Unique Material Identifiers (UMID): country, organization and user codes based on the SMPTE standard.	( <u></u> 167)	-	-	-		

<sup>&</sup>lt;sup>1</sup> User memo files need to be created using the software and saved on the SD card in advance.

Operating modes: CAMERA MEDIA

### Setting a User Memo Created with Canon XF Utility

Before you can add a user memo, you must first install the supplied **Canon XF Utility** software ( 143). Next, create the user memo and then save it to an SD card. Once you insert the SD card in the camcorder and select the user memo, it will be added to clips you record.

For details on using the supplied software, refer to the instruction manual that is installed with the **Canon XF Utility** software ( 149).

- 1 Use Canon XF Utility to save a user memo to an SD card.
  - For details, refer to Managing User Memo Profiles in the Canon XF Utility Instruction Manual.
- 2 Insert the SD card into the SD card slot of the camcorder.

 You must set the user memo before you start recording for it to be added to the clip. You cannot change the user memo already added to a clip using the camcorder but you can do so with the Canon XF Utility software.

3 Open the metadata [Setting] submenu.  [✔ Other Functions] ✔ [Set Metadata] ✔ [Setting]	[✔ Other Functions]
4 Select [SD Card] and then press SET.	[Set Metadata]
5 Open the [User Memo] submenu.  [✔ Other Functions] ✔ [Set Metadata] ✔ [User Memo]	[Setting]
<ul> <li>6 Select the file name of the desired user memo and then press SET.</li> <li>The (MEMO) icon appears on the right of the screen.</li> <li>Select [Off] to record clips without a user memo.</li> </ul>	[SD Card]
NOTES  After you set a user memo, do not remove the SD card while you are recording. If the SD card is removed, the user memo will not be added to the clip.	[ <b>℃</b> Other Functions]  [Set Metadata]

[User Memo]

<sup>&</sup>lt;sup>2</sup> Only when an optional GP-E1 GPS Receiver is attached to the camcorder. While recording, GPS information is recorded automatically by the camcorder (

103).

<sup>&</sup>lt;sup>3</sup> GPS information can only be added to clips already recorded.

<sup>&</sup>lt;sup>4</sup> Recording data is logged automatically by the camcorder.

### Setting a User Memo Using Wi-Fi Remote

After completing the necessary preparations ( 49), you can create a user memo profile and transfer it to the camcorder from a Wi-Fi-enabled device using the Wi-Fi Remote application. Using the Wi-Fi Remote application you have two additional advantages over user memos created with **Canon XF Utility**: you can change the user memo of the last clip recorded, even if you did not specify a user memo in advance; and you can enter manually the GPS information of your shooting location.

- 1 Press the [Metadata Input] tab on the Wi-Fi Remote screen.
- 2 Press [(\*\*) Activate].
  - Alternatively, on the camcorder, you can set [✔ Other Functions] → [Set Metadata] → [Setting] to [Remote].
- 3 Fill the necessary user memo and GPS information fields.
  - You can press [Clear] to clear the information entered into each field.
- 4 Press one of the transfer options to transfer the metadata to the camcorder.
  - [Metadata correctly transferred] will be displayed on the Wi-Fi Remote screen and the metadata will be transferred and applied to the clips on the camcorder.
- 5 Press X to close the message.

#### **Options**

[Apply from Next]: Adds the metadata you set in Wi-Fi Remote to all clips recorded after the transfer.

[Overwrite Prev.]: Only available after recording a clip. Adds the metadata you set in Wi-Fi Remote to all clips recorded

after the transfer and also to the last clip recorded (overwriting any user memo that may have been

recorded previously with the clip).

[Overwrite]: Only available while recording a clip. Adds the metadata you set in Wi-Fi Remote to the clip that is

being recorded (overwriting any previous user memo). It will also add this metadata to all clips

recorded after the transfer.



# (i) NOTES

- The metadata sent to the camcorder from Wi-Fi Remote will be lost in the following cases.
  - If the camcorder was turned off.
  - If the [ Other Functions] [Set Metadata] [Setting] setting was changed.
- Metadata sent to the camcorder from Wi-Fi Remote will not be added to relay clips recorded before the switch to the current CF card.

# Colors Bars/Audio Reference Signal

You can have the camcorder generate and record color bars and a 1 kHz audio reference signal and output them from the HD/SD SDI terminal, HDMI OUT terminal, SYNC OUT terminal and  $\Omega$  (headphone) terminal<sup>2</sup>.

- <sup>1</sup> Outputs color bars only.
- <sup>2</sup> Outputs audio reference signal only.

Operating modes: CAMERA

### **Recording Color Bars**


You can choose between SMPTE standard-definition color bars, EBU color bars and ARIB multi-format HDTV color bars.

- 1 Open the color bars [Type] submenu.
  - [► Camera Setup] [Color Bars] [Type]
- 2 Select the type of color bars and then press SET.
- 3 Open the [Enable] submenu to activate the color bars.
  - [► Camera Setup] (Color Bars) (Enable)
- 4 Select [On] and then press SET.
  - The selected color bars appear on the screen and will be recorded when you press the START/STOP button.
  - Turning the camcorder off or changing the operating mode to MEDIA mode will deactivate the color bars.
  - Alternatively, if you set an assignable button to [Color Bars] (
     111), you can press the button to activate the color bars.

### Recording an Audio Reference Signal

The camcorder can output a 1 kHz audio reference signal with the color bars.

- 1 Open the [1 kHz Tone] submenu.
  - (♣) Audio Setup] ♦ [Audio Input] ♦ [1 kHz Tone]
- 2 Select the desired level and then press SET.
  - Available levels are -12 dB, -18 dB and -20 dB.
  - Select [Off] to turn off the signal.
  - The signal is output at the selected level and will be recorded when you press the START/STOP button.

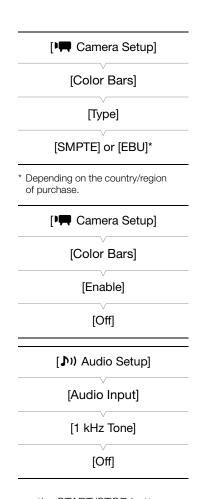

# **Video Scopes**

The camcorder can display a simplified waveform monitor or vectorscope. It can also display an edge monitor\* to help you focus. The video scopes appear only on the LCD screen. They do not appear in the viewfinder or on an external monitor. In order to use the video scopes, the monitor unit must be attached to the camcorder.

\* The edge monitor looks at the focus of the entire picture and displays the results as a waveform. The edge monitor is available only in CAMERA mode.

### Displaying a Video Scope

Press the WFM button (waveform monitor or vectorscope) or EDGE MON. button (edge monitor, only in CAMERA) mode).

- The waveform monitor will appear in a window on the lower right of the screen.
- You can repeatedly press the WFM button to activate the video scopes in the following sequence.

Waveform monitor → Vectorscope → Off

 Alternatively, you can display the video scopes using [
 ✓ Other Functions] > [WFM (LCD)] > [Setting]. Select [WFM] for the waveform monitor, [VS] for the vectorscope or [Edge Mon.] for the edge monitor.



### Configuring the Waveform Monitor

The camcorder's waveform monitor function offers 5 modes. You can also change the gain.

Operating modes: CAMERA MEDIA

- 1 Open the [Waveform Monitor] submenu.
  - [✔ Other Functions] [WFM (LCD)] [Waveform Monitor]
- 2 Select the desired option and then press SET.
  - If you do not need to change the gain, you do not need to perform steps 3 and 4.
- 3 Open the waveform monitor [Gain] submenu.
  - [✔ Other Functions] ▶ [WFM (LCD)] ▶ [Gain] (under [Waveform Monitor])
- 4 Select [1x] or [2x] and then press SET.


### Options

[Line]: Sets the waveform monitor to line display mode.

[Line+Spot]: The waveform of the area in the red frame is displayed in red on top of the [Line] mode waveform.

[Field]: Sets the waveform monitor to field display mode.

[RGB]: Functions like an RGB parade scope. [YPbPr]: Functions like a YPbPr parade scope.

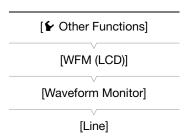

# 100

### Configuring the Vectorscope

The camcorder's vectorscope function offers 2 modes. You can also change the gain.

Operating modes: CAMERA

CAMERA MEDIA

1 Open the [Vectorscope] submenu.

[✔ Other Functions] [WFM (LCD)] [Vectorscope]

- 2 Select the desired option and then press SET.
  - If you do not need to change the gain, you do not need to perform steps 3 and 4.
- 3 Open the vectorscope [Gain] submenu.
  - [✔ Other Functions] ▶ [WFM (LCD)] ▶ [Gain] (under [Vectorscope])
- 4 Select [1x] or [5x] and then press SET.

### **Options**

[Spot]: The color signal of the area in the red frame is displayed in red on top of the [Normal] mode waveform.

[Normal]: Displays the vectorscope.

### Configuring the Edge Monitor

Using this video scope allows you to focus with more precision. You can use the edge monitor along with the other focus assistance functions (278). The edge monitor features 2 modes.


Operating modes: CAMERA

CAMERA MEDIA

- 1 Open the [Edge Monitor] submenu.
  - [✔ Other Functions] ▶ [WFM (LCD)] ▶ [Edge Monitor]
- 2 Select the desired option and then press SET.
  - If you do not need to change the gain, you do not need to perform steps 3 and 4.
- 3 Open the edge monitor [Gain] submenu.
  - [✔ Other Functions] [WFM (LCD)] [Gain] (under [Edge Monitor])
- 4 Select the desired gain value and then press SET.

### **Options**

- [Type 1]: The waveform that represents the focus of the entire picture is displayed in green. In addition, the waveform of the area in the three red frames is displayed in red on top of the previous waveform.
- [Type 2]: This mode displays the edge monitor with the waveform monitor in [Line+Spot] mode. The waveform monitor appears on the left in green while the edge monitor appears on the right in blue. The waveform of the area in the red frame is displayed in red on top of the edge monitor waveform.

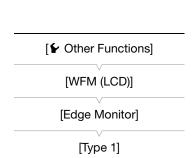

[ Other Functions]

[WFM (LCD)]

[Vectorscope]

[Normal]

# Adding Marks while Recording

When recording, you can flag an important shot in a clip by adding a "shot mark" (■). There are two types of shot marks, shot mark 1 (■) and shot mark 2 (■), and you can add either or both types to a single clip. You can also add an OK mark (■) or check mark (■) to the entire clip to flag clips you want to set apart. You can add all four types of marks remotely using the Wi-Fi Remote application.

When the camcorder is in MEDIA mode, you can add or delete shot marks ( 136). You can also display an index screen of all the shot marks ( 135), allowing you to find a particular scene in a clip more quickly.

Operating modes: CAMERA MEDIA

### Adding Shot Marks while Recording


To add a shot mark to a clip while recording, you must first set in advance an assignable button to [Add Shot Mark 1] or [Add Shot Mark 2].

- 1 Set an assignable button to [Add Shot Mark 1] or [Add Shot Mark 2] ( 111).
  - To add both shot marks, set one assignable button to [Add Shot Mark 1] and another assignable button to [Add Shot Mark 2].
- 2 While you are recording, press the assignable button at the beginning of the shot you wish to mark.
  - A message indicating the shot mark will appear and the selected shot mark will be added to the current frame of the clip.
  - You can press the button again to add another shot mark. Up to 100 shot marks ( and marks combined) can be added to a single clip.

### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( 49), you can set a shot mark ( or ) remotely from a Wi-Fi-enabled device using the Wi-Fi Remote application.

- 1 While recording a clip, press [SHOT MARK1] on the Wi-Fi Remote screen to set a shot mark 1 or [SHOT MARK2] to set a shot mark 2.
  - [Shot Mark1] or [Shot Mark2] will be displayed on the Wi-Fi Remote screen and the shot mark will be applied to the clip.
- 2 Press \text{\text{\text{\text{N}}}} to close the message.

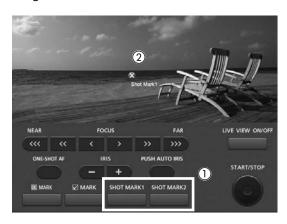

- 102
- There may be up to a 0.5 second delay from when you press the button to when the camcorder adds the shot
  mark. When using the Wi-Fi Remote application, the delay may be longer depending on the conditions of the
  wireless signal.
- When you are using interval recording or frame recording mode, you cannot add shot marks to a clip.
- When a clip contains either shot mark, S will appear next to the clip's thumbnail in the playback index screen.

### Adding an 🛚 Mark or 🗹 Mark to the Last Clip Recorded

After recording an important clip, you can add an OK mark (M) or check mark (V) to the clip to flag it and set it apart. When the camcorder is in MEDIA mode, you can display an index screen that contains only clips with an M mark or only clips with a M mark (M) 126). Furthermore, you can use the M mark to protect important clips, as clips with an M mark cannot be deleted.


To add an M mark or mark to the last clip recorded in mode, you must first set in advance an assignable button to [Add M Mark] or [Add M Mark].

- 1 Set an assignable button to [Add M Mark] or [Add M Mark] (☐ 111).
  - To add both types of clip marks (to different clips), set one assignable button to [Add Mark] and another assignable button to [Add Mark].
- 2 After recording a clip, press the assignable button.
  - A message indicating the clip mark will appear and the selected clip mark will be added to the clip.

### Remote Operation Using Wi-Fi Remote

After completing the necessary preparations ( $\bigcirc$  49), you can set an  $\blacksquare$  mark or a  $\blacksquare$  mark remotely from a Wi-Fi-enabled device using the Wi-Fi Remote application.

- 1 After recording a clip, press [ MARK] on the Wi-Fi Remote screen to set a an M mark or MARK] to set a ✓ mark.
  - [OK Mark] or [Check Mark] will be displayed on the Wi-Fi Remote screen and the mark will be applied to the clip.
- 2 Press to close the message.

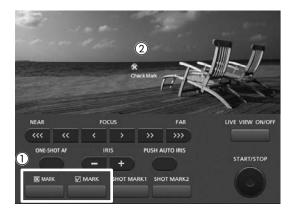

# (i) NOTES


A clip cannot have both an M mark and a M mark at the same time.

# **Recording GPS Information (Geotagging)**

When the optional GP-E1 GPS Receiver is attached to the camcorder's WFT terminal, the camcorder will automatically record the GPS information (latitude, longitude and altitude) in the metadata of each clip recorded ( $\bigcirc$  96). For details about attaching and configuring the receiver, refer to the GP-E1's instruction manual.

### Attaching the GPS Receiver

Turn off the camcorder and attach the optional GP-E1 GPS Receiver to the camcorder's WFT terminal.

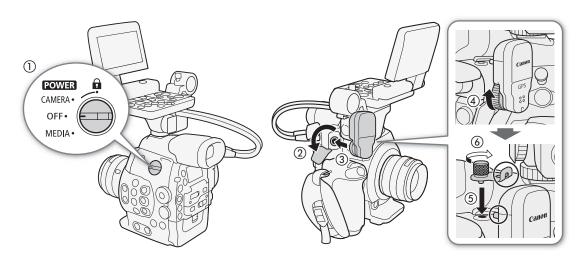

### Activating the GPS Receiver

Operating modes: CAMERA

AMERA | MEDIA

- 1 Open the GPS [Setting] submenu.
  - [ ♦ Other Functions] ♦ [GPS] ♦ [Setting]
- 2 Select [On] and then press SET.
  - The icon appears on the right of the screen and will blink as the receiver tries to acquire satellite signals.
  - When satellite signals are correctly acquired, the icon will stay continuously on. GPS functions will be activated and clips recorded thereafter will be geotagged.

[✔ Other Functions]
[GPS]
[Setting]
[Off]

### Adjusting the Date/Time Automatically According to GPS Position

Setting the [ Other Functions] [GPS] (Auto Time Setting) to [On], you can have the camcorder automatically adjust its date and time settings according to the information received from the GPS signal while an optional GP-E1 GPS Receiver is attached to the camcorder.



- In certain countries/regions, the use of GPS may be restricted. Be sure to use the GPS receiver in accordance
  with local laws and regulations of the country/region where the receiver is used. Be particularly careful when
  traveling outside of your home country.
- Be careful about using the GPS receiver in places where the use of electronic devices is restricted.

### Recording GPS Information (Geotagging)

- The GPS information recorded with clips may contain data that can lead others to locate or identify you. Be careful when sharing geotagged recordings with others or when uploading them to the Web.
- Do not leave the GPS receiver near strong electromagnetic fields such as near powerful magnets and motors.

# 104 (i) NOTES

- On the [GPS Information Display] status screen ( 175), you can check the current GPS information and satellite signal strength.
- GPS signal reception may take some time after replacing the battery pack or when first turning on the camcorder after a long period without use.

# Reviewing a Recording

When the camcorder is in CAMERA mode, you can review the last clip that was recorded.

Operating modes: CAMERA MEDIA

1 Open the [Rec Review] submenu to set the review length.

[► Other Functions] ▶ [Rec Review]

2 Select the desired option and then press SET.

- 3 After you finish recording, press the 🖘 button.
  - The last clip that was recorded is played back without audio for the selected duration. [> REVIEW] appears at the top of the screen.
  - Press the CANCEL button to stop reviewing the clip and change the camcorder back to record pause mode.
  - After the clip finishes playing back, the camcorder returns to record pause mode.


### **Options**

[Entire Clip]: Allows you to review the entire clip.

[Last 4 sec]: Allows you to review just the last 4 seconds of the clip.

# (i) NOTES

- When you are using a special recording mode ( 106), you cannot review a clip.
- If the camcorder switched CF cards during a recording, the camcorder will play back the clip on the CF card most recently recorded on.





106

# **Special Recording Modes**

The camcorder features 4 special recording modes.

Interval recording ([Interval Rec]): The camcorder will automatically record a pre-defined number of frames at a pre-defined interval. This mode is suitable for recording subjects with little movement, such as natural surroundings or plants.

Frame recording ([Frame Rec]): The camcorder will record a pre-defined number of frames every time you press the START/STOP button. This mode is suitable for recording stop motion animation.

Slow & fast motion recording ([Slow & Fast Motion]): This mode allows you to change the shooting frame rate to achieve a slow motion or fast motion effect during playback.

Pre-recording ([Pre Rec]): The camcorder will start recording approximately 3 seconds before you press the START/STOP button. This is especially useful when it is difficult to predict when to start recording.

Operating modes: CAMERA MEDIA

### Interval Recording Mode

Set the interval and number of frames in advance. Sound is not recorded in this mode.

### Configuring Interval Recording Mode


- 1 Open the [Interval] submenu.
  - [ ► Other Functions] ▶ [Interval Rec] ▶ [Interval]
- 2 Select the desired interval and then press SET.
  - See the following table for the available intervals.
- 3 Select [Rec Frames], select the desired number of frames and then press SET.
  - Available options depend on the frame rate used: 1, 3, 6 and 9 frames (when [ Other Functions] (24.00P) is set to [On] or [Frame Rate] is set to [23.98P], [29.97P] or [59.94i]), or 2, 6 and 12 frames (when [ Other Functions] (Frame Rate) is set to [25.00P], [50.00i], [50.00P] or [59.94P]).


### Available Intervals


1 sec	2 sec	3 sec	4 sec	5 sec	6 sec	7 sec	8 sec	9 sec
10 sec	15 sec	20 sec	30 sec	40 sec	50 sec	1 min	2 min	3 min
4 min	5 min	6 min	7 min	8 min	9 min	10 min		

### Activating Interval Recording Mode and Recording

- 1 Open the [Special Rec] submenu.
- 2 Select [Interval Rec] and then press SET.
  - [INT STBY] appears at the top of the screen (with [INT] flashing).
- 3 Press the START/STOP button to begin recording.
  - The camcorder automatically records the set number of frames at the set interval.
  - The tally lamp illuminates.

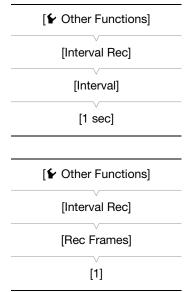





- [INT STBY] changes to [● INT REC] while recording frames and [● INT STBY] while between intervals.
- 4 Press the START/STOP button again to stop recording.
  - All of the recorded frames are joined together into one clip.
  - The tally lamps go out and [INT STBY] appears at the top of the screen (with [INT] flashing).

# (i) NOTES

- This special recording mode is not available when [► Other Functions] ➤ [Bit Rate/Resolution] is set to [35 Mbps 1440x1080]. Also, you can use only one special recording mode at a time.
- While recording, you cannot change the interval or number of frames.
- Some frames at the point the recording was stopped may be recorded and added to the end of the clip.
- Interval recording mode will be deactivated if the special recording mode is changed or turned off. It will be deactivated also if you change the video configuration.
- During this special recording mode, the running mode of the time code (☐ 84) can be set to [Rec Run] or [Regen.] and the time code advances by the number of frames recorded. If the running mode of the time code is set to [Free Run] or the time code is input from an external source, the running mode will switch to [Rec Run] during special recording mode. When special recording mode is deactivated, the running mode will return to its previous setting.
- During special recording mode, the time code signal will not be output from the TIME CODE terminal or HD/SD SDI terminal.

### Frame Recording Mode


Set the number of frames in advance. We recommend operating the camcorder remotely or stabilizing the camcorder, for example, on a tripod. Sound is not recorded in this mode.

### Configuring Frame Recording Mode

- 1 Open the [Rec Frames] submenu.
  - [✔ Other Functions] ✔ [Frame Rec] ✔ [Rec Frames]
- 2 Select the desired number of frames and then press SET.
  - Available options depend on the frame rate used: 1, 3, 6 and 9 frames (when [✔ Other Functions] ◆ [24.00P] is set to [0n] or [Frame Rate] is set to [23.98P], [29.97P] or [59.94i]), or 2, 6 and 12 frames (when [✔ Other Functions] ◆ [Frame Rate] is set to [25.00P], [50.00i], [50.00P] or [59.94P]).

### Activating Frame Recording Mode and Recording

- 1 Open the [Special Rec] submenu.
  - [► Other Functions] ► [Special Rec]
- 2 Select [Frame Rec] and then press SET.
  - [FRM STBY] appears at the top of the screen (with [FRM] flashing).
- 3 Press the START/STOP button to begin recording.
  - The camcorder automatically records the set number of frames.
  - The tally lamp illuminates.
  - [FRM STBY] changes to [● FRM REC] while recording frames and [● FRM STBY] when frames are not being recorded.
  - Repeat until you finish recording.
- 4 Open the [Special Rec] submenu.

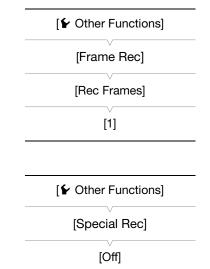

### [✔ Other Functions] ✔ [Special Rec]

5 Select [Off] and then press SET.

- Frame recording mode ends and all of the recorded frames are joined together into one clip.
- The tally lamp goes out and [STBY] appears at the top of the screen.

# (i) NOTES

- This special recording mode is not available when [► Other Functions] ➤ [Bit Rate/Resolution] is set to [35 Mbps 1440x1080]. Also, you can use only one special recording mode at a time.
- While recording, you cannot change the number of frames.
- Some frames at the point the recording was stopped may be recorded and added to the end of the clip.
- Frame recording mode will be deactivated if the special recording mode is changed or turned off. It will be deactivated also if you change the video configuration.
- During this special recording mode, the running mode of the time code ( at the running mode of the time code ( at the running mode of the time code is set to [Rec Run] or the time code is input from an external source, the running mode will switch to [Rec Run] during special recording mode. When special recording mode is deactivated, the running mode will return to its previous setting.
- During special recording mode, the time code signal will not be output from the TIME CODE terminal or HD/SD SDI terminal.

### Slow & Fast Motion Mode

When you set the frame rate to a progressive frame rate (\$\sum\_59\$), the camcorder can record with a frame rate (shooting frame rate) that is different from the playback frame rate. Recording a clip at a higher frame rate than the [Frame Rate] setting will result in a slow motion effect during playback (up to 1/2.5 of the original speed). Conversely, a lower frame rate will result in a fast motion effect (up to 60x the original speed). Sound is not recorded in this mode.

### Configuring Slow & Fast Motion Mode

- 1 Open the [S&F Frame Rate] submenu.
  - [ ► Other Functions] ▶ [Slow & Fast Motion] ▶ [S&F Frame Rate]
- 2 Select the desired shooting frame rate and then press SET.
  - Available shooting frame rates depend on other video configuration settings in use.

[✔ Other Functions]
[Slow & Fast Motion]
[S&F Frame Rate]


### **Available Shooting Frame Rates**


Video Cor	Shooting Frame Rates	
Type of Recording	Resolution	(fps, in 1 fps increments)
NTSC / 24.00P	1920 x 1080	1 to 30
N130 / 24.001	1280 x 720	1 to 60
PAL	1920 x 1080	1 to 25
FAL	1280 x 720	1 to 50

108

### Activating Slow & Fast Motion Mode and Recording

- 1 Open the [Special Rec] submenu.
  - [✔ Other Functions] [Special Rec]
- 2 Select [Slow & Fast Motion] and then press SET.
  - [S&F STBY] appears at the top of the screen.
  - The selected shooting frame rate appears on the right of the screen next to the frame rate setting (the playback frame rate).






- 3 Press the START/STOP button to begin recording.
  - The tally lamp illuminates.
  - [S&F STBY] changes to [● S&F REC] while recording.
- 4 Press the START/STOP button again to stop recording.
  - The clip is recorded at the selected frame rate.
  - The tally lamp goes out and [S&F STBY] appears at the top of the screen.

### (i) NOTES

- This special recording mode is not available when [♠ Other Functions] ▶ [Bit Rate/Resolution] is set to [35 Mbps 1440x1080]. Also, you can use only one special recording mode at a time. In addition, slow & fast motion mode cannot be used with double slot recording.
- While recording, you cannot change the shooting frame rate.
- For lower shooting frame rates, it may take approximately 1 second to stop recording.
- Slow & fast motion mode will be deactivated if the special recording mode is changed or turned off. It will be deactivated also if you change the video configuration.
- When the bit rate is set to 50 Mbps ( 59), relay recording is not available during slow motion recording.
- During this special recording mode, the running mode of the time code (☐ 84) can be set to [Rec Run] or [Regen.] and the time code advances by the number of frames recorded. If the running mode of the time code is set to [Free Run] or the time code is input from an external source, the running mode will switch to [Rec Run] during special recording mode. When special recording mode is deactivated, the running mode will return to its previous setting.
- During special recording mode, the time code signal will not be output from the TIME CODE terminal or HD/SD SDI terminal.

### **Pre-recording Mode**

When pre-recording mode is activated, the camcorder starts recording continuously into a temporary memory of approximately 3 seconds so when you press the START/STOP button, the clip will contain also approximately 3 seconds of video and audio recorded before you pressed the button.



- 1 Open the [Special Rec] submenu.
  - [► Other Functions] ► [Special Rec]
- 2 Select [Pre Rec] and then press SET.
  - [PRE REC STBY] appears at the top of the screen.
- 3 Press the START/STOP button to begin recording.
  - The tally lamp illuminates.
  - [PRE REC STBY] changes to [● PRE REC] while recording.
- 4 Press the START/STOP button again to stop recording.
  - The camcorder records the clip, including approximately 3 seconds of video and audio recorded before the START/STOP button was pressed.
  - The tally lamp goes out and [PRE REC STBY] appears at the top of the screen.

### (i) NOTES


- You can use only one special recording mode at a time.
- Pre-recording mode will be deactivated if the special recording mode is changed or turned off. It will be
  deactivated also if you change the video configuration.
- During pre-recording mode, the time code will be recorded with the running mode (
   \$\sum\_{\text{84}}\$) set to [Free Run], regardless of the previous setting. Alternatively, you can use an external time code signal. When the time code is recorded, it will include the 3 seconds before the START/STOP button was pressed. When special recording mode is deactivated, the running mode will return to its previous setting.

### **Assignable Buttons**

The camcorder conveniently features 15\* buttons to which you can assign various functions. By assigning oftenused functions, you can quickly access them with a single press of a button. Some assignable buttons are located on the monitor unit or grip unit, so their availability depends on the camcorder configuration used.

\* In MEDIA mode, only assignable buttons 1 to 9 are available.

Operating modes: CAMERA MEDIA

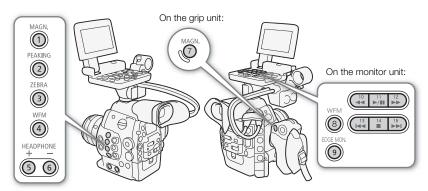

### **Changing the Assigned Function**

- 1 Open the [Assign Button] submenu.
  - [ ✓ Other Functions] ✓ [Assign Button]
- 2 Select the button to change and then press SET.
  - A list of available functions appears.
  - The quick reference shows the default settings for each assignable button. For assignable buttons 1 to 9, the label on the camcorder, grip unit or monitor unit indicates also the button's default setting. By default, buttons 10 to 15 have no assignable function set.
- 3 Select the desired function and then press SET.
  - If you selected [User Setting (NONE)], the menu will change from orange to blue to indicate you are selecting a menu setting to register. Continue the procedure to register a menu setting. Otherwise, you do not need to perform the rest of the procedure.

[✔ Other Functions]

### [Assign Button]

- [1 MAGN.]
- [2 PEAKING]
- [3 ZEBRA]
- [4 WFM]
- [5 Headphone +]
- [6 Headphone -]
- [7 MAGN.]
- [8 WFM]
- [9 EDGE MON.]
- [10-15 (NONE)]
- 4 Navigate the menus to find the menu setting you want to register and then press SET.
  - The selected menu setting will be registered to the customizable slot and to the assignable button.
  - The name of the selected menu setting will be listed instead of [User Setting (NONE)] and the customizable slot will be marked by a ★.

### (i) NOTES

You can check the two [Assign Button] status screens (
 170) to see what functions are set for the assignable buttons.

• You can reset only the functions assigned to the assignable buttons, without affecting other camera settings, with the [✔ Other Functions] ▶ [Reset] ▶ [Assignable Buttons] function. All the assignable buttons will return to their default function.

### 112

### Using an Assignable Button

After you assign a function to one of the buttons, press the button to activate the function. For some functions, an options menu may appear. In such case, select the desired option and then press SET.

### **Assignable Functions**

Functions can be set separately in CAMERA mode and MEDIA mode. Refer to the following table for assignable functions and available modes.

Function name	Description	CAMERA	MEDIA	
C300 [ONE-SHOT AF]*	The camcorder focuses automatically one time only (One-shot AF function).	•	-	79
C300 [PUSH AUTO IRIS]*	The camcorder automatically adjusts the aperture (f/stop).	•	_	71
C300 [Iris Mode]	Switches the aperture adjustment mode between automatic and manual.	•	_	69
<b>C300</b> [Iris +]	Opens up the aperture.	•	_	70
<b>C300</b> [Iris -]	Closes the aperture.	•	_	70
[ND +]	Cycles through ND filter settings in increasing (higher density) order.	•	_	68
[ND -]	Cycles through ND filter settings in decreasing (lower density) order.	•	_	68
<b>C300</b> [AE Shift +]	Compensates the exposure making the image brighter.	•	_	72
<b>C300</b> [AE Shift -]	Compensates the exposure making the image darker.	•	_	12
C300 [Backlight]	Turns the [Backlight] light metering option on/off.	•	-	73
C300 [Spotlight]	Turns the [Spotlight] light metering option on/off.	•	_	73
[PEAKING]	Turns peaking on/off.	•	_	78
[ZEBRA]	Turns zebra patterns on/off.	•	_	83
[WFM]	Activates video scopes in the following sequence:	•	•	99
	Waveform monitor → Vectorscope → Off	_		
[EDGE MON.]	Turns the edge monitor on/off.	•	-	99
[MAGN.]	Turns magnification on/off.	•	-	79
[Color Bars]	Turns color bars on/off.	•	-	98
[Markers]	Turns onscreen markers on/off.	•	-	82
[LCD Setup]	Opens the [LCD Setup] submenu.	•	•	39
[VF Setup]	Opens the [VF Setup] submenu.	•	•	39
[LCD/VF B&W]	Turns the B&W mode of the LCD and viewfinder on/off.	•	•	39
[Onscreen Display]	Turns on/off the inclusion of onscreen displays on video output from the camcorder's terminals (both HD and SD video output).	•	•	142
[Add Shot Mark 1]	Adds an 🐧 mark to the clip.	•	•	101
[Add Shot Mark 2]*	Adds an 🖸 mark to the clip.	•	•	101
[Add OK Mark]	Adds an 🕅 mark to the clip.	•	•	132
[Add Mark]	Adds a 🔽 mark to the clip.	•	•	132
[Time Code]	Displays the [Time Code] submenu.	•	-	84
[Time Code Hold]*	Puts the time code display on hold or resumes it.	•	•	86
[Headphone +]	Increases the headphone volume.	•	•	129
[Headphone -]	Reduces the headphone volume.	•	•	129
[Audio Output CH]	Switches the audio output channel.	•	•	95
[Audio Level]	Turns the audio level meter on/off.	•	•	93, 94

Function name	Description	CAMERA	MEDIA	
[Photo]*	Records a photo.	•	•	151
[FUNC.]	Enters the direct setting mode, replicating the function of the camcorder's FUNC. button.	•	_	61
[FUNC. Shutter]	Enters the direct setting mode with the shutter speed highlighted and ready to be adjusted.	•	_	63
[FUNC. ISO/Gain]	Enters the direct setting mode with the ISO speed or gain value highlighted and ready to be adjusted.	•	_	65
[FUNC. WB]	Enters the direct setting mode with the white balance highlighted and ready to be adjusted.	•	-	74
[My Menu]	Opens the [My Menu] customized submenu.	•	_	30
[Initialize Media]	Opens the [Initialize Media] submenu.	•	•	45
[LENS EXCHANGE]*	Turns the lens exchange mode on/off.	•	_	34
[User Setting (NONE)]*	Customizable slot. Assign to the button any menu setting you would like to register.	•	•	-

 $<sup>^{\</sup>star}$  Function can be used only by assigning it to a button.

114

You can preset a number of picture-related settings ( $\bigcirc$  117). After changing individual settings to your preference, you can save the whole set in the camcorder or SD card as a custom picture file. You can then load the file at a later date to change the current settings to the preset levels you selected. You can even add custom picture settings to clips recorded on a CF card or photos recorded on an SD card.

You can save up to 9 different custom picture files on the camcorder and up to 20 custom picture files on an SD card. Custom picture files can be copied between the camcorder and recording media.

Custom picture files created with this camcorder are compatible only with other C300 and C300 PL camcorders.

Operating modes: CAMERA MEDIA

### **Selecting Custom Picture Files**

Select a custom picture file to apply its settings to your recordings or to edit, rename, protect, or transfer it. When [ American Setup] CINEMA Locked] is set to [On], the custom picture menu cannot be accessed and custom picture files cannot be used.

### 1 Press the CUSTOM PICTURE button.

• The custom picture menu appears. The currently selected file appears next to the selected.

### 2 Select [ Select File] and then press SET.

• You can select from a list of custom picture files in the camcorder and SD card. Files in the camcorder begin with [C1] to [C9]; those on the SD card begin with [SD1] to [SD20].

### 3 Select the desired file and then press SET.

- Select [Off] to record without applying any custom picture settings.
- To apply the custom picture settings of the selected file, continue to step 4. To perform other operations on the selected file (edit settings, copy, protect, etc.), continue instead with the one of the procedures in the following pages.

### 4 Press the CUSTOM PICTURE button to exit the custom picture menu.


### **Preset Custom Picture Files**

By default, the custom picture files in file slots [C7] to [C9] in the camcorder are protected. Remove the protection ( $\square$  115) to edit the file. The following describes when to use the preset files.

[C7: EOS Std.]: Reproduces the image quality and look (high contrast, vibrant colors) of an EOS digital SLR camera with its picture style set to [Standard]

[C8: Wide DR]: Applies a gamma curve with a very wide dynamic range and an appropriate color matrix that nevertheless do not require post-production processing.

[C9: CINEMA]: Uses the Canon Log gamma and color matrix for an outstanding dynamic range and an image suitable for processing in post-production.

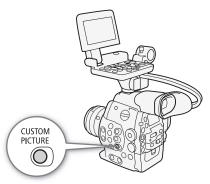

### Editing a Custom Picture File's Settings

- 2 Select a setting and then press SET.
- 3 Change the setting to the desired level and then press SET.
  - Refer to the table *Available Custom Picture Settings* ( 117) for details on the various settings.
  - Repeat steps 2 and 3 for other settings, as necessary.
- 4 Press the CUSTOM PICTURE button to exit the custom picture menu.

### Resetting the current file's settings to default values

- 1 Select [Reset] and then press SET.
- 2 Select the default values and then press SET.
  - Select [NEUTRAL] to reset to neutral default values (equivalent to not using custom picture settings at all) or [CINEMA], [Wide DR] or [EOS Std.] if you want to replicate these preset settings, for example as a starting point to edit them further.
- 3 Select [OK] and then press SET.

### **Renaming Custom Picture Files**

1 After selecting a file, open the [Rename] submenu.

[♥ CP Edit File] ▶ [Rename]

 A screen appears that displays the current file name with an orange selection frame on the first character.

- [ Edit File]
- 2 Select an alphanumeric character or symbol then move (▶) to the next field.
  - Change the rest of the name in the same way.
- 3 Select [Set] and then press SET.
- 4 Press the CUSTOM PICTURE button to exit the custom picture menu.

### **Protecting Custom Picture Files**

Protecting a custom picture file prevents its settings from being accidentally changed.

[ Edit File]
[Protect]

- 1 After selecting a file, open the [Protect] submenu.
- 2 Select [Protect] and then press SET.
  - In the custom picture menu, om will appear next to the file name.
  - To remove protection settings, select [Unprotect] instead.
- 3 Press the CUSTOM PICTURE button to exit the custom picture menu.

### **Transferring Custom Picture Files**

You can transfer custom picture files between the camcorder and SD card. When the selected custom picture file is in the camcorder, use [Copy To 🔄] or [Load From 🗐] depending on the operation you wish to perform. Similarly, when the selected custom picture file is on an SD card, use [Copy To Cam.] or [Load From Cam].

### Copying a File from the Camcorder to an SD Card

1 After selecting a file in the camcorder, open the [Copy To  ${\bf \Xi}$ ] submenu.

2 Select the file slot on the SD card under which to save the file and then press SET.

[E Transfer File]

[Copy To [Section 1]]

- If there are available slots, you can select [New File] to save the file in the first available slot.
- 3 Select [OK] and then press SET.
  - The currently selected file will be copied to the selected slot on the SD card, overwriting the file in that slot. When the confirmation screen appears, press SET.
- 4 Press the CUSTOM PICTURE button to exit the custom picture menu.

### Replacing a File in the Camcorder with a File on an SD Card

1 After selecting a file in the camcorder to replace, open the [Load From ➡] submenu.

[ ☐ Transfer File] ▶ [Load From 🖭]

- 2 Select the file to transfer to the camcorder and then press SET.
- 3 Select [OK] and then press SET.
  - The file in the camcorder will be overwritten by the one on the SD card. When the confirmation screen appears, press SET.
- 4 Press the CUSTOM PICTURE button to exit the custom picture menu.

### Copying a File from an SD Card to the Camcorder

1 After selecting a file on the SD card, open the [Copy To Cam.] submenu.

[ ☐ Transfer File] > [Copy To Cam.]

[Copy To Cam.]

- 2 Select the file slot under which to save the file and then press SET.
- 3 Select [OK] and then press SET.
  - The currently selected file will be copied to the selected slot on the camcorder, overwriting the file in that slot. When the confirmation screen appears, press SET.
- 4 Press the CUSTOM PICTURE button to exit the custom picture menu.

### Replacing a File on an SD Card with a File in the Camcorder

1 After selecting a file on the SD card to replace, open the [Load From Cam.] submenu.

[Load From Cam.]


- 2 Select the file to transfer to the SD card and then press SET.
- 3 Select [OK] and then press SET.
  - The file on the SD card will be overwritten by the one on the camcorder. When the confirmation screen appears, press SET.
- 4 Press the CUSTOM PICTURE button to exit the custom picture menu.



• You can also copy a custom picture file embedded in a clip to the camcorder ( 134).

### **Embedding Custom Picture Settings in a Recording**

By default, when you record video or take a photo with custom picture settings applied to it, the custom picture file used to record it is embedded in the image file. Later, those embedded settings in the video or photo can be copied to the camcorder ( 156) and be applied to future recordings. You may find that embedding custom picture settings in a recording helps you keep track of them, such as verifying what settings were used for a particular recording.

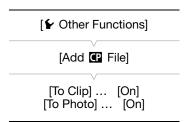

- 1 Open the [Add P File] submenu.
- 2 Select [To Clip] or [To Photo] and then press SET.
  - Selecting [To Clip] will embed the custom picture file in a clip while selecting [To Photo] will embed the file in a photo.
- 3 Select [On] or [Off] and then press SET.

### **Available Custom Picture Settings**

The following are the available settings. Even if no custom picture file is selected, the default settings are still applied to the picture.

### [Gamma]

The gamma curve changes the overall look of the image. Generally, this should be the same setting as [Select] under [Color Matrix]. (Default: [Normal 1]).

[Normal 1] to [Normal 4]: These settings are suitable for viewing the image on a TV monitor. Highlights in [Normal

2] are brighter than those of [Normal 1]. Dark tones in the lower part of the gamma curve for [Normal 3] (ITU-R BT.709 standard) and [Normal 4] are more pronounced than

those of [Normal 2].

[Cine 1] or [Cine 2]: Use [Cine 1] for a gamma curve that results in a picture with a cinema-like feel and

cinema-like tones. [Cine 2] has softer contrasts than does [Cine 1] but is also suitable

for creating a cinema-like picture.

[EOS Std.]: This gamma curve approximates the look of an EOS digital SLR camera when the

picture style is set to [Standard] (high contrast, vibrant colors).


[Wide DR]: Applies a gamma curve with a very wide dynamic range, optimized for playback on an


HDTV.

[Canon Log]: Applies a logarithmic gamma curve for outstanding dynamic range. Requires image

processing in post-production.

118

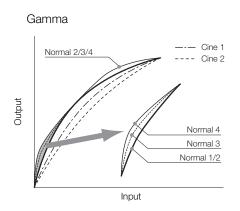

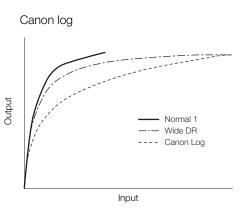

### [Black]

Controls the black level and color cast of blacks.

### [Master Pedestal]

The master pedestal increases or decreases the black level. Higher settings will make dark areas brighter but decrease contrast. This setting can be adjusted from -50 to 50. (Default: ±0)

### [Master Black]

Corrects color cast in blacks.

[Red]: -50 to 50 (Default: ±0) [Green]: -50 to 50 (Default: ±0) [Blue]: -50 to 50 (Default: ±0)

### [Black Gamma]

Controls the lower part of the gamma curve (dark areas of the image). When [Gamma] is set to [Wide DR] or [Canon Log], this setting has no effect on the picture.


[Level]: Raises or lowers the lower part of the gamma curve. This setting can be adjusted from -50 to 50. (Default: ±0)

[Range]: Selects the range in which dark areas are affected. This setting can be adjusted from -5 to 50.

(Default: ±0)

[Point]: Determines the shape of the lower part of the gamma curve. This setting can be adjusted from -1 to 50. (Default: ±0)



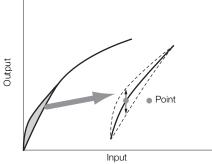

### [Low Key Satur.]

Adjusts color saturation in dark areas.

[Enable]: Activates/deactivates the setting. (Default: [Off])

[Level]: Specifies how saturated colors are in dark areas. This setting can be adjusted from -50 to 50.

(Default: ±0)

### [Knee]


Controls the upper part of the gamma curve (highlights of the image). By compressing the highlights, you can prevent parts of the image from being overexposed. When [Gamma] is set to [Cine 1], [Cine 2], [EOS Std.], [Wide DR] or [Canon Log], this setting has no effect on the picture.


[Enable]: Activates/deactivates the setting. (Default: [On])

[Slope]: Determines the slope of the gamma curve above the knee point. This setting can be adjusted from

-35 to 50. (Default: ±0)

[Point]: Sets the knee point of the gamma curve. This setting can be adjusted from 50 to 109. (Default: 95) [Saturation]: Adjusts color saturation in highlights. This setting can be adjusted from -10 to 10. (Default: ±0)

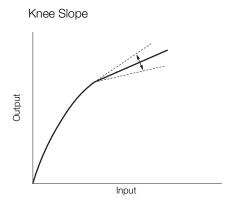

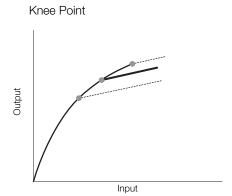

### [Sharpness]

Sets the sharpness of the output and recording signal.

[Level]: Sets the sharpness level. This setting can be adjusted from -10 to 50. (Default: ±0)

[H Detail Freq.]: Sets the center frequency of horizontal sharpness. Setting higher values increases the

frequency, which, in turn, increases the sharpness. This setting can be adjusted from -8 to 8.

(Default: ±0)

[Coring]: Reduces noise artifacts caused by high sharpness levels.

[Level]: Sets the coring level. Higher values prevent sharpness from being applied to minute details, resulting in less noise. This setting can be adjusted from -30 to 50. (Default: ±0)

[D-Ofst]: You can use [D-Ofst], [D-Curve] and [D-Depth] to adjust the coring level based on brightness. [D-Ofst] sets the coring level of the minimum brightness level. This setting can be adjusted from 0 to 50. (Default: 0)

[D-Curve]: Sets the curve of the coring adjustment. This curve is the change from [Level] to [D-Ofst]. This setting can be adjusted from 0 to 8. (Default: 0)

[D-Depth]: Sets a multiplier to [D-Ofst] that determines the coring level adjustment based on brightness. Positive values raise the coring level in dark areas and negative values lower the level. This setting can be adjusted from -4 to 4. (Default: ±0)

[HV Detail Bal.]: Adjusts the ratio between horizontal and vertical detail. Higher values emphasize vertical detail while lower values emphasize horizontal detail. This setting can be adjusted from -8 to 8.

(Default: ±0)

[Limit]: Restricts how much sharpness is applied. This setting can be adjusted from -50 to 50.

(Default: ±0)

[Select]: In addition to the sharpness set by [Level], [Select] sets the sharpness for areas with higher

frequencies. Higher values apply more sharpness to areas with higher frequencies. Use this for subjects in which normal sharpening is not effective. This setting is not available when the video

configuration is 720P. This setting can be adjusted from 0 to 15. (Default: 0)

[Knee Aperture]: Allows you to set the sharpness of only the areas above the knee point by adjusting the gain and

slope. When [Gamma] is set to [Cine 1], [Cine 2], [EOS Std.], [Wide DR] or [Canon Log], this

setting has no effect on the picture.

[Gain]: Sets the amount of sharpness. This setting can be adjusted from 0 to 9. (Default: 0)

[Slope]: Sets the slope of the sharpness. This setting can be adjusted from 0 to 3, with 0 having no slope, 1 having a steep slope and 3 having a gradual slope. (Default: 1)

[Level Depend]: Lowers the amount of sharpness applied to dark areas of the image.

[Level]: Sets the brightness of the dark areas of the image that will be affected. This setting can be adjusted from 0 to 50. (Default: 0)

[Slope]: Determines the slope of the area between the upper and lower parts of the gamma curve. This setting can be adjusted from 0 to 3, with 0 having no slope, 1 having a steep slope and 3 having a gradual slope. (Default: 0)

[Offset]: Adjusts the sharpness level of dark areas in the image. Setting higher values will lower the sharpness level. This setting can be adjusted from 0 to 50. (Default: 0)

### [Noise Reduction]

Reduces the amount of noise that appears in the image. Select a level from 1 (lowest level) to 12 (highest level), or select [Off] to turn the noise reduction off. (Default: [Off])

### [Skin Detail]

The camcorder applies a softening filter to areas in the picture with skin tones to give a more pleasant appearance. By changing these settings, you can determine what areas will be detected as skin tones. A zebra pattern will appear over areas on the screen that are detected as having skin tones.

[Effect Level]: Adjusts the level of the filter. The available options are [Off], [Low], [Middle] and [High]. (Default:

[Off])

[Hue]: Adjusts the hue for detection of skin tones. This setting can be adjusted from -16 to 16.

(Default: ±0)

[Chroma]: Adjusts the color saturation for detection of skin tones. This setting can be adjusted from 0 to 31.

(Default: 16)

[Area]: Adjusts the color range for detection of skin tones. This setting can be adjusted from 0 to 31.

(Default: 16)

[Y Level]: Adjusts the brightness for detection of skin tones. This setting can be adjusted from 0 to 31.

(Default: 16)

### [Selective NR]

The camcorder detects the characteristics of a certain color or tone and applies a noise reduction filter to the targeted areas. A zebra pattern will appear over targeted areas on the screen.

[Effect Level]: Adjusts the level of the noise reduction filter. The available options are [Off], [Low], [Middle] and

[High]. (Default: [Off])

[Hue]: Adjusts the hue for the color to be detected. This setting can be adjusted from 0 to 31. (Default: 0)

[Chroma]: Adjusts the color saturation for the color to be detected. This setting can be adjusted from 0 to 31.

(Default: 16)

[Area]: Adjusts the color range for the color to be detected. This setting can be adjusted from 0 to 31.

(Default: 16)

[Y Level]: Adjusts the brightness for the color to be detected. This setting can be adjusted from 0 to 31.

(Default: 16)

### [Color Matrix]

Color matrix affects the color tones throughout the whole image. When [Gamma] is set to [Canon Log], this setting has no effect on the picture.

- [Select]: Available options are [Normal 1] to [Normal 4], [Cine 1] and [Cine 2], [EOS Std.], [Wide DR] and [Canon Log]. Generally, this should be the same setting as [Gamma]. After selecting an option, you can make more precise adjustments. (Default: [Normal 1])
- [Gain]: Adjusts the color intensity. This setting can be adjusted from -50 to 50. (Default: ±0)
- [Phase]: Adjusts the color phase. This setting can be adjusted from -18 to 18. (Default: ±0)
- [R-G]: The R-G matrix changes the tint of the picture along the cyan/green and red/magenta gradations. This setting can be adjusted from -50 to 50. (Default: ±0)
- [R-B]: The R-B matrix changes the tint of the picture along the cyan/blue and red/yellow gradations. This setting can be adjusted from -50 to 50. (Default: ±0)
- [G-R]: The G-R matrix changes the tint of the picture along the magenta/red and green/cyan gradations. This setting can be adjusted from -50 to 50. (Default: ±0)
- [G-B]: The G-B matrix changes the tint of the picture along the magenta/blue and green/yellow gradations. This setting can be adjusted from -50 to 50. (Default: ±0)
- [B-R]: The B-R matrix changes the tint of the picture along the yellow/red and blue/cyan gradations. This setting can be adjusted from -50 to 50. (Default: ±0)
- [B-G]: The B-G matrix changes the tint of the picture along the yellow/green and blue/magenta gradations. This setting can be adjusted from -50 to 50. (Default: ±0)

### [White Balance]

Adjusts the amount of white balance throughout the whole image.

- [R Gain]: Adjust the intensity of red tones. This setting can be adjusted from -50 to 50. (Default: ±0)
- [G Gain]: Adjust the intensity of green tones. This setting can be adjusted from -50 to 50. (Default: ±0)
- [B Gain]: Adjust the intensity of blue tones. This setting can be adjusted from -50 to 50. (Default: ±0)

### [Color Correction]

The camcorder detects the characteristics of a certain color (color phase, chroma, area and Y level) and corrects them when recording. You can set the color correction for up to two different areas (A and B).

[Select Area]: Selects the area or areas to correct. Available options are [Area A], [Area B] and [Area A&B]. Select [Off] to turn this setting off. (Default: [Off])

[Area A Setting]: Determines the area in which colors will be corrected.

[Phase]: Adjusts the color phase for area A. This setting can be adjusted from 0 to 31. (Default: 0)

[Chroma]: Adjusts the color saturation for area A. This setting can be adjusted from 0 to 31. (Default: 16)

[Area]: Adjusts the color range for area A. This setting can be adjusted from 0 to 31. (Default: 16)

[Y Level]: Adjusts the brightness for area A. This setting can be adjusted from 0 to 31. (Default: 16)

[Area A Revision]: Sets the amount of correction for area A.

[Level]: Adjusts the amount of correction to the color saturation. This setting can be adjusted from -50 to 50. (Default: ±0)

[Phase]: Adjusts the amount of correction to the color phase. This setting can be adjusted from -18 to 18. (Default: ±0)

[Area B Setting]: Determines the area in which colors will be corrected.

[Phase]: Adjusts the color phase for area B. This setting can be adjusted from 0 to 31. (Default: 0)

[Chroma]: Adjusts the color saturation for area B. This setting can be adjusted from 0 to 31. (Default: 16)

[Area]: Adjusts the color range for area B. This setting can be adjusted from 0 to 31. (Default: 16)

[Y Level]: Adjusts the brightness for area B. This setting can be adjusted from 0 to 31. (Default: 16)

[Area B Revision]: Sets the amount of correction for area B.

[Level]: Adjusts the amount of correction to the color saturation. This setting can be adjusted from -50 to 50. (Default: ±0)

### **Custom Picture Settings**

[Phase]: Adjusts the amount of correction to the color phase. This setting can be adjusted from -18 to 18. (Default: ±0)

### [Other Functions]

122

[Setup Level]: Adjusts the black level set by the [Black] and [Master Pedestal] settings.

[Level]: Determines the amount of adjustment to be made. This setting can be adjusted from -50 to 50. (Default: ±0)

[Press]: Compresses the dynamic range of the video signal so that it does not exceed 100%. Available options are [On] and [Off]. (Default: [Off])

[Clip At 100%]: When the video signal exceeds 100%, this function clips the white level at 100%. Available options are [On] and [Off]. (Default: [Off])

### **Customizing Functions and Onscreen Displays**

Customize the camcorder to match your shooting style and needs. Use the [ Other Functions] [Custom Function] setting to adjust how some of the camcorder's controls and functions operate in CAMERA mode. Similarly, use the [ LCD/VF Setup] [ Custom Display 1] or [Custom Display 2] setting to customize the onscreen displays that appear during recording. You can save these preferences along with other menu settings to an SD card and use them again later ( 124).

Operating modes: CAMERA MEDIA

### **Customizing Functions**

The following table describes which functions can be customized using [Custom Function].

[♣ Other Functions]

- 1 Open the [Custom Function] submenu.
  - [► Other Functions] ▶ [Custom Function]
- 2 Select the desired function.
- 3 Change the setting option and then press SET.

Customizable Functions with [Custom Function]

Menu item	Description	
[Shockless WB]	Creates a softer transition when the white balance is changed.	
C300 [AE Response]	Controls the camcorder's response ([Fast], [Normal] or [Slow]) when you change the automatic exposure setting.	
[Control Dial]	Selects the function of the control dial on the camcorder.	
[Grip Ctrl Dial]	Selects the function of the control dial on the grip unit.	
[Control Dial Dir.]	Changes the direction of the adjustment when operating the control dial on the camcorder.	
[Grip Ctrl Dial Dir.]	Changes the direction of the adjustment when operating the control dial on the grip unit.	
[SELECT Dial Dir.]	Changes the direction of the adjustment when operating the SELECT dial.	
[F. Assist. B&W]	Automatically switches the screen to B&W while the focus assist functions (peaking and magnification) are activated. You can have the screen switch to B&W when only the peaking is activated, when only the magnification is activated or when both are activated.	
[Scan Reverse Rec]	Inverts the recorded image horizontally and/or vertically.	
[Character Rec]	When this function is set to [0n], all of the onscreen displays will be recorded to the clip exactly as they appear on the screen.	
[♠ START/STOP]	Selects whether the START/STOP button will be active or locked too when the POWER switch is set to 🔒 (key lock) (🛄 53).	

### **Customizing Onscreen Displays**

For details on which onscreen displays can be customized, refer to *Onscreen Displays* (\$\square\$ 55). For details on the setting options, refer to *[Custom Display 1] and [Custom Display 2]* (\$\square\$ 162).

- 1 Open the [Custom Display 1] or [Custom Display 2] submenu.

  [☑ LCD/VF Setup] ▶ [Custom Display 1] or [Custom Display 2]
- 2 Select the desired onscreen display.
- 3 Change the setting option and then press SET.

[Custom Display 1]
[Custom Display 2]

### Saving and Loading Camera Settings

After you adjust custom picture settings and settings in the various menus, you can save those settings on an SD card. You can load those settings at a later date or on another C300 or C300 PL camcorder so that you can use that camcorder in that same exact way.

Operating modes: CAMERA MEDIA

### Saving Camera Settings to an SD Card


- 1 Open the [Save To 🔄] submenu.
- 2 Select [Menu] or [Menu+ 1 and then press SET.
  - Selecting [Menu] will save menu settings and [Menu+ P] will save menu and custom picture settings.

## [₩ Other Functions] [Transfer Menu/♠] [Save To ➡]

- 3 Select [OK] and press SET.
  - The current settings are saved to the SD card. If the SD card already has camera settings on it, they will be overwritten.
- 4 When the confirmation screen appears, press SET.

### Loading Camera Settings from an SD Card

- 1 Open the [Load From 🔄] submenu.
  - [ Y Other Functions] → Transfer Menu/ □ ] → [Load From 🖭]
- 2 Select [Menu] or [Menu+ 1] and then press SET.
  - Selecting [Menu] will load menu settings and [Menu+ P] will load menu and custom picture settings.



- 3 Select [OK] and press SET.
  - After the camcorder's current settings are replaced with the settings saved on the SD card, the screen will turn black momentarily and the camcorder will restart.

### (i) NOTES

- The SD card includes a text file that lists the camera settings. You can check the settings by using a USB card reader to access the SD card on a computer. In the "PRIVATE\CAMSET" folder, open the file "CAMSET3.TXT".
- When loading camera settings from an SD card, even protected custom picture files in the camcorder will be replaced.
- For your protection, when the camcorder's settings are saved on an SD card, the following settings under [✔ Other Functions] ✔ [Wi-Fi Remote] are not saved: the encryption key/WEP index key in the wireless LAN setup of each of the configuration files [No. 1] to [No. 5] and the password in the camcorder settings.
- Only camera settings from other C300 / C300 PL camcorders can be used with this camcorder.

### **Playback**

This section explains how to play back clips recorded on a CF card. For details on playing back clips using an external monitor, refer to *Connecting to an External Monitor* ( $\bigcirc$  140). For details on viewing photos on the SD card, refer to *Viewing Photos* ( $\bigcirc$  153).

Operating modes: CAMERA MEDIA


### Clip Index Screen

Playback functions are accessed from the clip index screen. To open the clip index screen, set the camcorder to MEDIA mode. If the CF card contains a type of recordings (NTSC/PAL/24.00P) different from the camcorder's current settings, you will not be able to play back the clips. In such case, change the [✔ Other Functions] ▶ [24.00P] or [NTSC/PAL] settings as necessary (□ 59).



### Set the **POWER** switch to MEDIA.

• The camcorder switches to MEDIA mode and the clip index screen appears.

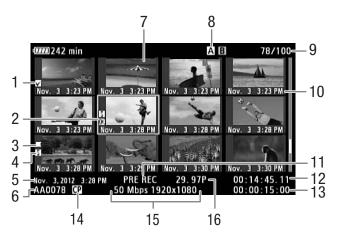

- 126
- 1 **OK** mark/**✓** mark (◯◯ 102, 132)
- 2 Orange selection frame
- 3 Relay recording: Appears when a clip begins on one CF card and continues on the other. (\$\subset\$ 46)
- 4 Shot mark (1101, 136)
- 5 Recording date and time
- 6 Clip name ( 53)
- 7 Clip thumbnail ( 137)
- 8 Currently selected CF card slot (\$\square\$ 45)

- 9 Clip number / Total number of clips
- 10 Recording date (month and day only) and time
- 11 Special recording mode ( 106)
- 12 Time code of thumbnail
- 13 Total recording time
- 14 Embedded custom picture file ( 114)
- 15 Bit rate and resolution (\$\sum 59\$)
- 16 Frame rate\*

### Switching Between the CF Card Slots

If both CF card slots contain a CF card, you can switch between them as necessary.

Operating modes: CAMERA MEDIA

### Press the SLOT SELECT button.

• The access indicator of the selected CF card slot will illuminate in green.

# SLOT SELECT

### Switching to Other Index Screens

All of the clips on a CF card can be accessed from the clip index screen. However, you can switch to other index screens that show only clips with an M mark ([M Mark] index screen), clips with a mark ([M Mark] index screen), or photos\* ([Photos] index screen).

- \* Photos are saved on the SD card.
- 1 Press the INDEX button.
  - The index screen selection menu appears.
- 2 Select the desired index screen and then press SET.
  - The selected index screen appears.
  - Select [Cancel] instead to cancel the operation.
  - Press the INDEX button again to return to the clip index screen.



<sup>\*</sup> For clips recorded using slow & fast motion mode, the shooting frame rate and playback frame rate will both be displayed.

### **Playing Back Clips**

You can play back clips from the clip index screen, [M Mark] index screen and [M Mark] index screen. Use the playback control buttons on the monitor unit. When the monitor unit is not attached, you have limited playback control options (play/pause/stop only) with the buttons on the camcorder and full playback control options using the joystick and joystick guide.

- 1 Move the orange selection frame to the clip you want to play back.
- 2 Press the ►/II button to start playback.
- Playback will start from the clip selected and continue until the end of the last clip in the index screen. When the last frame of the last clip is reached, playback will be paused.
- Press the ►/II button again or press SET to pause/resume the playback.
- Press the **b**utton to stop the playback and return to the index screen.


### IMPORTANT

- Observe the following precautions while the CFA or CFB access indicator is illuminated in red. Failure to do so may result in permanent data loss.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not open the cover of the CF card slot being accessed.

### (i) NOTES

• You may notice brief stops in video or audio playback between clips.

### **Onscreen Displays**

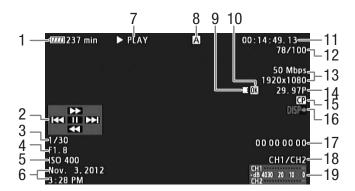

- 1 Remaining battery time (\$\sum\_{56}\$)
- 2 Joystick guide ( 129)
- 3 Shutter speed<sup>1</sup> (\$\sum\_62\$)
- 4 **C300** Aperture value¹ (<u>∭</u> 69)
- 5 ISO Speed/Gain<sup>1</sup> (\$\sum\_65\$)
- 6 Recording date and time<sup>2</sup>
- 7 Playback operation
- 8 Selected CF card
- 9 Relay recording
- 10 **M** mark/**✓** mark (**□** 102, 132)

- 11 Time code ( 84)
- 12 Clip number / Total number of clips
- 13 Bit rate and resolution (\$\sum 59\$)
- 14 Frame rate<sup>3</sup> (<u></u> 59)
- 15 Embedded custom picture file ( 114)
- 16 Output displays (\$\sum 142\$)
- 17 User bit ( \$\sum 87)
- 18 Audio output channel (\$\sum 95\$)
- 19 Audio level meter

### 7 Playback operation

▶ PLAY▶ Playback▶ Playback pause

**◄Ⅲ/Ⅲ▶** Frame reverse/Frame advance

F FWD ▶▶ Fast playback\*

◆ F REV Fast reverse playback\*

### 9 Relay recording

Appears when a clip begins on one CF card and continues uninterrupted on the other. 

■ indicates the first part of the recording, 

indicates the middle part(s) and 
indicates the last part.

<sup>&</sup>lt;sup>1</sup> Appears when [☑ LCD/VF Setup] **>** [Metadata Display] **>** [Camera Data] is set to [On]. <sup>2</sup> Appears when [☑ LCD/VF Setup] **>** [Metadata Display] **>** [Date/Time] is set to [On].

<sup>&</sup>lt;sup>3</sup> For clips recorded using slow & fast motion mode, the shooting frame rate and playback frame rate will both be displayed.


<sup>\*</sup> The playback speed (x5, x15 or x60) will also appear in the indicator.

### **Playback Controls**

When you play back a clip, operate the buttons on camcorder's body or on the monitor unit or use the joystick and joystick guide to use fast playback, play back frame-by-frame or skip clips. Refer to the following table.

### Available Playback Types

Playback type	Operation
Fast playback	Buttons: Press the $\blacktriangleleft \blacktriangleleft$ or $\blacktriangleright \blacktriangleright$ button. Joystick: During playback, push the joystick up or down. Repeat to increase the playback speed to approximately $5x \rightarrow 15x \rightarrow 60x$ the normal speed.
Frame advance/reverse	Joystick: During playback pause, push the joystick up or down.
Skip to the beginning of the next clip	Buttons: Press the ▶▶I button.  Joystick: Push the joystick right.
Skip to the beginning of the current clip	Buttons: Press the I◀◀ button.  Joystick: Push the joystick left.
Skip to the previous clip	Buttons: Press the I◀◀ button twice.  Joystick: Push the joystick left twice.
Return to playback mode	Buttons: Press the ►/II button.  Joystick: Press the joystick itself (SET button).

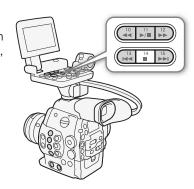



- There is no audio during any of the playback types listed in the previous table.
- During some special playback modes, you may notice some anomalies (blocky video artifacts, banding, etc.) in the playback picture.
- The speed indicated on the screen is approximate.
- During frame advance, the time advanced between frames depends on the video configuration used: 0.2 seconds (for 1280x720/24.00P, 1280x720/23.98P or 1280x720/59.94P), 0.25 seconds (for 1280x720/50.00P) and 0.5 seconds for other video configurations.
- You can press the DISP. button to turn the joystick guide display on and off.

### Adjusting the Volume


During playback, audio will be available through the  $\Omega$  (headphone) terminal; the audio signal will also be output through the HD/SD SDI terminal and the HDMI OUT terminal.

### Adjusting the Headphone Volume

Press the HEADPHONE +/- buttons to adjust the volume.



- For details on changing the audio channel, refer to Selecting the Audio Channel ( 95).
- You can also adjust the headphone volume with the () Audio Setup
   [Audio Output] (Headphone Volume) setting.

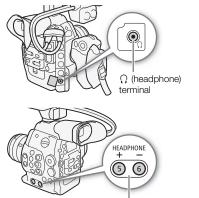

HEADPHONE +/- buttons

### **Clip Operations**

Besides playing back a clip, you can perform other operations such as deleting a clip or displaying clip information. This is done through the clip menu, which contains different functions depending on the index screen. You can use the functions in the [ Other Functions] menu to perform some of the operations on all the clips. Refer to the following table for available functions and refer to the following pages for more details of the functions.

Operating modes: CAMERA MEDIA

### Clip Menu Functions

			Index screen		
Menu item	Description	Clip	[ <b>0K</b> Mark]/ [ <b>✓</b> Mark]	[Shot Mark] <sup>1</sup> / [Expand Clip]	
[Display Clip Info]	Displays various information about a clip.	•	•	_	131
[Add <b>OK</b> Mark]/ [Delete <b>OK</b> Mark]	Adds or deletes an OX mark.	•	●2	-	132
[Add ✓ Mark]/ [Delete ✓ Mark]	Adds or deletes a <b>▼</b> mark.	•	•3	-	132
[Copy Clip]	Copies a clip from one CF card to the other.	•	●2	_	133
[Delete Clip]	Deletes a clip.	•	●3	-	134
[Shot Mark]	Displays an index screen of all the frames of a clip that have either shot mark.	•	•	-	135
[Shot Mark 1]	Displays an index screen of all the frames of a clip that have the 🛐 mark.	•	•	-	135
[Shot Mark 2]	Displays an index screen of all the frames of a clip that have the 🗓 mark.	•	•	-	135
[Expand Clip]	Displays an index screen that shows frames of a clip at a fixed interval.	•	•	-	136
[Delete User Memo]	Deletes the user memo and GPS information of a clip.	•	•	-	134
[Copy CP File]	Copies the custom picture file from a clip to the camcorder.	•	•	-	134
[Add Shot Mark 1]/ [Del. Shot Mark 1]	Adds or deletes a 🛐 mark.	_	-	•	136
[Add Shot Mark 2]/ [Del. Shot Mark 2]	Adds or deletes a 🖸 mark.	_	-	•	136
[Fewer Index Pics]	Decreases the number of thumbnails that are displayed.	_	-	• 4	136
[More Index Pics]	Increases the number of thumbnails that are displayed.	_	-	• 4	136
[Pause]	Switches to playback of a clip with playback paused on the selected frame.	-	-	•	_
[Set Index Picture]	Sets the thumbnail used in the clip index screen.	_	-	•	137

Includes also the [Shot Mark 1] and [Shot Mark 2] index screens.

<sup>2 [</sup>MX Mark] index screen only.

<sup>[</sup> Mark] index screen only.


<sup>4 [</sup>Expand Clip] index screen only.

### Using the Clip Menu

- 1 Select a clip and then press SET.
  - The clip menu appears. Available functions depend on the index screen and which functions are enabled.
- 2 Select the desired function and then press SET.
  - The function is enabled. For some functions, further action may be required. Follow the onscreen directions.
  - Press the CANCEL button instead to return to the clip index screen.
- ♠ IMPORTANT
- Observe the following precautions while the CFA or CFB access indicator is illuminated in red. Failure to do so may result in permanent data loss.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not open the cover of the either CF card slot.

### **Displaying Clip Information**

Select [Display Clip Info] in the clip menu to display the selected clip's information screen ([Clip Info] screen). Push the joystick left/right to switch to the previous/next clip. When you are finished, press the CANCEL button to return to the clip index screen.

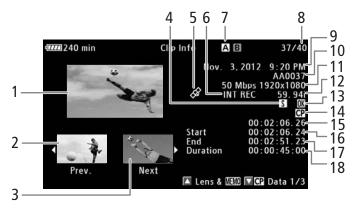

- 1 Thumbnail of the selected clip
- 2 Thumbnail of the previous clip
- 3 Thumbnail of the next clip
- 4 Shot mark (1101, 136)
- 5 Clip geotagged with GPS information ( 103)
- 6 Special recording mode ( 106)
- 7 Currently selected CF card slot (\$\square\$ 45)
- 8 Clip number / Total number of clips
- 9 Recording date and time

- 10 Clip name (<u></u> 53)
- 11 Bit rate and resolution (\$\sum 59\$)
- 12 Frame rate\* (\$\sum 59\$)
- 13 **OK** mark / **✓** mark (**◯** 102, 132)
- 14 Embedded custom picture file (1102)
- 15 Time code of the clip thumbnail
- 16 Time code of the first frame in clip
- 17 Time code of the last frame in clip
- 18 Clip duration

### Displaying the Lens Information and User Memo

From the [Clip Info] screen, push the joystick up or turn the SELECT dial up to display the [Lens & MIM] screen. In this screen you can check details about the lens used to record the clip. If the clip has an embedded user memo, you will see the user memo content in this screen as well. Push the joystick down or turn the SELECT dial down to return to the [Clip Info] screen.

<sup>\*</sup> For clips recorded using slow & fast motion mode, the shooting frame rate and playback frame rate will both be displayed.

### Displaying Custom Picture Settings

When displaying the [Clip Info] screen of a clip that has a custom picture file recorded with it, push the joystick down or turn the SELECT dial down to display the first of three screens with the clip's custom picture settings ([ $\square$  Data 1/3] screen). Push the joystick down or turn the SELECT dial down to switch the [ $\square$  Data 2/3] screen  $\rightarrow$  [ $\square$  Data 3/3] screen  $\rightarrow$  [Lens &  $\square$  Data 3/3] screen  $\rightarrow$  [Clip Info] screen.

### Adding Marks or Marks

If you add an OK mark (M) or check mark (M) to a clip, you can later display an index screen that shows only the clips with an M mark or only the clips with a M mark. Furthermore, you cannot delete clips with an M mark so you can use it to protect important clips.

### Adding an Mark or ✓ Mark during Playback

To add an OK mark (**™**) or check mark (**™**) to a clip during playback or playback pause, you must first set an assignable button to [Add **™** Mark] or [Add **™** Mark] in advance.

- 1 Set an assignable button to [Add **M** Mark] or [Add **M** Mark] (**M** 111).
  - To add both types of clip marks (to different clips), set one assignable button to [Add Mark] and another assignable button to [Add Mark].
- 2 During playback or playback pause, press the assignable button to add the clip mark.
  - A message indicating the clip mark will appear and the selected clip mark will be added to the clip.
  - Adding a clip mark to a clip during playback will pause the playback.

### Adding an Mark or Mark from the Index Screen

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Add M Mark] or [Add Mark] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation.
- 3 Select [OK] and then press SET.

  - Select [Cancel] instead to cancel the operation.

### (i) NOTES

A clip cannot have both an M mark and ✓ mark at the same time. When you add a ✓ mark to a clip with an M mark, the M mark will be deleted. Similarly, when you add an M mark to a clip with a ✓ mark, the M mark will be deleted.

### Deleting **™** Marks or **™** Marks

### Deleting an Mark or ✓ Mark from a Clip

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Delete M Mark] or [Delete ✓ Mark] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation.
- 3 Select [OK] and then press SET.
  - The screen changes back to the clip index screen the selected mark is deleted.
  - Select [Cancel] instead to cancel the operation.

### Deleting Marks from All Clips

- 1 Open the [Delete All **OK** Marks] submenu.
  - [► Other Functions] ▶ [Delete All **M** Marks]
- 2 Select [OK] and then press SET.
  - All M marks from clips on the selected CF card will be deleted.
  - Select [Cancel] instead to cancel the operation.
  - While the marks are being deleted, you can press SET to cancel.
- 3 When the confirmation message appears, press SET.

### [► Other Functions] [Delete All M Marks]

### **Copying Clips**

You can copy clips from one CF card to the other. The copied clips will retain their original name.

### Copying a Single Clip

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Copy Clip] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation. You can also check the available space on both CF cards.
- 3 Select [OK] and then press SET.
  - Select [Cancel] instead to cancel the operation.
  - While the clip is being copied, you can press SET to cancel.
- 4 When the confirmation message appears, press SET.
  - The selected clip is copied to the other CF card and the screen changes back to the clip index screen.

### Copying All Clips


1 Open the [Copy All Clips] submenu.


[ ★ Other Functions] ◆ [Clips] ◆ [Copy All Clips]

- 2 Select [OK] and then press SET.
  - All of the clips on the selected CF card will be copied to the other CF card.
  - Select [Cancel] instead to cancel the operation.
  - While the clips are being copied, you can press SET to cancel.
- 3 When the confirmation message appears, press SET.

### Copying All Clips with an Mark

- 1 Open the [Copy ox Clips] submenu.
  - [ ★ Other Functions] ◆ [Clips] ◆ [Copy M Clips]
- 2 Select [OK] and then press SET.
  - All of the clips with an M mark on the selected CF card will be copied to the other CF card.
  - Select [Cancel] instead to cancel the operation.
  - While the clips are being copied, you can press SET to cancel.
- 3 When the confirmation message appears, press SET.





- You cannot copy a clip if either CF card slot cover is open.
- If a clip is being copied to a card that already has a clip with the same number (the last 4 digits in the clip name), then the copied clip will be renamed with the following number.

### **Deleting Clips**

You can delete any clip except those with an M mark. To delete such clips, delete the M mark beforehand.

### Deleting a Single Clip

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Delete Clip] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation.
- 3 Select [OK] and then press SET.
  - Select [Cancel] instead to cancel the operation.
  - While the clip is being deleted, the operation cannot be canceled.
- 4 When the confirmation message appears, press SET.

### **Deleting All Clips**

1 Open the [Delete All Clips] submenu.

[✔ Other Functions] [Clips] [Delete All Clips]

- 2 Select [OK] and then press SET.
  - All of the clips (except for clips with an M mark) on the selected CF card will be deleted.
  - Select [Cancel] instead to cancel the operation.
  - While the clips are being deleted, you can press SET to cancel.
- 3 When the confirmation message appears, press SET.

## [Clips] [Delete All Clips]

### Deleting the User Memo and GPS Information

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Delete User Memo] and then press SET.
  - The [Delete User Memo] screen appears and it prompts you to confirm the operation.
- 3 Select [OK] and then press SET.
  - The user memo and GPS information is deleted and the screen changes back to the clip index screen.
  - Select [Cancel] instead to cancel the operation.

### Copying a Custom Picture File Embedded in a Clip

You can copy the custom picture file embedded in a clip to the camcorder.

- 1 Select the desired clip (a clip with the I icon) and then press SET to open the clip menu.
- 2 Select [Copy File] and then press SET.

134

- The [ Data 1/3] screen appears with the orange selection frame indicating a custom picture file slot in the camcorder.
- Alternatively, you can press the CUSTOM PICTURE button.
- You can push the joystick up/down or turn the SELECT dial to display the [ Data 2/3] and Data 3/3] screens.
- 3 Push the joystick left/right to select the desired file slot and then press SET.
- 4 Select [OK] and then press SET.
  - The custom picture file already in the selected file slot will be overwritten.
  - Select [Cancel] instead to cancel the operation.
- 5 When the confirmation message appears, press SET.

### (i) NOTES

- You cannot copy the custom picture file to a file slot with a protected file.
- By default, file slots [C7] to [C9] are protected.

### Displaying an Index Screen of Shot Marks

After you add shot marks to a clip, you can display an index screen that contains all the frames in a clip with either shot mark, only the mark or only the mark. When you play back a clip from this index screen, playback will start from the frame indicated by the shot mark. You can also perform other operations from this index screen, such as adding and deleting shot marks.

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Shot Mark] and then press SET.
  - The [Shot Mark] index screen appears, which contains all the frames with shot marks in the clip. Select instead [Shot Mark 1] to display an index screen only of the frames with the street mark or [Shot Mark 2] to display an index screen only of the frames with the street mark.
  - The time code under the thumbnail indicates the time code of the frame with the shot mark.
  - Press the INDEX button or CANCEL button to return to the clip index screen.



### (i) NOTES

 After you finish playing back a clip from this index screen, the index screen that was open before the [Shot Mark] index screen will appear.

### Displaying a Frame Index Screen of a Single Clip

You can display an index screen of a single clip broken down as frames at fixed intervals. This is useful when you have a long clip or wish to play back a clip from a certain point. You can change how many thumbnails are displayed. You can also perform other operations from this index screen, such as adding and deleting shot marks.

- 1 Select the desired clip and then press SET to open the clip menu.
- 2 Select [Expand Clip] and then press SET.
  - The [Expand Clip] index screen appears, which shows thumbnails of frames taken from the clip at fixed intervals. The time code under the thumbnail indicates the time code of the frame.
  - You can change the fixed interval between frames by showing more or fewer thumbnails. To show more thumbnails, open the clip menu and select [More Index Pics] and then press SET. To show fewer thumbnails, select [Fewer Index Pics] and then press SET.
  - Press the INDEX button or CANCEL button to return to the clip index screen.



### i NOTES

• After you finish playing back a clip from this index screen, the index screen that was open before the [Expand Clip] index screen will appear.

### Adding Shot Marks

You can add shot marks ( ) or both) to shots in a clip you want to set apart. Later, you can display an index screen that shows only the clips with a mark, only the clips with a mark, or only clips with either shot mark.

### Adding Shot Marks during Playback

To add an **1** mark or **1** mark to a clip during playback or playback pause, you must first set an assignable button to [Add Shot Mark 1] or [Add Shot Mark 2] in advance.

- 1 Set an assignable button to [Add Shot Mark 1] or [Add Shot Mark 2] ( 111).
- 2 During playback or playback pause, press the assignable button at the point in the clip to add the shot mark.
  - A message indicating the shot mark appears on the screen and the shot mark is added to the clip.
  - Adding a shot mark to a clip during playback will pause the playback.

### Adding Shot Marks from the Index Screen

- 1 Open the [Shot Mark] index screen or [Expand Clip] index screen.
- 2 Select the desired frame (thumbnail) and then press SET to open the clip menu.

- 3 Select [Add Shot Mark 1] or [Add Shot Mark 2] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation.
- 4 Select [OK] and then press SET.
  - The screen changes back to the previous index screen and the selected shot mark appears next to the selected clip's thumbnail.
  - Select [Cancel] instead to cancel the operation.

### (i) NOTES

- Up to 100 shot marks ( and marks combined) can be added to a single clip.
- There may be up to a 0.5 second delay from when you press the button to when the camcorder adds the shot mark.

### **Deleting Shot Marks**

- 1 Open the [Shot Mark] index screen or [Expand Clip] index screen.
- 2 Select the desired frame (thumbnail) and then press SET to open the clip menu.
- 3 Select [Del. Shot Mark 1] or [Del. Shot Mark 2] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation.
- 4 Select [OK] and then press SET.
  - The selected mark is deleted and the screen changes back to the previous index screen.
  - If a frame has no shot marks, it will no longer appear in the [Shot Mark] index screen.
  - Select [Cancel] instead to cancel the operation.

### Changing a Clip's Thumbnail

You can change the thumbnail that appears in the clip index screen to a thumbnail of a frame that appears in the [Shot Mark] index screen or [Expand Clip] index screen.

- 1 Open the [Shot Mark] index screen or [Expand Clip] index screen.
- 2 Select the desired frame (thumbnail) and then press SET to open the clip menu.
- 3 Select [Set Index Picture] and then press SET.
  - The clip information screen appears and it prompts you to confirm the operation.
- 4 Select [OK] and then press SET.
  - The selected frame is set as the thumbnail and the screen changes back to the previous index screen.
     appears next to the thumbnail of the selected frame.
  - Select [Cancel] instead to cancel the operation.

### (i) NOTES

 When playing back a clip from the clip index screen, playback will start from the beginning of the clip, regardless of the thumbnail. Clip Operations



### **External Connections**

### **Video Output Configuration**

The video signal output from the HD/SD SDI, HDMI OUT and SYNC OUT terminals depends on the clip's video configuration, the capability of the external monitor (for video output from the HDMI OUT terminal) and on various menu settings.

Operating modes: CAMERA MEDIA

### Video Output Configuration by Terminal

Refer to the following table for the video output configuration from each terminal. If necessary, you can superimpose the onscreen displays on the video displayed on the external monitor (\$\sum\$ 142).

### Video Output Configuration by Terminal

Terminal → Video configuration ↓		HD/SD	HD/SD SDI <sup>1, 2</sup> HDMI C		OUT <sup>2, 3</sup>	SYNC	SYNC OUT <sup>4</sup>	
Type of recording	Resolution (vertical)/Frame rate	HD output	SD Output <sup>5</sup>	HD output	SD output	HD Output	SD Output	
24.00P	1080/24.00P	1080/60.00i	-	1080/60.00i	-	1080/60.00i	-	
24.00	720/24.00P	720/60.00P	1	720/60.00P	ı	720/60.00P	ı	
	1080/59.94i							
	1080/29.97P	1000/50 04:	480/59.94i	1080/59.94i	480/59.94P	1080/59.94i	480/59.94i	
	1080/23.98P	1080/59.94i	480/59.941	1000/39.941	460/39.94P	1000/39.941	400/39.941	
NTSC	1080/slow or fast motion							
NISC	720/59.94P							
	720/29.97P	720/59.94P	480/59.94i	720/59.94P	480/59.94P	720/59.94P	480/59.94i	
	720/23.98P	720/09.94P	460/59.941	720/09.94P	460/39.948	720/59.948	460/39.941	
	720/slow or fast motion							
	1080/50.00i							
	1080/25.00P	1080/50.00i	576/50.00i	1080/50.00i	576/50.00P	1080/50.00i	576/50.00i	
PAL	1080/slow or fast motion							
ΓAL	720/50.00P							
	720/25.00P	720/50.00P	576/50.00i	720/50.00P	576/50.00P	720/50.00P	576/50.00i	
	720/slow or fast motion							

<sup>&</sup>lt;sup>1</sup> Set [☐ Video Setup] ▶ [SDI Output] to [HD], [SD] or [Off].

<sup>&</sup>lt;sup>2</sup> When you set [☑ LCD/VF Setup] **>** [Zebra HD Output] to [On], you can display zebra patterns on an external monitor. (HD output only. During SD output the zebra pattern will not be output.)

<sup>&</sup>lt;sup>3</sup> Video output will automatically switch to HD or SD, depending on the capability of the external monitor.

<sup>&</sup>lt;sup>4</sup> Set [∰ Video Setup] ◆ [SYNC Output] to [HD-Y] (HD component video, luminance signal) or [Composite] (SD analog composite signal).

When the camcorder is connected via HDMI OUT terminal to an external monitor, the video signal output from the HD/SD SDI terminal will be the same as that from the HDMI OUT terminal.

140


When you connect the camcorder to an external monitor for recording or playback, use the terminal on the camcorder that matches the one you wish to use on the monitor. Then, select the video signal output configuration ( $\square$  139). The camcorder can output video from all of the video output terminals simultaneously.

Operating modes: CAMERA MEDIA

### **Connection Diagram**

When you connect the camcorder to an external monitor using the SYNC OUT terminal, use headphones to monitor the sound ( $\square$  95).

We recommend that you power the camcorder from a household power outlet using the compact power adapter.

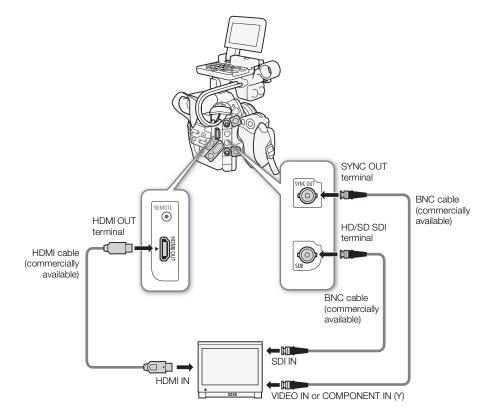

### Using the HD/SD SDI Terminal

The digital signal output from the HD/SD SDI terminal includes the video signal, audio signal and time code signal. If necessary, perform the following procedure to change the output to HD or SD\*. Turning the output off will conserve the camcorder's power.

\* Not available for 24.00P recordings.

- 1 Open the [SDI Output] submenu.
  - [ Video Setup] ▶ [SDI Output]
- 2 Select the desired option and then press SET.
  - If you selected [SD], you can select the SD output method (\(\sum 142\)).



 If necessary, you can superimpose the onscreen displays on the video displayed on the external monitor (142).

### Using the HDMI OUT Terminal

The HDMI<sup>TM</sup> OUT terminal also offers a digital connection and outputs both a video and audio signal. The output signal will automatically switch to HD or SD\* depending on the capability of the external monitor.

\* Not available for 24.00P recordings.

### (i) NOTES

- Correct operation cannot be guaranteed when connecting the camcorder to DVI monitors.
- Video may not be output correctly depending on the monitor. In such case, use another terminal.
- The HDMI OUT terminal is for output only. Do not connect the camcorder to another device's output terminal using the HDMI OUT terminal as this will cause a malfunction.
- If necessary, you can superimpose the onscreen displays on the video displayed on the external monitor (\$\sum\_142\$).
- You can select the SD output method (\$\sum 142\$).

### Using the SYNC OUT Terminal

In addition to its function as a synchronization signal output terminal, you can use the SYNC OUT terminal also as a terminal for analog video signal output. You can output an HD component video luminance signal or a down-converted SD composite video signal\*.

\* Not available for 24.00P recordings.

[SYNC Output]
[Composite]

- 1 Open the [SYNC Output] submenu.
  - [ Video Setup] ▶ [SYNC Output]
- 2 Select [HD-Y] or [Composite] and then press SET.
  - If you selected [HD-Y] (HD component video, luminance signal), no more settings are necessary. If you selected [Composite] (SD analog composite signal), you can select the SD output method with the following procedure.
- (i) NOTES
- When you play back a clip on a monitor with a 4:3 aspect ratio, the monitor will switch automatically to widescreen mode if it is compatible with the Video ID-1 or WSS system.

141

 If necessary, you can superimpose the onscreen displays on the video displayed on the external monitor (\$\sum\_{142}\$).

142

### **SD Output**

When HD video with a 16:9 aspect ratio is converted and output from the HD/SD SDI terminal, HDMI OUT terminal or SYNC OUT terminal as SD video with a 4:3 aspect ratio, you can choose how it appears on the external monitor.

[SD Output]

[Letterbox]

1 Open the [SD Output] submenu.

[ Video Setup] ▶ [SD Output]

2 Select the desired option and then press SET.

### **Options**

[Squeeze]: The image is squeezed from the left and right so that the entire image fits within the screen. The image

will appear normal if the external monitor also has a 16:9 aspect ratio.

[Letterbox]: The 16:9 aspect ratio is maintained but black letterbox bars are added to the top and bottom of the

image.

[Side Crop]: The left and right sides of the image are cropped so that the central part of the image fits within the

screen.



Original image (16:9)



[Squeeze] setting




[Letterbox] setting



[Side Crop] setting

### Superimposing Onscreen Displays to Appear on an External Monitor

You can choose to superimpose onscreen displays on the video output from the HD/SD SDI terminal, HDMI OUT terminal or SYNC OUT terminal. Doing so will display the onscreen displays on an external monitor. You can set this function separately for HD and SD output. This setting will not affect your recordings.

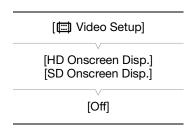

1 Open the [HD Onscreen Disp.] or [SD Onscreen Disp.] submenu.

2 Select [On] and then press SET.

• DSP→ appears on the upper right of the screen (when [ LCD/VF Setup] → [Custom Display 2] → [Output Display] is set to [On]).

(i) NOTES

- Onscreen displays will not appear on an external monitor for SD output if [□ Video Setup] → [SD Output] is set to [Side Crop].
- If you set an assignable button to [Onscreen Display] ( 111), you can press the button to turn on and off the superimposing of onscreen displays on video output from the camcorder's terminals (simultaneously for HD and SD video).

### Saving Clips to a Computer

Use the software on the supplied **Canon XF Utilities** CD-ROM to transfer clips in the camcorder to a computer to save them. The CD-ROM contains the following.

- ① Canon XF Utility: Browser for transferring clips to a computer, playing back and checking video, and managing clips.
- ② Plugins for non-linear editing (NLE) software: The plugins allow you to transfer clips from a computer or a CF card (connected via USB reader to a computer) to the NLE software. The following plugins are included.
- Canon XF Plugin for Avid Media Access (for computers running Windows or Mac OS)
- Canon XF Plugin for Final Cut Pro (for computers running Mac OS)

The instruction manual for each module provides more details. Refer to *Viewing the Software Instruction Manuals* ( 149) for details on accessing the manuals. Refer to Web sites such as your local Canon Web site for the latest information on software.

Operating modes: CAMERA MEDIA

### System Requirements

### Canon XF Utility

os	Windows XP <sup>1</sup> , SP3 Windows Vista <sup>2</sup> , SP2 Windows 7 <sup>2</sup> , with or without SP1	Mac OS X v10.5, 10.6 or 10.7	
CPU	Intel® Core (Intel® Core 2 Duo, 2.66 GHz recommended); SSE2 compatible	Intel® CPU (Intel® Core 2 Duo, 2.66 GHz recommended	
RAM	1 GB (2 GB for Windo	r Windows 7, 64-bit version)	
Available hard disk space	Installation: 80 MB		
Display	1024 x 768 resolution, 16-bit color (high color)	1024 x 768 resolution, 32,000 colors	

<sup>&</sup>lt;sup>1</sup> 32-bit version only.

### Canon XF Plugin for Avid Media Access

Required application	Media Composer 4.05 / 5.0 / 5.5 (Windows and Mac OS)
rioquirou application	NewsCutter 8.0.5 / 9.0 / 9.5 (Windows only)

Refer to the application's official home page for the application's system requirements.

### Canon XF Plugin for Final Cut Pro

Required application	Final Cut Pro 6.0.6 / 7.0.0 to 7.0.3

Refer to the application's official home page for the application's system requirements.



 Even if your computer meets the system requirements, proper operation of the software cannot be guaranteed.

<sup>&</sup>lt;sup>2</sup> 32-bit and 64-bit versions.

### Installing and Uninstalling Canon XF Utility (Windows)


### Installing Canon XF Utility

Perform the following procedure to install the **Canon XF Utility** software. Note that you can select the language used for the installation process from English, French, Spanish, Italian or German (available languages depend on the region you select). However, only the English version of the software is included in the supplied **Canon XF Utilities** CD-ROM. After installing this version, you can download language packs that will change the user interface (menus, messages, etc.) to other languages. For more details, visit your local Canon Web site.

- 1 Insert the Canon XF Utilities CD-ROM into the computer.
  - The installation screen appears. If it does not, follow the steps below.
    - Windows 7 and Windows Vista: When the AutoPlay window appears, select Run SETUP.EXE.
    - Windows 7, Windows Vista and Windows XP: Open Computer (Windows 7 and Windows Vista) or My Computer (Windows XP) and double-click the icon of the drive that contains the CD-ROM.
- 2 Select your region.
  - If you selected Asia or Oceania, skip to step 4.



- 3 Select the language to be displayed during installation.
- 4 Select an installation method and then click **OK**.
  - If you selected the **Easy Installation** installation method, skip to step 7.

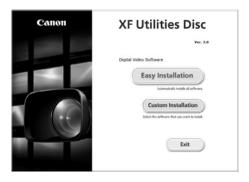

144





#### 6 Click Install.



- 7 Read the license agreement and click **Yes** to begin the installation.
  - If you do not select **Yes**, you cannot install the software.
  - When the installation has completed, **Installation has completed successfully.** appears.
  - You can click **Cancel** to cancel the operation.
- 8 Click Next and then click Finish.
- 9 Remove the CD-ROM from the computer.

#### Uninstalling Canon XF Utility

- 1 From the Start menu, select All Programs > Canon Utilities > Canon XF Utility > Uninstall Canon XF Utility.
  - A confirmation screen appears.
- 2 Click **Yes** to begin uninstalling the software.
  - When the software has been uninstalled, The software has been successfully uninstalled appears.
- 3 Click OK.

### Uninstalling Canon XF Plugin for Avid Media Access

- 1 In the Control Panel, open **Programs and Features**\* (Windows 7/Windows Vista) or **Add or Remove Programs** (Windows XP).
  - A list of installed programs appears.
- 2 Select Canon XF Plugin for Avid Media Access.
- 3 Click Uninstall or Uninstall/Change (Windows 7/Windows Vista) or Change/Remove (Windows XP).
- 4 Follow the onscreen instructions.
- \* This may be Add or Remove Programs depending on how the Control Panel is displayed.

## Uninstalling Canon XF MPEG2 Decoder

- 1 In the Control Panel, open **Programs and Features**\* (Windows 7/Windows Vista) or **Add or Remove Programs** (Windows XP).
  - A list of installed programs appears.
- 2 Select Canon XF MPEG2 Decoder.
- 3 Click Uninstall or Uninstall/Change (Windows 7/Windows Vista) or Change/Remove (Windows XP).
- 4 Follow the onscreen instructions.
- \* This may be **Add or Remove Programs** depending on how the Control Panel is displayed.

### Uninstalling the Canon XF Plugin for Avid Media Access Instructions

- 1 From the Start menu, open All Programs > Canon Utilities > Canon XF Plugin for Avid Media Access > Uninstall Canon XF Plugin for Avid Media Access Instruction Manual.
- 2 When the confirmation screen appears, click **Yes** and then click **OK**.

## Installing and Uninstalling Canon XF Utility (Mac OS)

### Installing Canon XF Utility

- 1 Insert the Canon XF Utilities CD-ROM into the computer.
- 2 Open the Finder, click CanonXFxxM under DEVICES in the sidebar and double-click MasterInstaller.
  - The "xx" in the CD-ROM's name stands for the version number.
  - Mac OS X v10.5 or 10.6: The CD-ROM's icon will appear on the desktop. You can double click the icon and then double-click MasterInstaller.
  - The installation screen appears.
- 3 Select your region.



146

4 Click Install.



5 Select the installation method and then click Next.



- 6 Read the license agreement and click Agree.
  - If you do not select **Agree**, you cannot install the software.
  - If you selected the **Easy Installation** installation method, skip to step 8.
- 7 Select the software to install and then click **Next**.



### 8 Click Next to begin the installation.



- When the installation has completed, Installation has finished. appears.
- 9 Click Finish and then remove the CD-ROM from the computer.

### Uninstalling the Software

- 1 From Applications, open Canon Utilities.
- 2 Drag and drop Canon XF Utility to Trash.

### Uninstalling Canon XF Plugin for Final Cut Pro

Drag and drop the following file to Trash.

/Library/Application Support/ProApps/MIO/RAD/Plugins/CanonXF.RADPlug

### Uninstalling Canon XF Plugin for Avid Media Access

Drag and drop the following file to Trash.

/Library/Application Support/Avid/AVX2\_Plug-ins/AMA/MVP\_CanonXF.avx

#### Uninstalling Canon XF MPEG2 Decoder

Drag and drop the following file to Trash.

/Library/QuickTime/XFMpeg2Dec.component

### Uninstalling the Canon XF Plugin for Final Cut Pro Instructions

- 1 From Applications, open Canon Utilities.
- 2 Drag and drop Canon XF Plugin for Final Cut Pro to Trash.

#### Uninstalling the Canon XF Plugin for Avid Media Access Instructions

- 1 From Applications, open Canon Utilities.
- 2 Drag and drop Canon XF Plugin for Avid Media Access to Trash.

## Viewing the Software Instruction Manuals

For details on using the software, refer to the instruction manual (PDF file) of each module. The instruction manuals are installed with the software. For computers running Windows, Adobe® Reader® is required.

### Viewing the Canon XF Utility Instruction Manual

#### Windows:

- 1 From the Start menu, select All Programs > Canon Utilities > Canon XF Utility > Canon XF Utility Instruction Manual.
- 2 Select the language of the instruction manual to view.

#### Mac OS:

- 1 From Applications, open Canon Utilities > Canon XF Utility > Manual.
- 2 Open the folder of the language and double-click the PDF file.

You can also view the instruction manual by starting the **Canon XF Utility** software and then selecting **Help** > **View Instruction Manual**.

### Viewing the Plugin Instructions

Canon XF Plugin for Avid Media Access Instructions (Windows):

- 1 From the Start menu, select All Programs > Canon Utilities > Canon XF Plugin for Avid Media Access > Canon XF Plugin for Avid Media Access Instruction Manual.
- 2 Select the desired language.

Canon XF Plugin for Final Cut Pro Instructions (Mac OS):

- 1 From Applications, open Canon Utilities > Canon XF Plugin for Final Cut Pro > Manual.
- 2 Open the folder of the language and double-click the PDF file.

Canon XF Plugin for Avid Media Access Instructions (Mac OS):

- 1 From Applications, open Canon Utilities > Canon XF Plugin for Avid Media Access > Manual.
- 2 Open the folder of the language and double-click the PDF file.

Saving Clips to a Computer

# **Taking Photos**

You can take photos when the camcorder is in CAMERA mode or you can capture a photo from a clip when the camcorder is in MEDIA mode. Photos are saved onto the SD card. In CAMERA mode, photo size is 1920x1080\*. In MEDIA mode, photo size depends on the resolution setting of the clip that the photo is captured from. If the clip is 1920x1080 or 1440x1080, the photo size is 1920x1080. If the clip is 1280x720, the photo size is 1280x720.

\* At this size, the camcorder can save approximately 670 photos on a 1 GB SD card.

## Taking Photos in CAMERA Mode

You can take a photo while the camcorder is recording a clip or is in record pause mode. If a custom picture file is selected in advance, it will be recorded with the photo ( $\square$  114). To take a photo, set an assignable button to [Photo] in advance.

Operating modes: CAMERA MEDIA

- 1 Set an assignable button to [Photo] ( 111).
- 2 Press the assignable button to take a photo.
  - 🖭 and the number of available photos appear on the upper right of the screen.
  - If a custom picture file is selected, it will be recorded with the photo.
  - The SD card access indicator will flash as the photo is being recorded.
- (i) NOTES
- Photo recording is disabled while Wi-Fi communication is turned on ([✔ Other Functions] ✔ [Wi-Fi Remote]
   ✔ [Select] is set to a setting other than [Off]).

## Capturing Photos in MEDIA Mode

You can capture a photo from a clip during playback pause. To capture a photo, set an assignable button to [Photo] in advance.

Operating modes: CAMERA MEDIA

- 1 Set an assignable button to [Photo] ( 111).
- 2 Select the desired clip and press the ►/II button to start playback.
- 3 Pause the playback at the point you want to capture.
- 4 Press the assignable button to capture a photo.
  - The screen will momentarily turn black as if a camera shutter had released.
  - 🖭 and the number of available photos appear on the upper right of the screen.
  - The SD card access indicator will flash as the photo is being recorded.
- 5 Press the button to stop playback.

### **Taking Photos**



152

## **M**IMPORTANT

- Observe the following precautions while the SD card access indicator is flashing. Failure to do so may result in permanent data loss.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not remove the SD card.

## (i) NOTES

- If the LOCK switch on the SD card is set to prevent writing, you will not be able to record a photo. Change the position of the LOCK switch in advance.
- Even if [Other Functions] [Custom Function] [Scan Reverse Rec] is set to a setting other than [Off], photos will not be inverted.

## Photo Playback


You can view the photos that you took with the camcorder.

Operating modes: CAMERA MEDIA

## Displaying the [Photos] Index Screen

Display the [Photos] index screen to view photos.

- 1 Set the **POWER** switch to MEDIA.
  - The camcorder switches to MEDIA mode and the clip index screen appears.
- 2 Press the INDEX button.
  - The index screen selection menu appears.
- 3 Select [Photo Index] and then press SET.
  - The [Photos] index screen appears.
  - After you are finished viewing photos, press the INDEX button to return to the clip index screen.

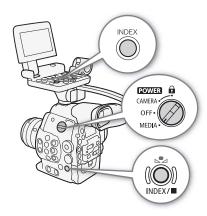

## **Viewing Photos**


- 1 Move the orange selection frame to the desired photo.
- 2 Press the ►/II button to view the photo.
  - The photo playback screen appears and the selected photo is displayed.
  - Use the I◄
     Ibuttons or push the joystick left/right to switch to the previous/next photo.
  - Press the DISP. button to hide/show the onscreen displays.
  - Press the button to return to the [Photos] index screen.



- Observe the following precautions while the SD card access indicator is flashing. Failure to do so may result in permanent data loss.
  - Do not disconnect the power source or turn off the camcorder.
  - Do not remove the SD card.

## (i) NOTES

- The following photos may not be displayed correctly.
  - Photos not recorded with this camcorder.
  - Photos created or edited on a computer.
  - Photos whose file names have been changed.

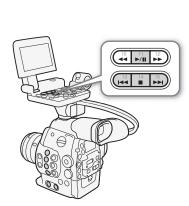

## **Photo Operations**

You can use the photo menu to protect or unprotect a photo, delete a photo, or copy a custom picture file embedded in a photo. You can display the photo menu from the [Photos] index screen or photo playback screen.

## Using the Photo Menu

- 1 From the [Photos] index screen, select a photo and then press SET.
  - If you are viewing a photo, simply press SET.
  - The photo menu appears. Available functions depend on the photo's settings.
- 2 Select the desired function and then press SET.

## **Deleting Photos**

You can delete a photo you no longer need. When you do so, however, the custom picture file embedded in it will also be deleted. Photos can be deleted one at a time from the photo playback screen or [Photos] index screen.

Operating modes: CAMERA MEDIA

### Deleting a Photo from the Playback Screen

- 1 Display the photo to be deleted (1153).
- 2 Press SET to open the photo menu.
- 3 Select [Delete] and then press SET.
  - The screen prompts you to confirm the operation.
- 4 Select [OK] and then press SET.
  - Select [Cancel] instead to cancel the operation.
  - The selected photo is deleted and the next photo is displayed.
  - If a custom picture file is embedded in the photo, it is also deleted.
- 5 When the confirmation message appears, press SET.

### Deleting a Photo from the Index Screen

- 1 Open the [Photos] Index Screen (\$\sum 153\$).
- 2 Move the orange selection frame to the photo to be deleted.
- 3 Press SET to open the photo menu.
- 4 Select [Delete] and then press SET.
  - The screen prompts you to confirm the operation.
- 5 Select [OK] and then press SET.
  - Select [Cancel] instead to cancel the operation.
  - The selected photo is deleted.
  - If a custom picture file is embedded in the photo, it is also deleted.
- 6 When the confirmation message appears, press SET.

[ Other Functions]

[Delete All Photos]

### **Deleting All Photos**

- 1 Open the [Delete All Photos] submenu.
  - [► Other Functions] ▶ [Delete All Photos]
- 2 Select [OK] and then press SET.
  - All of the photos on the SD card, except for protected ones, will be deleted.
  - Select [Cancel] instead to cancel the operation.
  - While the photos are being deleted, you can press SET to cancel.
- 3 When the confirmation message appears, press SET.



• Be careful when deleting photos. Deleted photos cannot be recovered.

## **Protecting Photos**

You can protect photos to prevent accidental erasure. The custom picture file embedded in such a photo is also protected. Photos can be protected from the photo playback screen or [Photos] index screen.

Operating modes: CAMERA MEDIA

### Protecting a Photo from the Playback Screen

- 1 Display the photo to be protected ( 153).
- 2 Press SET to open the photo menu.
- 3 Select [Protect] and then press SET.
  - To remove protection settings from a protected photo, select [Unprotect] instead.
  - The screen prompts you to confirm the operation.
- 4 Select [OK] and then press SET.
  - Select [Cancel] instead to cancel the operation.
  - The selected photo is protected and 🔄 appears on the lower left of the screen.
  - If a custom picture file is embedded in the photo, it is also protected.

#### Protecting a Photo from the Index Screen

- 1 Open the [Photos] Index Screen (Q 153).
- 2 Move the orange selection frame to the photo to be protected.
- 3 Press SET to open the photo menu.
- 4 Select [Protect] and then press SET.
  - To remove protection settings from a protected photo, select [Unprotect] instead.
  - The screen prompts you to confirm the operation.
- 5 Select [OK] and then press SET.
  - The selected photo is protected and on appears next to the photo's thumbnail.
  - Select [Cancel] instead to cancel the operation.
  - If a custom picture file is embedded in the photo, it is also protected.

## IMPORTANT

 Initializing an SD card will permanently erase all the data it contains, including protected photos and custom picture files.

## 156

## Copying Custom Picture Files

You can copy to the camcorder a custom picture file embedded in a photo. Custom picture files can be copied from the photo playback screen or [Photos] index screen.

Operating modes: CAMERA MEDIA

### Copying a File from the Playback Screen

- 1 Display the photo with the custom picture file to be copied ( $\square$  153).
- 2 Press SET to open the photo menu.
- 3 Select [Copy File] and then press SET.
  - The [ Data 1/3] screen appears with the orange selection frame indicating a file slot in the camcorder.
  - Alternatively, you can press the CUSTOM PICTURE button.
  - You can push the joystick up/down or turn the SELECT dial to display the [ Data 2/3] and [ Data 3/3] screens.
- 4 Push the joystick left/right to select the desired file slot and then press SET.
- 5 Select [OK] and then press SET.
  - The custom picture file embedded in the selected photo is copied, overwriting the file in that slot.
  - Select [Cancel] instead to cancel the operation.
- 6 When the confirmation message appears, press SET.

## Copying a File from the Index Screen

- 1 Open the [Photos] Index Screen (\$\sum 153\$).
- 2 Move the orange selection frame to the photo with the custom picture file to be copied.
- 3 Press SET to open the photo menu.
- 4 Select [Copy File] and then press SET.
  - The [ Data 1/3] screen appears with the orange selection frame indicating a file slot in the camcorder.
  - Alternatively, you can press the CUSTOM PICTURE button.
  - You can push the joystick up/down or turn the SELECT dial to display the [ Data 2/3] and [ Data 3/3] screens.
- 5 Push the joystick left/right to select the desired file slot and then press SET.
- 6 Select [OK] and then press SET.
  - The custom picture file embedded in the selected photo is copied, overwriting the file in that slot.
  - Select [Cancel] instead to cancel the operation.
- 7 When the confirmation message appears, press SET.


## i) NOTES

- You cannot copy the custom picture file to a file slot with a protected file.
- By default, file slots [C7] to [C9] are protected.

## **Photo Numbering**

Photos are automatically assigned consecutive numbers from 0101 to 9900, and stored on the SD card in folders containing up to 100 photos. Folders are numbered from 101 to 998. You can select the photo numbering method to be used.

The photo number indicates the name and location of the file on the SD card. For example, a photo numbered 101-0107 is located in the "DCIM\101CANON" folder as the file "IMG\_0107.jpg".



Operating modes: CAMERA MEDIA

- 1 Open the [Photo Numbering] submenu.
  - [✔ Other Functions] ♠ [Photo Numbering]
- 2 Select the desired option and the press SET.

### **Options**

[Reset]: Photo numbers will restart from 101-0101 every time you insert a new SD card. If an SD card already

contains photos, photo numbers will continue from the number following that of the last photo on the SD

card.

[Continu.]: Photo numbers will continue from the number following that of the last photo recorded with the

camcorder.



- If you select [Continu.] and the SD card you insert already contains a photo with a larger number, a new photo will be assigned a number one higher than that of the last photo on the SD card.
- We recommend using the [Continu.] setting.

Photo Operations



# Additional Information

# **Menu Options**

For details about how to select an item, refer to *Using the Menus* ( $\square$  29). For details about each function, see the reference page. Menu items without a reference page are explained after the tables. Setting options in boldface indicate default values. Menu items not available appear grayed out.

### To skip directly to the page of a specific menu:

[ Camera Setup] menu	<b>159</b>
(1) Audio Setup] menu	<b>160</b>
[ Video Setup] menu	<b>160</b>
[ LCD/VF Setup] menu	<b>1</b> 61
[ <b>00:00</b> TC/UB Setup] menu	<b>164</b>
[✔ Other Functions] menu	<b>164</b>
[★ My Menu] customized menu	<b>168</b>

## [ Camera Setup] menu ( CAMERA mode only)

Menu item	Submenu	Setting options	$\Box$
(300 [Light Metering]		[Backlight], [Standard], [Spotlight]	73
(300 [AE Shift]		[+2.0], [+1.5], [+1.25], [+1.0], [+0.75], [+0.5], [+0.25], <b>[±0]</b> , [-0.25], [-0.5], [-0.75], [-1.0], [-1.25], [-1.5], [-2.0]	72
[ISO/Gain]	[Select]	[ISO], [Gain]	
	[Extended Range]	[On], <b>[Off]</b>	65
	[ISO Increment]	[1 stop], <b>[1/3 stop]</b>	- 65
	[Gain]	[Normal], [Fine]	
<b>C300</b> [Iris]	[Mode]*	[Automatic], [Manual]	
	[Iris Increment]	[1/2 stop], <b>[1/3 stop]</b> , [Fine]	69
	[Zoom-Iris Correct.]	[On], [Off]	
[Shutter]	[Mode]	[Speed], [Angle], [Clear Scan], [Slow], [Off]	62
	[Shutter Increment]	[1/3 stop], <b>[1/4 stop]</b>	02
C300 [AF Mode]*	1	[One Shot], [Continu.]	
[Flicker Reduction]		[Automatic], [Off]	
[CP CINEMA Locked]		[On], <b>[Off]</b>	58
[ABB]		[Cancel], [OK]	48
[Color Bars]	[Enable]	[On], <b>[Off]</b>	00
	[Type]	[SMPTE], [EBU]**, [ARIB]	98
C300 [Periph. Illum. Corr.]		[On], <b>[Off]</b>	34

<sup>\*</sup> Available only with lenses compatible with automatic aperture (\$\square\$ 192).

<sup>\*\*</sup>The default value depends on the country/region or purchase.

## [🔊) Audio Setup] menu

Menu item	Submenu	Setting options	CAMERA	MEDIA	
[Audio Input]	[XLR Rec Channel]	[CH1], [CH1/CH2]	•	-	92
	[XLR1 Mic Trimming]	[+12 dB], [+6 dB], <b>[0 dB]</b> , [-6 dB], [-12 dB]			02
	[XLR2 Mic Trimming]		•	_	93
	[XLR1 Mic Att.]	[On], <b>[Off]</b>			0.4
	[XLR2 Mic Att.]		•	_	94
	[XLR ALC Link]	[Linked], [Separated]	•	-	93
	[Limiter]	[On], <b>[Off]</b>	•	-	93, 94
	[1 kHz Tone]	[-12 dB], [-18 dB], [-20 dB], <b>[0ff]</b>	•	_	98
	[MIC Mode]	[Automatic], [Manual]	•	_	0.4
	[MIC Level]	0 to 99 <b>(50)</b>	•	-	94
	[MIC Att.]	[On], <b>[Off]</b>	•	-	95
[Audio Output]*	[Channel]	[CH1/CH2], [CH1/CH1], [CH2/CH2], [AII/AII]	•	•	95
	[Headphone Volume]	[Off], 1 to 15 <b>(8)</b>	•	•	129

<sup>\*</sup> Not available in the [Photos] index screen.

## [ Video Setup] menu

Menu item	Setting options	TI CONTRACTOR OF THE CONTRACTO
[SDI Output]	[HD], [SD]*, [Off]	141
[SYNC Output]	[HD-Y], [HD Sync], [Blk Burst]*, [Composite]*, [Off]	90, 141
[HD Onscreen Disp.]	[0n], <b>[0ff]</b>	142
[SD Onscreen Disp.]*	[0n], <b>[0ff]</b>	142
[SD Output]*	[Squeeze], [Letterbox], [Side Crop]	142

<sup>\*</sup> Not available for 24.00P recordings.

## [ LCD/VF Setup] menu

Submenu	Setting options	CAMERA	MEDIA	
[Brightness]	-99 to 99 <b>(±0)</b>	•	•	
[Contrast]	-99 to 99 <b>(±0)</b>	•	•	
[Color]	-20 to 20 <b>(±0)</b>	•	•	39
[Sharpness]	1 to 4 <b>(2)</b>	•	•	
[Backlight]	[Normal], [Bright]	•	•	
[Brightness]	-99 to 99 (±0)	•	•	
[Contrast]	-99 to 99 (±0)	•	•	1
[Color]	-20 to 20 <b>(±0)</b>	•	•	39
[Sharpness]	1 to 4 <b>(2)</b>	•	•	1
[Backlight]	[Normal], [Bright]	•	•	
	[0n], <b>[0ff]</b>	•	•	39
	[On], [Off]	•	•	39
	[On], <b>[Off]</b>	•	-	58
	[0n], <b>[0ff]</b>	•	-	
	[Peaking 1], [Peaking 2]	•	-	1
[Color]	[White], [Red], [Yellow], [Blue]	•	-	78
[Gain]	[Off], 1 to 15 <b>(8)</b>	•	-	
[Frequency]	1 to 4 <b>(2)</b>	•	-	
[Color]	[White], [Red], [Yellow], [Blue]	•	-	1
[Gain]	[Off], 1 to 15 <b>(15)</b>	•	-	
[Frequency]	1 to 4 (1)	•	-	
	[0n], <b>[0ff]</b>	•	-	
	[Zebra 1], [Zebra 2], [Zebra 1&2]	•	-	
	[ <b>70 ±5%</b> ], [75 ±5%], [80 ±5%], [85 ±5%], [90 ±5%], [95 ±5%]	•	-	83
	[70%], [75%], [80%], [85%], [90%], [95%], [100%]	•	-	
	[On], <b>[Off]</b>	•	_	1
[Enable]	[On], <b>[Off]</b>	•	-	
[Center]	[White], [Gray], [Off]	•	-	1
[Horizontal]		•	-	1
[Grid]		•	_	1
[Safety Zone]		•	_	82
	[80%], [90%], [92.5%], <b>[95%]</b>	•	_	-
[Salety Zolle Area]	[ [00 /0], [30 /0], [32.3 /0], [33 /0]			
[Safety Zone Area] [Aspect Marker]		•	_	
[Aspect Marker] [Aspect Ratio]	[White], [Gray], [0ff] [4:3], [13:9], [14:9], [1.66:1], [1.75:1], [1.85:1], [2.35:1]	•	-	
	[Brightness] [Contrast] [Color] [Sharpness] [Backlight] [Brightness] [Contrast] [Color] [Sharpness] [Backlight]  [Color] [Gain] [Frequency] [Color] [Gain] [Frequency] [Color] [Gain] [Frequency]	[Brightness]	Brightness	[Brightness]

Menu item	Submenu	Setting options	CAMERA	MEDIA	
[Custom Display 1]	C300 [Light Metering]	[ <b>On]</b> , [Off]	•	-	-
	[Custom Picture]	[ <b>On]</b> , [Off]	•	-	
	C300 [Focal Length]	[On], [Off]	•	-	Ī
	[ND Filter]	[ <b>On]</b> , [Off]	•	-	
	C300 [AF Mode]	[ <b>On]</b> , [Off]	•	-	
	[Key Lock]	[ <b>On]</b> , [Off]	•	-	
	[White Balance]	[On], [Off]	•	-	
	C300 [Exposure]	[On], [Off]	•	-	
	<b>C300</b> [Iris]	[ <b>On]</b> , [Off]	•	-	
	[ISO/Gain]	[On], [Off]	•	-	
	[Shutter]	[ <b>On]</b> , [Off]	•	-	
	[Peaking]	[ <b>On]</b> , [Off]	•	-	
	[Magnification]	[ <b>On]</b> , [Off]	•	-	
	[View Assist.]	[ <b>On]</b> , [Off]	•	-	
	<b>C300</b> [Lens]	[ <b>On]</b> , [Off]	•	-	
Custom Display 2]	[Remaining Battery]	[Warning], [Normal], [Off]	•	-	-
	[Remaining Rec Time]	[Warning], [Normal], [Off]	•	-	Ī
	[Rec Mode]	[ <b>On]</b> , [Off]	•	-	
	[Genlock]	[ <b>On]</b> , [Off]	•	-	
	[Time Code]	[ <b>On]</b> , [Off]	•	-	
	[Interval Counter]	[ <b>On]</b> , [Off]	•	-	
	[SD Card Status]	[Warning], [Normal], [Off]	•	-	
	[Bit Rate/Resolution]	[On], [Off]	•	-	
	[Frame Rate]	[ <b>On]</b> , [Off]	•	-	
	[Character Rec]	[On], [Off]	•	-	
	[Output Display]	[On], <b>[Off]</b>	•	-	
	[SDI Rec Command]	[On], [Off]	•	-	
	[User Memo]	[On], [Off]	•	-	
	[User Bit]	[On], [Off]	•	-	
	[Audio Output CH]	[On], [Off]	•	-	
	[Audio Level]	[On], [Off]	•	-	
	[Wi-Fi]	[ <b>On]</b> , [Off]	•	-	
	[GPS]	[ <b>On]</b> , [Off]	•	-	Ť
	[Date/Time]	[Date/Time], [Time], [Date], [Off]	•	-	Ī
[Metadata Display]*	[Date/Time]	[On], <b>[Off]</b>	_	•	
	[Camera Data]	[On], <b>[Off]</b>	_	•	1 -

<sup>\*</sup> Not available in the [Photos] index screen.

[Audio Level]: Displays the audio level meter when set to [On].

## [Custom Display 1] settings

[Light Metering]: When set to [On], the light metering icon (\* or A) is displayed if [ Camera Setup] [Light Metering] is set to [Backlight] or [Spotlight].

[Custom Picture]: Displays the custom picture icon (CP) when set to [On], indicating that a custom picture profile will be recorded with a clip.

[Focal Length]: Displays the current focal length of an attached EF lens when set to [On].

[ND Filter]: Displays the ND filter indicator when set to [On].

[GAF Mode]: When set to [On], displays the autofocus icon (AF) if the focus mode switch on the attached EF lens is set to AF.

[Key Lock]: Displays the key lock icon (♠) when set to [On].

[White Balance]: Displays the white balance indicator when set to [On].

[Exposure]: Displays the exposure bar when set to [On].

[Iris]: Displays the aperture setting when set to [On].

[ISO/Gain]: Displays the ISO speed or gain setting when set to [On].

[Shutter]: Displays the shutter speed setting when set to [On].

[Peaking]: Displays the peaking icon (PEAK1) or PEAK2) when set to [On].

[Magnification]: Displays the screen magnification icon (MAGN) when set to [On], indicating that the image on the screen is being magnified.

[View Assist.]: Displays the view assistance icon (V.Assist.) when set to [On].

(C300 [Lens]: Displays the lens warning icon (LENS) when set to [On].

### [Custom Display 2] settings

[Remaining Battery]: Controls when the remaining battery indicator appears.

[Normal]: Always appears on the screen.

[Warning]: Appears only when there is a warning.

[Remaining Rec Time]: Displays the remaining recording time.

[Normal]: Always appears on the screen.

[Warning]: Appears only when there is a warning.

[Rec Mode]: Displays the recording operation indicator ([STBY] in record pause mode, for example) when set to [On].

[Genlock]: Displays the Genlock synchronization icon (Gen.) when set to [On].

[Time Code]: Displays the time code when set to [On].

[Interval Counter]: Displays the countdown during interval recording mode when set to [On].

[SD Card Status]: Controls when the SD card status indicator appears.

[Normal]: Always appears on the screen.

[Warning]: Appears only when there is a warning.

[Bit rate/Resolution]: Displays the bit rate and resolution when set to [On].

[Frame Rate]: Displays the frame rate when set to [On].

[Character Rec]: Displays the character recording warning icon (Character Rec]: Displays will be recorded on the clip.

[Output Display]: Displays the output display warning icon (DISP+) when set to [On], indicating that the onscreen displays will be output to an external monitor.

[SDI Rec Command]: Displays the status of the SDI recording command that is being output when [✔ Other Functions] ▶ [SDI Rec Command] is set to [On].

[User Memo]: Displays the user memo icon (MEMO) when set to [On], indicating that a user memo will be recorded with a clip.

[User Bit]: Displays the user bit when set to [On].

[Audio Output CH]: Displays the audio output channel when set to [On].

[Audio Level]: Displays the audio level indicator and, if activated, the audio peak limiter icon (LIM) when set to [On].

[Wi-Fi]: Displays the Wi-Fi icon (Wi-Fi) when set to [On].

[Date/Time]: Displays the date and time when set to [On].

[Metadata Display]: Displays the date and time of recording and/or the camera data (shutter speed, aperture value, gain) during playback.

### [00:00 TC/UB Setup] menu (CAMERA) mode only)

Menu item	Submenu	Setting options	
[Time Code]	[Mode]	[Preset], [Regen.]	84
	[Run]	[Rec Run], [Free Run]	84
	[DF/NDF]*	[DF], [NDF]	85
	[Setting]	[Set], [Reset]	85
	[TC In/Out]	[in], [Out]	89
	[24P TC/Sync]	[XF Legacy], [Normal]	_
[User Bit]	[Rec Mode]	[Internal], [External]	89
	[Output Mode]	[Fixed], [Pulldown]	90
	[Type]	[Setting], [Time], [Date]	87

<sup>\*</sup> In the following cases, the time code is set to [NDF] and this setting cannot be changed:

- [♠ Other Functions] ▶ [24.00P] is set to [On]
   [♠ Other Functions] ▶ [NTSC/PAL] is set to [PAL]
   [♠ Other Functions] ▶ [NTSC/PAL] is set to [NTSC] and the frame rate is set to 23.98P

[24P TC/Sync]: Determines the frequency for time code input and output and for Genlock synchronization when the frame rate is set to 23.98P or 24.00P.

[XF Legacy]: Synchronization mode compatible with Canon XF series camcorders. Synchronizes the time code at a 30-frame signal and the Genlock signal at a 59.94i or 60.00i signal.

[Normal]: Standard synchronization mode. Synchronizes the time code at a 24-frame signal and the Genlock signal at a 23.98P or 24.00P signal.

#### [00:00 User Bit Setup] menu (MEDIA mode only\*)

Menu item	Setting options	
[Output Mode]	[Fixed], [Pulldown]	90

<sup>\*</sup> Not available in the [Photos] index screen.

### [ Other Functions] menu

Menu item	Submenu	Setting options	CAMERA	MEDIA	
[Reset]	[All Settings]	[Cancel], [OK]	•	•	
	[Camera Settings]	[Cancel], [OK]	•	-	_
	[Assignable Buttons] <sup>1</sup>	[Cancel], [OK]	•	•	
[Transfer Menu/ CP]	[Save To 🖘]	[Menu], [Menu+ CP]	•	•	124
	[Load From 🖘]	[Menu], [Menu+ CP]	•	•	124
[Time Zone]		List of world time zones. [UTC-05:00 New York] or [UTC+01:00 Central Europe] <sup>2</sup>	•	•	27
[Set Clock]	[Date/Time]	-	•	•	
	[Date Format]	[YMD], [YMD/24H], <b>[MDY]</b> , [MDY/24H], <b>[DMY]</b> , [DMY/24H] <sup>2</sup>	•	•	27

164

Menu item	Submenu	Setting options	CAMERA	MEDIA	
[WFM (LCD)] <sup>1</sup>	[Setting]	[WFM], [VS], [Edge Mon.], [Off]	•	-	99
		[WFM], [VS], <b>[Off]</b>	-	•	99
	[Waveform Monitor]	[Line], [Line+Spot], [Field], [RGB], [YPbPr]	•	•	00
	[Gain]	[1x], [2x]	•	•	99
	[Vectorscope]	[Spot], [Normal]	•	•	100
	[Gain]	[1x], [5x]	•	•	100
	[Edge Monitor]	[Type 1], [Type 2]	•	-	100
	[Gain]	[0ff], 1 to 15 <b>(12)</b>	•	-	100
[Language []]		[Deutsch], <b>[English]</b> , [Español], [Français], [Italiano], [Polski], [Русский], [简体中文], [世국어], [日本語]	•	•	28
[Assign Button] <sup>1</sup>	[1] to [15]	See footnote 3	•	-	111
	[1] to [9]		-	•	7 '''
[Tally Lamp]	<del>-</del>	[ <b>On]</b> , [Off]	•	-	-
[Media Access LED]		[ <b>On</b> ], [Off]	•	•	-
[Genlock Adjust.]		-1023 to +1023 <b>(000)</b>	•	-	-
[24.00P] <sup>1</sup>		[On], <b>[Off]</b>	•	•	59
[NTSC/PAL] <sup>1</sup>		[NTSC], [PAL] <sup>2</sup>	•	•	59
[Relay Rec]		[ <b>On]</b> , [Off]	•	-	46
[Double Slot Rec]		[0n], <b>[0ff]</b>	•	-	46
[Bit Rate/Resolution]		[50 Mbps 1920x1080], [50 Mbps 1280x720], [35 Mbps 1920x1080], [35 Mbps 1440x1080], [35 Mbps 1280x720], [25 Mbps 1440x1080]	•	-	59
[Frame Rate]		When [NTSC/PAL] is set to [NTSC]: [59.94i], [59.94P], [29.97P], [23.98P] When [NTSC/PAL] is set to [PAL]: [50.00i], [50.00P], [25.00P]	•	-	59
[Special Rec]		[Interval Rec], [Frame Rec], [Pre Rec], [Slow & Fast Motion], [Off]	•	-	106
[Interval Rec]	[Interval]	[1 sec] to [10 sec], [15 sec], [20 sec], [30 sec], [40 sec], [50 sec], [1 min] to [10 min]	•	-	
	[Rec Frames]	When [24.00P] is set to [0n] or [Frame Rate] is set to [23.98P], [29.97P] or [59.94i]:  1, 3, 6, 9  When [Frame Rate] is set to [25.00P], [50.00i], [50.00P] or [59.94P]:  2, 6, 12	•	-	106
[Frame Rec]	[Rec Frames]	When [24.00P] is set to [0n] or [Frame Rate] is set to [23.98P], [29.97P] or [59.94i]:  1, 3, 6, 9  When [Frame Rate] is set to [25.00P], [50.00i], [50.00P] or [59.94P]:  2, 6, 12	•	-	107

Menu item	Submenu	Setting options	CAMERA	MEDIA	
[Slow & Fast Motion]	[S&F Frame Rate]	When [24.00P] is set to [On] or [NTSC/PAL] is set to [NTSC]:  1 to 30 (fps) (30) if [Bit Rate/Resolution] is set to an option with 1080 vertical resolution 1 to 60 (fps) (30) if [Bit Rate/Resolution] is set to an option with 720 vertical resolution When [NTSC/PAL] is set to [PAL]:  1 to 25 (fps) (25) if [Bit Rate/Resolution] is set to an option with 1080 vertical resolution 1 to 50 (fps) (25) if [Bit Rate/Resolution] is set to an option with 720 vertical resolution	•	-	108
[Clips]	[Title Prefix]	Two characters, each: [A] to [Z], [0] to [9] ([AA])	•	_	-
	[Number setting]	[Set], [Reset]	•	-	-
	[Delete Last Clip]	[Cancel], [OK]	•	_	-
	[Copy All Clips] <sup>4</sup>	[Cancel], [OK]	_	•	133
	[Copy OX Clips] <sup>5</sup>	[Cancel], [OK]	_	•	133
	[Delete All Clips] <sup>4</sup>	[Cancel], [OK]	_	•	134
Delete All 👊 Marks] <sup>5</sup>		[Cancel], [OK]	_	•	133
[Rec Review]		[Entire Clip], [Last 4 sec]	•	_	105
[Set Metadata]	[Setting]	[Remote], [SD Card]			
	[User Memo]	[Off], list of user memo files available on the SD card			96
	[Country Code]	Letters A to Z, numbers 0 to 9, plus sign (+),	•	_	
	[Organization]	minus sign (-), colon (:), space			_
	[User Code]				
[SDI Rec Command]		[On], <b>[Off]</b>	•	_	-
[Photo Numbering] <sup>1</sup>		[Reset], [Continu.]	•	•	157
[Delete All Photos] <sup>6</sup>		[Cancel], [OK]	_	•	155
[Add CP File]	[To Clip]	[ <b>On]</b> , [Off]			447
	[To Photo]	[ <b>On]</b> , [Off]	•	_	117
[Custom Function]	[Shockless WB]	[On], <b>[Off]</b>			
	(300 [AE Response]	[Fast], [Normal], [Slow]			
	[Control Dial]	C300 [Iris], [ISO/Gain], [Off]			
	[Grip Ctrl Dial]	C300PL [ISO/Gain], [Off]			
	[Control Dial Dir.]	[Reverse], [Normal]			
	[Grip Ctrl Dial Dir.]		•	-	123
	[SELECT Dial Dir.]	[Reverse], [Normal]			
	[F. Assist. B&W]	[Both], [Magnify], [Peaking], [Off]			
	[Scan Reverse Rec]	[Both], [Vertical], [Horizontal], [Off]			
	[Character Rec]	[On], <b>[Off]</b>			
	[⋒ START/STOP]	[On], <b>[Off]</b>			
[Reset Hour Meter]	1	[Cancel], [OK]	•	•	-

Menu item	Submenu	Setting options	CAMERA	MEDIA	
[Wi-Fi Remote] <sup>7</sup>	[Set Up New]	For details refer to "WFT-E6 Wireless File			
	[Select]	Transmitter - Guide for Canon Camcorders"			
	[Edit]	(PDF file).			
	[Camera Settings]			_	_
	[Select User]				
	[User Setting]				
[GPS] <sup>8</sup>	[Setting]	[0n], <b>[0ff]</b>	•	_	103
	[Auto Time Setting]	[0n], <b>[0ff]</b>	•	_	103
[Initialize Media]	[CF A]	[Cancel], [OK]			
	[CF B]		•		45
	[SD Card]	[Complete], [Quick]	•	•	
C300 [Lens Firmware]	•	-	•	_	35
[Firmware]		-	•	_	-

<sup>&</sup>lt;sup>1</sup> Not available in the [Photos] index screen.

The default settings are as follows. [1]: [MAGN.], [2]: [PEAKING], [3]: [ZEBRA], [4]: [WFM], [5]: [Headphone +], [6]: [Headphone -], [7]: [MAGN.], [8]: [WFM], [9]: [EDGE MON.], [10] to [15]: [(NONE)].

<sup>4</sup> Available in the clip index screen only.

[Reset]: Reset various camcorder settings.

[All Settings]: Resets all the camcorder's settings to default settings, except for the hour meter.

[Camera Settings]: Resets the white balance, iris (300 only), ISO speed, gain, shutter speed,

[ Camera Setup] settings and custom picture settings to default settings.

[Assignable Buttons]: Resets the assignable buttons to default settings.

[Tally Lamp]: Allows you to set whether the tally lamp illuminates while the camcorder is recording.

[Media Access LED]: Allows you to set whether the CF card access indicators or the SD card access indicator illuminates while the camcorder is accessing a CF card or SD card.

[Genlock Adjust.]: The phase difference between the external Genlock signal and the camcorder is initially set to 0. This function allows you to adjust it within the range of approx. ±0.4 H (-1023 to 1023). When setting to 1000 or more or -1000 or less, set the first field to 10 or -10, respectively.

#### [Clips] settings

[Title Prefix]: Determines the first 2 characters of the clip name. Combined with the [Number Setting] setting, this constitutes the 6-character clip name.

[Number Setting]: Determines the last 4 digits of the clip name. Combined with the [Title Prefix] setting, this constitutes the 6-character clip name. Select [Set] to assign a desired number to the first clip you record or select [Reset] to reset the number to [0001].

The numerals increase every time a clip is recorded.

[Delete Last Clip]: Deletes the last clip you recorded. This setting option will not appear if you turned the camcorder off since recording the last clip.

[Country Code]: This identifier is the country code defined by ISO-3166-1 and is to be entered starting from the left.

<sup>&</sup>lt;sup>2</sup> The default value depends on the country/region or purchase.

<sup>3</sup> Setting options for [Assign Button]: [(NONE)], [ONE-SHOT AF]\*, [PUSH AUTO IRIS]\*, [Iris Mode]\*, [Iris +]\*, [Iris -]\*, [ND +], [ND -], [AE Shift +]\*, [AE Shift -]\*, [Backlight]\*, [Spotlight]\*, [PEAKING], [ZEBRA], [WFM], [EDGE MON.], [MAGN.], [Color Bars], [Markers], [LOD Setup], [VF Setup], [LCD/VF B&W], [Onscreen Display], [Add Shot Mark 1], [Add Shot Mark 2], [Add Mark], [Add Mark], [Time Code], [Time Code Hold], [Headphone +], [Headphone -], [Audio Output CH], [Audio Level], [Photo], [FUNC.], [FUNC. Shutter], [FUNC. ISO/Gain], [FUNC. WB], [My Menu], [Initialize Media], [LENS EXCHANGE], [User Setting (NONE)].

\* - ■300 only.

<sup>&</sup>lt;sup>5</sup> Available in the clip index screen and [**OK** Mark] index screen only.

<sup>&</sup>lt;sup>6</sup> Available in the [Photos] index screen only.

<sup>&</sup>lt;sup>7</sup> Available only when the optional WFT-E6 Wireless File Transmitter is attached to the camcorder.

<sup>&</sup>lt;sup>8</sup> Available only when the optional GP-E1 GPS Receiver is attached to the camcorder.

### Menu Options

[Organization]: This identifier represents the organization that owns or operates the camcorder and can be obtained by registering with the SMPTE Registration Authority. If the organization is not registered, enter [0000].

[User Code]: This identifier designates the user. Leave this blank if [Organization] is set to [0000].

[SDI Rec Command]: When you connect the camcorder to another device using the HD/SD SDI terminal, if you start or stop recording with the camcorder, the other device will also start or stop recording.

[Reset Hour Meter]: The camcorder has two "hour meters" – the first keeps track of total operation time and the second keeps track of operation time since the last time the second hour meter was reset with this function.

[Firmware]: You can verify the current version of the camcorder's firmware. This menu option is usually unavailable.

### [★ My Menu] (CAMERA mode only)

Menu item	Submenu	Setting options	
[Edit]	[Register]	[Cancel], [OK]	30
	[Move]	[Cancel], [OK]	
	[Delete]	[Cancel], [OK]	
	[Reset All]	[Cancel], [OK]	

168

STATUS

## Displaying the Status Screens

You can use the status screens to check the camcorder's various recording- and playback-related settings. You can also output the status screens on an external monitor.

Operating modes: CAMERA MEDIA

- 1 Press the STATUS button.
  - The status screen most recently displayed will appear unless you turned off the camcorder or changed the operating mode. In such case, the [Camera] status screen appears in GAMERA mode and the [Assign Button 1/2] status screen appears in MEDIA mode.
- 2 Push the joystick up/down or use the SELECT dial to scroll through the status screens.
- 3 When you are finished, press the STATUS button again to exit the status screens.
  - Alternatively, you can press the MENU or CUSTOM PICTURE button. Doing so will exit the status screen and open the respective menu.

Status screen	Description	CAMERA	MEDIA	
[Camera]	Displays settings related to recording, such as ISO speed/gain, iris <sup>1</sup> and shutter speed increments, peripheral illumination correction <sup>1</sup> and attached lens model information <sup>1</sup> .	•	-	170
[Assign Button 1/2], [Assign Button 2/2]	Allows you to verify the current function of each assignable button.	•	●2	170
[Audio]	Displays settings related to audio.	•	•	171
[Media]	Displays information about the recording media.	•	•	171
[Video]	Displays the settings for the video terminals and which special recording mode is in effect.	•	•	172
[Metadata 1/2], [Metadata 2/2]	Displays the user memo and other metadata that will be recorded with clips.	•	-	172
[Battery/Hour Meter]	Allows you to check the remaining battery time, battery life and how long the camcorder has been in operation.	•	•	173
[CP Data 1/3], [CP Data 2/3], [CP Data 3/3] <sup>3</sup>	Displays the settings for the custom picture file that will be embedded into clips.	•	_	173, 174
[GPS Information Display] <sup>4</sup>	Displays GPS information.	•	-	175
[Wi-Fi Remote 1/4] to [Wi-Fi Remote 4/4] <sup>5</sup>	Displays settings related to the configuration of the optional WFT-E6 Wireless File Transmitter and the Wi-Fi network setup. For more details, download the "WFT-E6 Wireless File Transmitter - Guide for Canon Camcorders" (PDF file) from your local Canon Web site and follow the instructions to complete the necessary setup.	•	-	-

<sup>&</sup>lt;sup>1</sup> **C300** only.

<sup>&</sup>lt;sup>2</sup> Does not appear in the [Photos] index screen.

These screens appear only after a custom picture file has been selected.

<sup>&</sup>lt;sup>4</sup> This screen appears only when an optional GP-E1 GPS Receiver is attached to the camcorder.

<sup>&</sup>lt;sup>5</sup> These screens appear only when the optional WFT-E6 Wireless File Transmitter is attached to the camcorder and an active access point has been activated with the [✔ Other Functions] ▶ [Wi-Fi Remote] setting.


## [Camera] Status Screen (CAMERA mode only)



- 1 ISO speed/Gain increment (\$\sum 65\$)
- 2 **C300** Iris mode ( 69)
- 3 **C300** Iris increment (<u></u> 69)
- 4 Shutter speed increment (\$\sum 63\$)

- 5 G300 Correction for peripheral illumination (1) 34)
- 6 **C300** AF mode ( 77)
- 7 C300 Flicker reduction (\$\iiii 64)\$
- 8 G300 Lens model name info ( 32)


## [Assign Button 1/2], [Assign Button 2/2] Status Screen

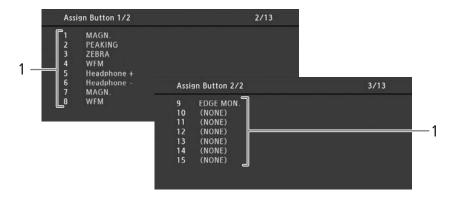

- 1 Assignable buttons 1 to 15\* (QQ 111)
- \* Assignable buttons 10 to 15 do not appear in MEDIA mode.

## [Audio] Status Screen

### In CAMERA mode

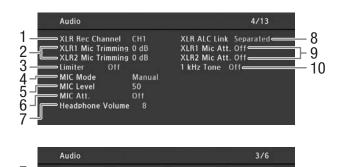


In MEDIA mode

XLR terminal recording channel ( 92)

→ Headphone Volume

- 2 Microphone sensitivity (XLR terminal) (QQ 93)
- 3 Audio peak limiter (\$\sum 93, 94)\$
- 4 Microphone mode (MIC terminal) ( 94)
- 5 Microphone recording level (MIC terminal) ( 94)
- 6 Microphone attenuator (MIC terminal) ( 95)
- 7 Headphone volume (129)
- 8 Linking recording levels of XLR terminals (\$\sum 93\$)
- 9 Microphone attenuator (XLR terminal) (\$\sum 94\$)
- 10 Audio reference signal (\$\square\$ 98)

## [Media] Status Screen

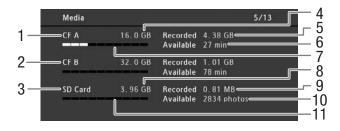


- 1 CF card A
- 2 CF card B
- 3 SD card
- 4 Total space on CF card A
- 5 Used space on CF card A
- 6 Available recording time on CF card A
- 7 Approximate used space on CF card A
- 8 Total space on SD card
- 9 Used space on SD card
- 10 Available number of shots on SD card
- 11 Approximate used space on SD card

## (i) NOTES

• Depending on the recording media, the total space displayed on the screen may differ from the nominal capacity listed on the CF card or SD card.

172

## [Video] Status Screen

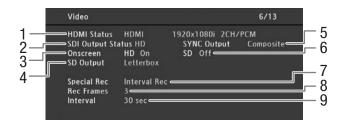

- 1 HDMI OUT terminal status
- 2 HD/SD SDI terminal output setting ( 141)
- 3 Superimposing onscreen displays to HD output (☐ 142)
- 4 SD output setting (142)
- 5 SYNC OUT terminal output status ( 141)
- 6 Superimposing onscreen displays to SD output (☐ 142)
- 7 Special recording mode ( 106)
- 8 Number of frames for interval recording mode (\$\sum 106\$) or frame recording mode (\$\sum 107\$)

## [Metadata 1/2] Status Screen (CAMERA mode only)



- 1 User memo file name ( 96)
- 2 Clip title
- 3 Camera operator

- 4 Filming location
- 5 Clip description

## [Metadata 2/2] Status Screen (CAMERA) mode only)



- 1 Country code ( 167)
- 2 Organization code

3 User code

## [Battery/Hour Meter] Status Screen



- 1 Remaining recording time
- 2 Remaining recording time indicator
- 3 Battery life indicator

- 4 Total operation time (11 168)
- Operation time since using [Reset Hour Meter]( 168)

## [ Data 1/3] Status Screen (CAMERA) mode only)



- 1 Custom picture file name (\$\sum 114\$)
- 2 Gamma (<u>117</u>)
- 3 Master pedestal ( 118)
- 5 Black gamma settings (level, range and point) (☐ 118)
- 6 Knee settings (slope, point and saturation) (☐ 119)
- 7 Skin detail settings (hue, chroma, area and Y level) (☐ 120)
- 8 Selective NR settings (hue, chroma, area and Y level) (120)
- 9 Low key saturation ( 119)

174

## Data 2/3] Status Screen (CAMERA) mode only)



- Sharpness settings (level, horizontal detail frequency, horizontal/vertical detail balance, and limit) (

  119)
- 2 Sharpness settings (select, knee aperture gain and slope) ( 119)
- 3 Level depend settings (level, slope and offset) ( 120)
- 4 Coring settings (level, offset, curve and depth) ( 119)
- 5 Noise reduction ( 120)
- 6 Color matrix settings (select, gain and phase) (☐ 121)
- 7 Color matrix settings ( 121)

## [CP Data 3/3] Status Screen (CAMERA) mode only)



- 1 White balance RGB gain (XX 121)
- 2 Color correction ( 121)
- 3 Area A settings (phase, chroma, area and Y level) (☐ 121)
- 5 Area B settings (phase, chroma, area and Y level) ( 121)
- 6 Area B revision settings (level and phase) (☐ 121)
- 7 Setup level and press (\$\sum 122\$)
- 8 Clip at 100% (XX 122)

## [GPS Information Display] Status Screen (CAMERA) mode only)



- 1 Latitude
- 2 Longitude
- 3 Elevation

- 4 UTC (coordinated universal time) date and time
- 5 Satellite signal strength

For details refer to Recording GPS Information (Geotagging) (  $\square$  103).

If you have a problem with your camcorder, refer to this section. Consult your dealer or a Canon Service Center if the problem persists.

#### Power source

#### The camcorder will not turn on or it turns off by itself.

- The battery pack is exhausted. Replace or charge the battery pack.
- Remove the battery pack and reattach it correctly.

#### Shortly after turning it on, the camcorder turns off on its own.

- You are using a DC coupler or a battery pack that is not compatible for use with this camcorder. Use a recommended battery pack (1 188).

#### Cannot charge the battery pack.

- The temperature of the battery pack is outside the charging range. If the battery pack's temperature is below 0 °C (32 °F), warm it before charging it; if it is above 40 °C (104 °F), let the battery pack cool down before charging it.
- Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).
- The battery pack is faulty. Replace the battery pack.

#### The battery pack is exhausted extremely quickly even at normal temperatures.

- Check the [Battery/Hour Meter] status screen ( 173) to see whether the battery pack is at the end of its service life. If so, buy a new battery pack.

## Recording

#### The camcorder's controls are not responsive/disabled

- The grip unit's plug may not be correctly connected to the camcorder. When attaching the grip unit to the camcorder, make sure the grip unit's plug is firmly inserted all the way into the connection terminal on the camcorder ( 41). If you changed the angle of the grip unit, make sure you did not partially disconnect the plug by mistake.
- When the POWER switch is set to ♠, all buttons except for the START/STOP button are locked and cannot be operated. (Depending on the [Other Functions] ▶ [Custom Function] ▶ [♠ START/STOP] setting, the START/STOP may be locked as well.) Set the POWER switch to CAMERA.

#### Pressing the START/STOP button will not start recording.

- The CF card is full or it already contains the maximum number of clips (999 clips). Delete some clips (1134) or save your clips (1143) and initialize the CF card (1145) to free some space. Alternatively, replace the CF card.
- The camcorder is in lens exchange mode. Press the assignable button set to [LENS EXCHANGE] to exit this mode.

### The point where the START/STOP button was pressed does not match the beginning/end of the recording.

- There is a slight interval between pressing the START/STOP button and the actual start/end of recording. This is not a malfunction.

#### The camcorder will not focus.

- The viewfinder is not adjusted. Use the dioptric adjustment dial to make the proper adjustment (\$\sum\_{\text{3}}\$) 38).
- The lens is dirty. Clean the lens with a soft lens-cleaning cloth.

#### When a subject flits across in front of the lens, the image appears slightly bent.

- This is a phenomenon typical of CMOS image sensors. When a subject crosses very quickly in front of the camcorder, the image may seem slightly warped. This is not a malfunction.

#### Bright red, green or blue dots appear on the screen.

- The camcorder's CMOS sensor is a delicate piece of precision engineering. Direct exposure of the sensor to ion rays or other types of cosmic radiation may affect it and this may rarely appear as bright colored dots on the screen. This is the nature of CMOS image sensors and does not represent a malfunction. Adjusting the black balance ( 48) may help solve the problem.
- The effects of the damage may be more noticeable when the camcorder is used in places subject to high temperatures, when a high ISO speed or gain level is used and when slow shutter speeds are used.

#### Changing between recording ( REC) and record pause (STBY) takes longer than usual.

- When the CF card contains a large number of clips, some operations may take longer than usual. Save your clips (

143) and initialize the CF card (

45). Alternatively, replace the CF card.

#### The camcorder cannot record to a CF card properly.

- This may occur as recordings are made and deleted over time. Save your clips (1143) and initialize the CF card (1145).

176

#### After using the camcorder for a long time, it becomes hot.

- The camcorder may become hot after using it continuously for long periods of time; this is not a malfunction. If the camcorder becomes unusually hot or it becomes hot after using it only for a short while, it may indicate a problem with the camcorder. Consult a Canon Service Center.

#### The built-in ND filter is stuck and does not change.

- The electronic motor that drives the ND filter may not be working correctly. As an emergency measure, you can operate the ND filter manually () 186). Eventually, consult a Canon Service Center.

## Playback

#### Cannot delete a clip.

- You cannot delete clips with an M mark. Remove the M mark ( 132) to delete the clip.

#### Deleting clips takes longer than usual.

- When the CF card contains a large number of clips, some operations may take longer than usual. Save your clips (

143) and initialize the CF card (

45).

#### Cannot delete a photo.

- The photo is protected. Remove the protection (1155).
- The LOCK switch on the SD card is set to prevent accidental erasure. Change the position of the LOCK switch.

#### Cannot copy clips.

- There is not enough available space on the CF card being copied to or the CF card already contains the maximum number of clips (999 clips). Delete some clips (1134) to free some space or replace the CF card.

## **Indicators and Onscreen Displays**

#### appears in red on the screen.

- Battery pack is exhausted. Replace or charge the battery pack.

appears on the screen.

- The camcorder cannot communicate with the battery pack attached so the remaining battery time cannot be displayed.

#### The tally lamp does not illuminate.

- Set [Other Functions] > [Tally Lamp] to [On].

#### The tally lamp flashes quickly. (4 flashes per second)

- The battery pack is exhausted. Replace or charge the battery pack.
- There is not enough available space on the CF card. Delete some clips ( 134) to free some space or replace the CF card.
- A system error has occurred. Turn off the camcorder and back on again. If this does not solve the problem, consult a Canon Service Center.

## 

- The combined available space on both CF cards is low. Replace the CF card that is not being recorded onto.

#### appears in red on the screen.

- An SD card error occurred. Turn off the camcorder. Remove and reinsert the SD card. Initialize the SD card if the display does not change back to normal.
- The SD card is full. Replace the SD card or delete some photos (🛄 154) to free some space on the SD card.

#### Even after stopping recording, the CFA/CFB access indicator stays illuminated in red.

- The clip is being recorded. This is not a malfunction.

#### LENS appears on the screen.

- The camcorder and lens cannot communicate normally. Clean the lens's contacts and reattach the lens.

### Picture and Sound

### Screen displays turn on and off repeatedly.

- The battery pack is exhausted. Replace or charge the battery pack.
- Remove the battery pack and reattach it correctly.

#### Abnormal characters appear on the screen and the camcorder does not operate properly.

- Disconnect the power source and reconnect it after a short time. If the problem still persists, perform one of the following actions.
- Disconnect the power source and press the RESET button. This resets all the camcorder's settings to default values except for custom picture settings and the hour meter.
- Use the [Other Functions] [Reset] [All Settings] function. This resets all the camcorder's settings to default values except for the hour meter.

#### Video noise appears on screen.

- Keep a distance between the camcorder and devices that emit strong electromagnetic fields such as near powerful magnets and motors, MRI machines or high-voltage power lines.

#### Horizontal bands appear on the screen.

- This is a phenomenon typical of CMOS image sensors when recording under some types of fluorescent, mercury or sodium lamps. This is not a malfunction. You may be able to reduce the symptoms by setting [Camera Setup] ▶ [Flicker Reduction] to [Automatic] and/or by setting the shutter mode to [Speed] and the shutter speed to a value matching the frequency of the local electrical system: 1/50\* or 1/100 for 50 Hz systems, 1/60 or 1/120 for 60 Hz systems.
- \* May not be available depending on the frame rate.

#### Audio cannot be recorded.

- An external microphone connected to the XLR terminal requires phantom power. Set the XLR terminal switch to MIC+48V (1 92).
- The camcorder's MIC terminal is given priority over the XLR terminals. To record audio from the XLR terminals, be sure not to connect any microphones to the MIC terminal.

#### Audio is recorded at an extremely low level.

- When using the XLR terminals: The AUDIO LEVEL switch is set to M, and the recording level is set too low. When using the MIC terminal: [Audio Setup] ▶ [Audio Input] ▶ [MIC Mode] is set to [Manual] and the [MIC Level] setting is too low. Check the audio level meter on the screen or rear panel and adjust the audio level correctly (☐ 93, 94).
- The microphone attenuator is on. Turn off the microphone attenuator (\$\subset\$ 94, 95).

#### Sound is distorted or is recorded at lower levels.

- When recording near loud sounds (such as fireworks, shows or concerts), sound may become distorted or it may not be recorded at the actual levels. Activate the microphone attenuator ( 94, 95), or adjust the audio recording level manually.

### Recording Media and Accessories

#### Cannot insert the recording media.

- The CF card or SD card you are trying to insert is not facing the correct direction. Turn it over and insert it.

#### Cannot record on the CF card.

- A compatible CF card must be used ( 43).
- The CF card is full or it already contains the maximum number of clips (999 clips). Delete some clips (\(\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\superscript{\s

#### Cannot record on the SD card.

- Initialize the SD card ( 45) when you use it with the camcorder for the first time.
- The LOCK switch on the SD card is set to prevent accidental erasure. Change the position of the LOCK switch.
- The SD card is full. Delete some photos ( 154) to free some space or replace the SD card.
- The folder and file numbers have reached their maximum value. Set the [Other Functions] ▶ [Photo Numbering] setting to [Reset] and insert a new SD card.

#### Recording to and playing back from a CF card is slow.

- This may occur as video is recorded/deleted over time. Save your clips ( 143) and initialize the CF card ( 145).

#### Recording to and playing back from an SD card is slow.

- This may occur as photos are recorded/deleted over time. Save your photos and initialize the SD card (🗀 45).

178

### **Connections with External Devices**

#### Video noise appears on a nearby TV screen.

- When using the camcorder in a room where a TV is located, keep a distance between the compact power adapter and the power or antenna cables of the TV.

#### Playback looks fine on the camcorder but there is no image on the external monitor.

- The camcorder is not connected correctly to the external monitor. Make sure you are using the correct connection ( 140).
- The video input on the external monitor is not set to the video terminal to which you connected the camcorder. Select the correct video input.

# The camcorder is connected using a commercially available HDMI cable, but there is no picture or sound from the external monitor.

- Disconnect the HDMI cable and then restore the connection or turn the camcorder off and then on again.

### List of Messages

Refer to this section if a message appears on the screen. The messages in this section appear in alphabetical order. For error messages related to the optional WFT-E6 Wireless File Transmitter refer to the *Troubleshooting* section of the 'WFT-E6 Wireless File Transmitter - Guide for Canon Camcorders' ( $\square$  37).

#### Accessing CF A/CF B Do not remove

- You opened the CF card slot cover while the camcorder was accessing the CF card. Close the CF card slot cover.

#### © Camera Lens communication error. Clean the lens's contacts and reattach the lens.

- The camcorder cannot correctly communicate with the lens due to dirty lens contacts. After the message disappears, the LENS icon appears on the screen. Clean the lens's contacts and reattach the lens.

#### Cannot acquire battery information

- Battery information can be displayed only for batteries bearing the Intelligent System mark.

#### Cannot communicate with the battery pack. Continue using this battery pack?

- You attached a battery pack that does not bear the Intelligent System mark.
- If you are using a battery pack that bears the Intelligent System mark, there may be a problem with the camcorder or battery pack. Consult a Canon Service Center.

#### Cannot play back

- The file control information is corrupted or there was a decoder error. Turn off the camcorder and back on again. If this does not solve the problem, consult a Canon Service Center.
  - Corrupted file control information cannot be recovered. CF cards or clips with corrupt file control information cannot be read by the supplied Canon XF Utility or plugins.

#### Cannot record

- The file control information is corrupted or there was an encoder error. Turn off the camcorder and back on again. Then, remove the CF card being used and reinsert it. Alternatively, replace the CF card. If this does not solve the problem, consult a Canon Service Center.
- Corrupted file control information cannot be recovered. CF cards or clips with corrupt file control information cannot be read by the supplied Canon XF Utility or plugins.

#### Cannot switch CF card slots

- The SLOT SELECT button was pressed while the camcorder is recording. Wait until recording is finished to change the selected CF card slot.

#### CF A/CF B Buffer overflow. Recording was stopped.

- The data transfer rate was too high for the CF card in use and the recording was stopped. Use a recommended card ( 43).

#### CF A/CF B Cannot restore

- Could not recover data on the CF card. Save your clips ( 143) and initialize the CF card ( 145).

#### CF A/CF B error

- The CF card cannot be recognized or cannot be accessed. Check that the CF card is inserted correctly and not malfunctioning.

### CF A/CF B Management data is not supported and will be deleted

- This message may appear if you insert into the camcorder a CF card that was initialized by another Canon professional camcorder. Check the contents of the CF card.

#### CF A/CF B Management file error Cannot record

- Cannot record because the camcorder cannot write to the file control information. This may occur if the files on the CF card were accessed using another device. Save your clips (

  143) and initialize the CF card (

  45).
- During double slot recording, both "CF A" and "CF B" will appear in the message.

#### CF A/CF B Media full

- CF card A or CF card B is full so recording will not start. Switch to the CF card in the other CF card slot to record.

#### CF A/CF B Media is not supported

- CF cards that are less than 512 MB or not UDMA-compatible cannot be used with the camcorder. Use a recommended CF card (☐ 43).

#### CF A/CF B Number of clips already at maximum

- The CF card selected for recording already contains the maximum number of clips (999 clips). Replace the CF card or use the CF card in the other CF card slot.
- Because both CF cards reached the maximum number of clips, double slot recording is not available.
- During double slot recording, both "CF A" and "CF B" will appear in the message.

#### CF A/CF B Reached the recording limit for one clip. Recording was stopped.

- When recording a single clip for an extended period of time, the clip will be split into smaller video files every 2 GB (or 1 GB when recording in slow motion). This message will appear when the number of smaller video files reaches 99.

#### CF A/CF B Recording was stopped.

- The file control information is corrupted or there was an encoder error. Turn off the camcorder and back on again. Then, remove the CF card being used and reinsert it. Alternatively, replace the CF card. If this does not solve the problem, consult a Canon Service Center.
- Corrupted file control information cannot be recovered. CF cards or clips with corrupt file control information cannot be read by the supplied Canon XF Utility or plugins.

#### CF A/CF B Using a card that supports UDMA mode 4 or higher is recommended

- The CF card's UDMA mode is lower than UDMA4. We recommend using a CF card that with a UDMA mode of at least UDMA4.

#### CF A→CF B / CF B→CF A Switched

 This message appears when you use the SLOT SELECT button to switch the CF card slot in use or recording continued from one CF card to the other.

#### CF A→CF B / CF B→CF A Will switch in a moment

- The CF card is almost full so recording will continue on the other CF card in approximately 1 minute.

#### Change the battery pack

- The battery pack is exhausted. Replace or charge the battery pack.

#### ✓ / M Mark Error

- Could not add a mark or mark. If the message appears in mode, try adding the mark again. If that does not work, add the mark in meda mode. If the message appears in meda mode, turn off the camcorder and then back on. Then, try to add the mark again.

#### Check the data on CF A/CF B Initializing the card is also recommended

- The CF card cannot be used for any of the following reasons.
- A problem has occurred with the CF card.
- The camcorder cannot read the CF card's data.
- · The CF card was initialized using a computer.
- The CF card has been partitioned.
- Save your clips (\$\sum 143\$) and initialize the CF card (\$\sum 45\$).

#### Check the SD card

- The SD card cannot be accessed. Check that the SD card is inserted correctly and not malfunctioning.
- Due to an SD card error, photos cannot be taken or viewed. Remove and then reinsert the SD card or use a different SD card.

### Cover is open

- The CF card slot cover was open when the camcorder was switched to or turned on in [CAMERA] mode. Close the cover.

#### Data on CF A/CF B needs recovering Attempt to recover?

 If data on the CF card is corrupted, such as when the power suddenly turned off while recording, the data must be recovered. When this message appears, select [OK] and press SET.

#### Fan error

- The cooling fan may not be working properly. Consult a Canon Service Center.

180

#### File name error

- The folder and file numbers have reached their maximum value. Set [Other Functions] ▶ [Photo Numbering] to [Reset] and delete all the photos on the SD card (☐ 154) or initialize it (☐ 45).

#### Invalid operation

- The following operations cannot be performed.
  - Adding a shot mark to a clip that already has a shot mark or to a clip in frame recording mode or interval recording mode.
  - Adding an M mark to clip that already has an M mark or adding a M mark to a clip that already has a M mark.
  - In CAMERA mode, immediately reviewing a recording made in a special recording mode.
- Pressing the START/STOP button when there is no CF card in the camcorder.

#### ©300 Lens error Change the frame rate

- The lens attached to the camcorder is not compatible for shooting at the frame rate selected on the camcorder. Select a different the frame rate (\sum 59).

#### Lens error Turn the camcorder off, then on again.

- There was a communication error between the camcorder and the lens. Turn the camcorder off and then on again.

## E300 Lens firmware update Firmware update failed. Try updating again.

- The lens's firmware could not be correctly updated. Try updating the lens's firmware again.

#### Media full

- CF card A and CF card B are full. Delete some clips ( 134) to free some space or replace a CF card.

#### Media is almost full

- The amount of available space on CF card A and CF card B combined is low. Replace the CF card that is not selected.

#### .. ..

- There are no clips on the CF card to play back. Clips must be recorded ( 51) in order to play them back.

#### No photos

- There are no photos on the SD card to play back. Photos must be taken ( 151) in order to view them.

#### No Shot Marks

- This message appears if shot marks in a clip were deleted from the [Shot Mark] index screen. Press the INDEX button to return to the clip index screen.

#### Number of Shot Marks at maximum

- The shot mark could not be added because the clip already contains 100 shot marks ( and and marks combined). You must delete shot marks ( 137) before adding any more.

## Recorded in 24.00P standard Check the data on CF A/CF B Initializing the card is also recommended.

- The CF card contains 24.00P recordings. To record on this CF card, save your clips (☐ 143) and initialize the CF card (☐ 45). To play back the recordings on the CF card, set [Other Functions] ▶ [24.00P] to [On].

#### Recorded in NTSC/PAL standard Check the data on CF A/CF B Initializing the card is also recommended

- The CF card contains clips that were recorded using a recording type other than the one currently used by the camcorder. To record on this CF card, save your clips ( 143) and initialize the CF card ( 45). To play back the recordings on the CF card, set [Other Functions] [NTSC/PAL] to [NTSC] or [PAL] as necessary, so the camcorder matches the CF card.

## SD card error

- You inserted a MultiMedia Card (MMC) into the camcorder. Use a recommended SD card (\$\sum\_{\pm} 43)\$.

#### Shot Mark Error

- Could not add a shot mark. If the message appears in CAMERA mode, try adding the mark again. If that does not work, add the mark in MEDIA mode after you finish recording. If the message appears in MEDIA mode, turn off the camcorder and then back on. Then, try to add the mark again.

#### System error

- Turn off the camcorder and back on again. If this does not solve the problem, there may be a malfunction with the camcorder. Consult a Canon Service Center.

## This photo cannot be displayed

- You may not be able to display photos taken with other devices or image files created or edited on a computer.

## **Handling Precautions**

## Camcorder

Be sure to observe the following precautions to ensure maximum performance.

- Do not carry the camcorder by the LCD panel or monitor unit. Be careful when closing the LCD panel.
- Do not leave the camcorder in places subject to high temperatures (like the inside of a car parked under direct sunlight), or high humidity.
- Do not use the camcorder near strong electromagnetic fields such as near powerful magnets and motors, MRI machines or high-voltage power lines. Using the camcorder in such places may cause anomalies in the video or audio or video noise to appear.
- Do not use or store the camcorder in dusty or sandy places. The camcorder is not waterproof avoid also water, mud or salt. If any of the above should get into the camcorder it may damage the camcorder and/or the lens. Consult a Canon Service Center as soon as possible.
- Be careful to avoid dust and dirt particles accumulating on the lens or entering the camcorder. When you finish using the camcorder, make sure to attach the body cap to the lens mount and the lens cap and dust cap to the lens.
- Do not point the lens or viewfinder lens at the sun or other strong light sources. Do not leave the camcorder
  pointed at a bright subject. Internal components may become damaged due to concentration of the light by
  the lens. Be careful especially when using a tripod or shoulder strap. When you are not using the camcorder or
  viewfinder, make sure to attach the lens cap to the lens and the viewfinder cap to the viewfinder.
- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Do not touch the lens contacts on the lens mount. Dirty contacts may cause a poor contact between the camcorder and the lens resulting in incorrect operation of the camcorder. After removing the lens, make sure to attach the body cap to the lens mount and the lens cap and dust cap to the lens.



 Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage. When using the shoulder strap, do not allow the camcorder to swing and hit an object.

#### Long-term storage

If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C (86 °F).

## **Battery Pack**

## DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperature higher than 60 °C (140 °F). Do not leave it near a heater or inside a car in hot weather.
- Do not try to disassemble or modify it.
- Do not drop it or subject it to shocks.
- Do not get it wet.
- Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals
  with a soft cloth.

182

#### Long-term storage

- Store battery packs in a dry place at temperatures no higher than 30 °C (86 °F).
- To extend the battery life of the battery pack, discharge it completely before storing it.
- Charge and discharge all your battery packs fully at least once a year.

## Always attach the battery terminal cover.

Do not allow any metal objects to touch the terminals (figure 1), as this can cause a short circuit and damage the battery pack. Attach the terminal cover whenever the battery pack is not being used (figure 2).

The battery terminal cover has a []-shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs. For example, with charged battery packs, attach the terminal cover so that the []-shaped hole shows the colored label.





Figure <sup>1</sup>

ure 1 Figur





Terminal cover attached



Charged



## Remaining battery time

If the remaining battery time displayed is not correct, charge the battery pack fully. Still, the correct time may not be displayed if a fully charged battery pack is used continuously in high temperatures or it is left unused for long periods of time. Also, the correct remaining time may not be displayed, depending on the battery life. Use the time shown on the screen as an approximation.

## Using higher capacity batteries

You can use the optional BP-970G / BP-975 battery packs with this camcorder. However, as the battery compartment cover cannot be closed when using these higher capacity battery packs, you will need to remove it beforehand. Note that removing the battery compartment cover will render the camcorder more exposed to moisture, dust and foreign objects.

- 1 Slide down the BATT.OPEN switch and open the battery compartment cover.
- 2 Push the latch at the bottom of battery compartment.
- 3 Gently pull out the battery compartment cover.



## Regarding the use of non-Canon battery packs

 We recommend using genuine Canon battery packs bearing the Intelligent System mark.



• If you attach to the camcorder battery packs that are not genuine Canon battery packs, the remaining battery time will not be displayed.

## **Recording Media**

- We recommend backing up the recordings on the recording media onto your computer. Data may be corrupted or lost due to defects or exposure to static electricity. Canon shall not be liable for lost or corrupted data.
- Do not touch or expose the terminals to dust or dirt.
- Do not use recording media in places subject to strong magnetic fields.
- Do not leave recording media in places subject to high humidity and high temperature.
- Do not disassemble, bend, drop, or subject recording media to shocks and do not expose them to water.
- Check the direction before inserting the recording media. Forcing recording media into the slot if it is not
  correctly oriented may damage the recording media or the camcorder.
- Do not attach any labels or stickers on the recording media.
- SD cards: SD cards have a physical switch to prevent writing on the card so as to avoid the accidental erasure of the card's content. To write-protect the SD card, set the switch to the LOCK position.



## Disposal

When you delete data on the recording media, only the file allocation table is altered and stored data is not physically erased. Take the necessary precautions when you dispose of the recording media, for example by physically damaging it to prevent the leakage of private data. If giving the recording media to another person, initialize it (using the [Complete] initialization option for SD cards,  $\square$  45). Fill it up with unimportant recordings, and then initialize it again. This makes recovering the original recordings very difficult.

## **Built-in Rechargeable Lithium Battery**

The camcorder has a built-in rechargeable lithium battery to keep the date/time and other settings. The built-in lithium battery is recharged while you use the camcorder; however, it will discharge completely if you do not use the camcorder for about 3 months.

To recharge the built-in lithium battery: Connect the compact power adapter to the camcorder and use a household power outlet to power the camcorder for 24 hours while it is turned off.

184

## Maintenance/Others

## Cleaning

## Camcorder Body

• Use a soft, dry cloth to clean the camcorder body. Never use chemically treated cloths or volatile solvents such as paint thinner.


#### Lens

- Remove any dust or dirt particles using a non-aerosol type blower brush.
- Use a clean, soft lens-cleaning cloth to gently wipe the lens using commercially available cleaning fluid for eyeglasses. Never use tissue paper.

#### LCD Screen

- Clean the LCD screen using a clean, soft lens-cleaning cloth.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

#### Viewfinder

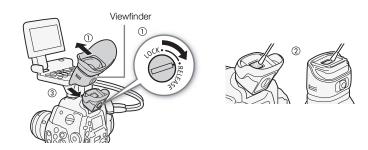

- 1 Slide the viewfinder unit's LOCK/RELEASE screw to the RELEASE position and remove the viewfinder unit by sliding it up.
- 2 Wipe away dirt with a cotton swab.
- 3 Reattach the viewfinder unit by sliding it back onto the camcorder and turn back the LOCK/ RELEASE screw to the LOCK position.



• Be careful not to scratch the glass and screen when cleaning them.

## Condensation

Moving the camcorder rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

## Condensation may form in the following cases:

- When the camcorder is moved quickly from cold to warm places
- When the camcorder is left in a humid room
- When a cold room is heated rapidly

## To avoid condensation

- Do not expose the camcorder to sudden or extreme changes in temperature.
- Remove the recording media and battery pack. Then, place the camcorder in an airtight plastic bag and let it adjust gradually to temperature changes before removing it from the bag.

## When condensation is detected


The camcorder automatically shuts off.

The precise time required for water droplets to evaporate will vary depending on the location and weather conditions. As a general rule, wait for 2 hours before resuming use of the camcorder.

## Operating the ND Filter Manually

In the rare case that the internal electronic motor that drives the ND filter malfunctions, you can operate the ND filter manually as an emergency measure.

- 1 Turn off the camcorder and remove the lens.
- 2 Unscrew the screw in the illustration and remove the cover.
- 3 Pressing lightly, use a Phillips head screwdriver to turn the ND filter as necessary.
  - You can check the position of the ND filter through the lens mount.
- 4 Return the cover and tighten the screw.

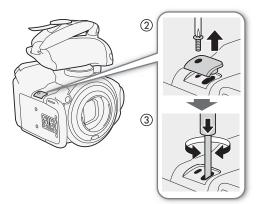

## **Using the Camcorder Abroad**

#### **Power Sources**

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240VAC, 50/60Hz. Consult a Canon Service Center for information on plug adapters for overseas use.


## **Optional Accessories**

The following optional accessories are compatible with this camcorder. The availability differs from area to area.







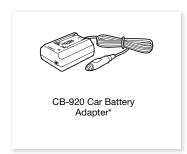












<sup>\*</sup> This accessory cannot be used to power this camcorder directly; it can only be used to charge the battery pack.

**For our customers in the USA:** Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

## Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.



## **Battery Packs**

When you need extra battery packs, select from the following: BP-950G, BP-955, BP-970G\*, BP-975\*.

When you use battery packs bearing the Intelligent System mark, the camcorder will communicate with the battery and display the remaining usage time (accurate to 1 minute). You can only use and charge these battery packs with camcorders and chargers compatible with Intelligent System. \*The optional BP-970G / BP-975 Battery Pack were not originally designed for use with this camcorder. Because of its size, you will not be able to close the battery compartment cover when using one ( 183).

## **Charging Times**

Use the supplied CG-940 Battery Charger to charge battery packs. The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack.

BP-950G	BP-955	BP-970G	BP-975
245 min.	200 min.	350 min.	295 min.

#### Recording and Playback Times

Recording and playback times given in the following tables are approximate and vary according to recording mode and charging, recording or playback conditions. The effective usage time of the battery pack may decrease when recording in cold surroundings, when using the brighter screen settings, etc. The typical shooting times listed below are approximate times for shooting with repeated operations such as start/stop, and power on/off.

EF lenses with lens contacts draw power from the camcorder to operate some functions. Effective usage times may decrease depending on the lens used.

Other accessories attached to the camcorder, such as the optional WFT-E6 Wireless File Transmitter or the GP-E1 GPS Receiver, also draw power from the camcorder to operate. Effective usage times will decrease when such accessories are used while shooting.

## Approximate times with the monitor unit attached (LCD screen + viewfinder), SDI output on

Type of recording	Bit rate	Usage time	BP-950G	BP-955	BP-970G	BP-975
NTSC / 24.00P	50 Mbps	Recording (maximum)	185 min.	180 min.	255 min.	275 min.
		Recording (typical)	120 min.	115 min.	165 min.	175 min.
		Playback	230 min.	230 min.	325 min.	345 min.
	35 Mbps	Recording (maximum)	185 min.	185 min.	260 min.	275 min.
		Recording (typical)	120 min.	120 min.	165 min.	175 min.
		Playback	230 min.	230 min.	325 min.	345 min.
	25 Mbps	Recording (maximum)	185 min.	185 min.	260 min.	275 min.
		Recording (typical)	120 min.	120 min.	165 min.	180 min.
		Playback	235 min.	230 min.	325 min.	350 min.
PAL	50 Mbps	Recording (maximum)	190 min.	185 min.	265 min.	280 min.
		Recording (typical)	120 min.	120 min.	170 min.	180 min.
		Playback	240 min.	235 min.	335 min.	355 min.
	35 Mbps	Recording (maximum)	190 min.	185 min.	265 min.	280 min.
		Recording (typical)	120 min.	120 min.	170 min.	180 min.
		Playback	240 min.	240 min.	335 min.	355 min.
	25 Mbps	Recording (maximum)	190 min.	190 min.	265 min.	285 min.
		Recording (typical)	120 min.	120 min.	170 min.	185 min.
		Playback	240 min.	240 min.	335 min.	360 min.

## Approximate times using the viewfinder (monitor unit not attached)


Type of recording	Bit rate	Usage time	BP-950G	BP-955	BP-970G	BP-975
NTSC / 24.00P	50 Mbps	Recording (maximum)	200 min.	200 min.	280 min.	300 min.
		Recording (typical)	130 min.	130 min.	180 min.	195 min.
	35 Mbps	Recording (maximum)	200 min.	200 min.	285 min.	300 min.
		Recording (typical)	130 min.	130 min.	185 min.	195 min.
2	25 Mbps	Recording (maximum)	205 min.	200 min.	285 min.	305 min.
		Recording (typical)	130 min.	130 min.	185 min.	195 min.
PAL	50 Mbps	Recording (maximum)	205 min.	205 min.	290 min.	310 min.
		Recording (typical)	135 min.	130 min.	185 min.	200 min.
	35 Mbps	Recording (maximum)	210 min.	205 min.	290 min.	310 min.
		Recording (typical)	135 min.	135 min.	190 min.	200 min.
	25 Mbps	Recording (maximum)	210 min.	210 min.	295 min.	310 min.
		Recording (typical)	135 min.	135 min.	190 min.	200 min.

## ©300Pl Approximate times with the monitor unit attached (LCD screen + viewfinder), SDI output on

Type of recording	Bit rate	Usage time	BP-950G	BP-955	BP-970G	BP-975
NTSC / 24.00P	50 Mbps	Recording (maximum)	185 min.	185 min.	260 min.	275 min.
		Recording (typical)	120 min.	120 min.	165 min.	175 min.
		Playback	230 min.	230 min.	325 min.	345 min.
	35 Mbps	Recording (maximum)	185 min.	185 min.	260 min.	275 min.
		Recording (typical)	120 min.	120 min.	165 min.	180 min.
		Playback	235 min.	230 min.	325 min.	350 min.
	25 Mbps	Recording (maximum)	185 min.	185 min.	260 min.	280 min.
		Recording (typical)	120 min.	120 min.	165 min.	180 min.
		Playback	235 min.	230 min.	330 min.	350 min.
PAL	50 Mbps	Recording (maximum)	190 min.	185 min.	265 min.	280 min.
		Recording (typical)	120 min.	120 min.	170 min.	180 min.
		Playback	240 min.	240 min.	335 min.	355 min.
	35 Mbps	Recording (maximum)	190 min.	190 min.	265 min.	280 min.
		Recording (typical)	120 min.	120 min.	170 min.	180 min.
		Playback	240 min.	240 min.	335 min.	360 min.
	25 Mbps	Recording (maximum)	190 min.	190 min.	265 min.	285 min.
		Recording (typical)	120 min.	120 min.	170 min.	185 min.
		Playback	240 min.	240 min.	340 min.	360 min.


## ©300PL Approximate times using the viewfinder (monitor unit not attached)

Type of recording	Bit rate	Usage time	BP-950G	BP-955	BP-970G	BP-975
NTSC / 24.00P	50 Mbps	Recording (maximum)	205 min.	200 min.	285 min.	305 min.
		Recording (typical)	130 min.	130 min.	185 min.	195 min.
	35 Mbps	Recording (maximum)	205 min.	205 min.	285 min.	305 min.
		Recording (typical)	130 min.	130 min.	185 min.	195 min.
	25 Mbps	Recording (maximum)	205 min.	205 min.	290 min.	305 min.
		Recording (typical)	130 min.	130 min.	185 min.	195 min.
PAL	50 Mbps	Recording (maximum)	210 min.	210 min.	295 min.	315 min.
		Recording (typical)	135 min.	135 min.	190 min.	200 min.
	35 Mbps	Recording (maximum)	210 min.	210 min.	295 min.	315 min.
		Recording (typical)	135 min.	135 min.	190 min.	200 min.
	25 Mbps	Recording (maximum)	210 min.	210 min.	295 min.	315 min.
		Recording (typical)	135 min.	135 min.	190 min.	205 min.



## CB-920 Car Battery Adapter

Use the car battery adapter to charge battery packs on the go. The car battery adapter plugs into your car's cigarette lighter socket and runs off a 12-24V DC negative ground battery.



## TA-100 Tripod Adapter

The TA-100 allows you to quickly mount/unmount the camcorder on/from a tripod.



## SBR-1000 Shooting Brace

Using the SBR-1000 for additional support of the camcorder with the neck strap will significantly lighten the load of the camcoder's weight while shooting.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.

## **Specifications**

## C300 / C300 PL

## 192 System

Recording System

Movies: Video compression: MPEG-2 Long GOP;

Audio compression: Linear PCM, 16 bits, 48 kHz, 2 channels

File type: MXF

Photos: DCF (Design rule for Camera File system), compatible with Exif Ver. 2.3, JPEG compression

## Video Configuration (recording/playback)

50 Mbps (CBR, 4:2:2, 422P@HL)

1920x1080: 59.94i, 50.00i, 29.97P, 25.00P, 24.00P, 23.98P

1280x720: 59.94P, 50.00P, 29.97P, 25.00P, 24.00P, 23.98P

35 Mbps (VBR, 4:2:0, MP@HL)

1920x1080: 59.94i, 50.00i, 29.97P, 25.00P, 23.98P

1440x1080: 59.94i, 50.00i

1280x720: 59.94P, 50.00P, 29.97P, 25.00P, 23.98P

25 Mbps (CBR, 4:2:0, MP@H14)

1440x1080: 59.94i, 50.00i, 29.97P, 25.00P, 23.98P

## · Recording Media (not included)

Movies: CompactFlash (CF) Card Type I (two slots)

Photos: SD or SDHC (SD High Capacity) memory card<sup>1</sup>

1 Custom picture files, camera settings and user memo files can be saved on and read from the SD/SDHC memory card as well.

#### Maximum Recording Time (approximate, continuous recording)

16 GB CF Card

50 Mbps: 40 min., 35 Mbps: 55 min., 25 Mbps: 80 min.

64 GB CF Card

50 Mbps: 160 min., 35 Mbps: 225 min., 25 Mbps: 310 min.

- Image Sensor: Super-35mm-equivalent CMOS sensor, approx. 8,290,000 pixels (3840x2160)
- Viewfinder: 1.3 cm (0.52 in.), approx. 1,555,000 dots, 100% coverage
- · Lens Mount

©300 Canon EF mount compatible with Canon EF lenses (including EF-S lenses)

C300 PL PL Lens mount without data interface terminals

Lens multiplication factor: approx. 1.53 (for 35mm equivalent focal length)

• ND Filter: Built-in (Off, 2, 4 or 6 stops), motor operated

#### White Balance

Custom white balance (two sets, A and B), color temperature setting (2,000 K to 15,000 K); two preset settings (daylight, 5,400 K<sup>2</sup> and incandescent lamp, 3,200 K<sup>2</sup>) that can be further fine-tuned

<sup>2</sup> Color temperatures are approximate and given for reference purposes only.

- G300 Iris: Manual (1/2-stop increments, 1/3-stop increments, fine-tuning), push auto iris, automatic<sup>3</sup>
- Focus: Manual, C300 one-shot AF, C300 continuous AF<sup>3</sup>
  - <sup>3</sup> Only when the EF-S 18-135mm f/3.5-5.6 IS STM or EF-S 18-55mm f/3.5-5.6 IS STM lens is attached to the camcorder.

## ISO Speed

ISO 320 to ISO 20000, ISO 25600<sup>4</sup> to ISO 80000<sup>4</sup> (1-stop or 1/3-stop increments)

#### Gair

-6 dB to 30 dB (3-dB increments), 33 dB<sup>4</sup> to 42 dB<sup>4</sup> (3-dB increments), 0 dB to 24 dB (fine-tuning in 0.5-dB increments)

<sup>&</sup>lt;sup>4</sup> With extended ISO/Gain range.

## Shutter Speed

Speed (1/3-stop increments, 1/4-stop increments), angle, clear scan, slow, off

• C300 Lens Peripheral Illumination Correction: Available for Canon EF lenses<sup>5</sup> <sup>5</sup> Some Canon EF lenses are not compatible with peripheral illumination correction.

• Sensor Sensitivity (ISO 640 (0 dB), 2000 lux, 89.9% reflection)

NTSC F9 (1920x1080 at 59.94i) PAL F10 (1920x1080 at 50.00i) S/N Ratio (ISO 850, using Canon Log gamma)

54 dB (typical, 1920x1080, NTSC at 29.97P / PAL at 25.00P)

Subject Illumination (24 dB, with a f/1.2 lens)

NTSC 0.30 lux (29.97P, shutter speed 1/30)

PAL 0.25 lux (25.00P, shutter speed 1/25)

· Size of Photos

1920x1080 pixels, 1280x720 pixels (only when capturing a photo from a clip)

## **Terminals**

#### HD/SD SDI Terminal

BNC jack, output only, 0.8 Vp-p / 75  $\Omega$ , unbalanced

HD-SDI: SMPTE 292M

Video (1080i or 720P), embedded audio, time code (VITC/LTC)

SD-SDI: SMPTE 259M

Video (480i or 576i), embedded audio, time code (VITC/LTC)

#### HDMI OUT Terminal

HDMI connector, output only

#### SYNC OUT Terminal

BNC jack, output only, 1 Vp-p / 75  $\Omega$ 

Output signal: HD component video luminance signal (HD-Y), HD analog tri-level signal, Analog blackburst signal, SD composite video

## MIC Terminal

 $\varnothing$  3.5 mm stereo mini-jack, -72 dBV (manual volume center, full scale -18 dB) / 600  $\Omega$ 

Microphone attenuator: 20 dB

## • \( \text{(Headphone) Terminal} \)

 $\varnothing$  3.5 mm stereo mini-jack, - $\infty$  to -12 dBV (16  $\Omega$  load, volume range Min to Max) / 50  $\Omega$  or less

#### GENLOCK Terminal

BNC jack, input only: 1 Vp-p / 75  $\Omega$ 

#### TIME CODE Terminal

BNC jack, input/output

Input: 0.5 Vp-p to 18 Vp-p / 10 k $\Omega$ 

Output: 1 Vp-p / 75  $\Omega$ 

## • REMOTE Terminal

Ø 2.5 mm stereo mini-jack

## Grip Unit Connection Terminal

Proprietary connector for the supplied Grip Unit connection plug

#### WFT Terminal

Proprietary connector for the optional WFT-E6 Wireless File Transmitter or GP-E1 GPS Receiver

#### Power/Others

Power Supply (rated)

7.4 V DC (battery pack), 8.4 V DC (DC IN)

Power Consumption (recording at 50 Mbps, viewfinder/LCD screen normal brightness, SDI output on)

LCD screen and viewfinder: 11.7 W (NTSC, 24.00P recordings), 11.4 W (PAL recordings) Viewfinder only: 10.7 W (NTSC, 24.00P recordings), 10.4 W (PAL recordings) LCD screen and viewfinder: 11.7 W (NTSC, 24.00P recordings), 11.4 W (PAL recordings)

Viewfinder only: 10.6 W (NTSC, 24.00P recordings), 10.2 W (PAL recordings)

Maximum rated power consumption: 20.9 W

• Operating Temperature

0 - 40 °C (32 - 104 °F)

• Dimensions (W x H x D)\*

Minimal configuration with thumb rest:

(300) 133 x 179 x 171 mm (5.2 x 7.0 x 6.7 in.) (300PL) 133 x 179 x 177 mm (5.2 x 7.0 x 7.0 in.)

Configuration with grip unit and grip belt:

**C300**  $174 \times 179 \times 171 \text{ mm}$  (6.9 × 7.0 × 6.7 in.) **C300Pl**  $174 \times 179 \times 177 \text{ mm}$  (6.9 × 7.0 × 7.0 in.)

Configuration with monitor unit:

185 x 249 x 187 mm (7.3 x 9.8 x 7.4 in.)

Configuration with handle unit and monitor unit:

185 x 284 x 301 mm (7.3 x 11.2 x 11.9 in.)

\* All dimensions are approximate.

• Weight \*\*

Camcorder unit only:

**C300** 1430 g (3.2 lb.) **C300 PL** 1630 g (3.6 lb.)

Camcorder with grip unit and grip belt, monitor unit, BP-955 battery pack and two CF cards:

**C300** 2520 g (5.6 lb.) **C300 PL** 2720 g (6.0 lb.)

Camcorder with grip unit and grip belt, monitor unit, handle unit, BP-955 battery pack and two CF cards:

**C300** 2700 g (6.0 lb.) **C300 PL** 2900 g (6.4 lb.)

## **Modular Units**

## Monitor Unit

Modular unit can be rotated 270° on its axis; includes the LCD panel, recording and playback controls, XLR terminals and related audio controls.

- LCD Panel: Articulated panel, 270° vertical rotation, 180° lateral rotation
- LCD Screen: 10.1 cm (4.0 in.), wide, color, approx. 1,230,000 dots, 100% coverage
- CH1, CH2 Terminals

XLR jack (pin1: shield, pin2: hot, pin3: cold), 2 sets

Sensitivity

MIC setting: -60 dBu (manual volume center, full scale -18 dB) / 600  $\Omega$  LINE setting: 4 dBu (manual volume center, full scale -18 dB) / 10 k $\Omega$ 

Microphone attenuator: 20 dB

• Weight: Approx. 620 g (1.4 lb.)

## Grip Unit

Modular unit can be attached at any of 24 positions (15° intervals); includes limited recording controls.

• Weight: Approx. 230 g (8.1 oz.)

194

<sup>\*\*</sup>All weights are approximate.

## Handle Unit

Modular unit includes a cold accessory shoe and socket for 0.64 cm (1/4 in.) screws for other accessories.

• Weight: Approx. 180 g (6.3 oz.)

## **CA-940N Compact Power Adapter**

- Rated Input: 100 240 V AC, 50/60 Hz, 0.72 A (100 V) 0.39 A (240 V)
- Rated Output: 8.4 V DC, 4.1 A
- Operating Temperature: 0 40 °C (32 104 °F)
- Dimensions (W x H x D): Approx. 103 x 51 x 139 mm (4.1 x 2.0 x 5.5 in.)
- Weight: 465 g (1.0 lb.)

## CG-940 Battery Charger

- Rated input: 100 240 V AC, 50/60 Hz, 24 W
- Rated Output: 8.4 V DC, 1.5/2.0 A
- Operating Temperature: 0 40 °C (32 104 °F)
- Dimensions (W x H x D): 85 x 51 x 110 mm (3.3 x 2.0 x 4.3 in.)
- Weight: Approx. 240 g (8.5 oz.)

## **BP-955 Battery Pack**

- Battery Type
  - Rechargeable lithium ion battery, compatible with Intelligent System
- Rated Voltage

7.4 V DC

- Operating Temperature: 0 40 °C (32 104 °F)
- · Battery Capacity

Typical: 5,200 mAh

Minimum: 37 Wh / 4,900 mAh

- Dimensions (W x H x D): 38.2 x 43.5 x 70.5 mm (1.5 x 1.7 x 2.8 in.)
- Weight: 220 g (7.8 oz)

Specifications

# Index

24.00P	Custom picture settings
A	D
ABB (automatic black balance)       .48         Accessories       .187         AE shift       .72         Air intake vents       .32         Aperture*       .69         Aspect ratio       .142         Assignable buttons       .111         Audio peak limiter       .93, 94	Date and time27Date format164DC IN terminal25Direct setting mode61Double slot recording46Drop frame (time code)85
Audio recording	Edge monitor       100         EF lens mount*       32         Exposure compensation       72         EXT 1/2 terminals       36
В	Eye cup 37
Battery pack .23 Bit rate .59 Black balance .48 Built-in backup battery .184	Ficker reduction
С	Free-run (time code)
Camera settings	G
Inserting       .43         Recording method       .46         Recovering data       .47         Removing       .44         Switching CF card slots       .45, 126         Check marks (☑)       .102, 132	Gain       65         GENLOCK terminal       88         GPS       103         Grip belt       41         Grip unit       40
CINEMA (preset custom picture)58 Clips	н
Adding an M mark 102, 132 Adding/Deleting shot marks 101, 136 Copying 133 Deleting 134 Displaying clip information 131 Playback 127	Handle unit       41         HD/SD SDI terminal       141         HDMI OUT terminal       141         Headphone terminal       95         Hour meter       168
Color bars       .98         Condensation       .186         Connection to an external monitor       .140         Continuous AF*       .80         Custom displays       .123         Custom functions       .123         Custom picture       .114	Index screens Changing clip thumbnail 137 Clips 125 Expand clip 136 Shot marks 135 Initializing recording media 45

Interval recording mode106	Peaking	78
Iris*69	Peripheral illumination correction*	34
ISO speed	Phantom power (microphone)	92
•	Photos	
J	Copying custom picture files	156
	Deleting	
Joystick	Protecting	
Joystick guide129	Viewing	
V	PL lens mount**	
K		
Key lock	Playback Clips	107
•	Photos	
L		
Language	Power supply	
Language28	POWER switch	26
LCD screen	Pre-recording mode	110
Lens32	Push auto iris*	71
Lens exchange mode		
Lens firmware*	R	
Light metering mode*73	Rear panel	57
LUT (lookup table)58		
	Rec run (time code)	84
M	Recording	F-1
Magnification 70	Clips	
Magnification	Photos	
Menu settings159	Recording type	
Message list179	Relay recording	
Metadata	Remaining battery	24
MIC terminal91	Remote operation	49
Microphone	Resetting all camcorder settings	164
Microphone attenuator94, 95	Resolution (frame size)	59
Microphone sensitivity	Reviewing a recording	
Monitor unit	Running mode (time code)	
MXF file type	riaming mode (time code)	0-
	S	
My Menu		
N	Safety zone	
IN	Saving clips to a computer	143
ND filter	SD card	44
Non-drop frame (time code)	Shooting frame rate	108
NTSC59	Shot marks1	01, 136
	Shutter speed	
0	Slow & fast motion recording mode	
OK marks (M) 100 100	Specifications	
OK marks (M)		
One-shot AF*	Status screens	
Onscreen markers	SYNC OUT terminal	
D	Synchronization	88
P		

Tally lamp       .165         Terminal covers       .42         Thumb rest       .40         Time code       .84         TIME CODE torminal       .80	Video configuration59Video output configuration139View assistance58Viewfinder39
TIME CODE terminal       .89, 90         Tripod       .40         Troubleshooting       .176         Turning the camcorder on/off       .26    U	Waveform monitor       99         WFT terminal       49, 103         White balance       74         Wide DR       114, 117         Wi-Fi Remote       49
User bit	X XLR terminals
Vectorscope	Zebra pattern

## 200

# CANON PROFESSIONAL DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY FOR PRODUCTS PURCHASED IN THE UNITED STATES

The limited warranty set forth below is given by Canon U.S.A., Inc. ('Canon USA') with respect to Canon Professional Digital Video Equipment (the 'Equipment') packaged with this limited warranty and purchased in the United States. This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase. The Equipment is warranted to the original end-user purchaser, when delivered in new condition in its original container, under normal use against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase. Labor: For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by Canon USA's factory service centers or designated service facilities located in the United States.

When returning Equipment under this warranty, you must pre-pay the shipping charges, and you must enclose a copy of the Bill of Sale or other proof of purchase with a complete explanation of the problem. During the ONE-YEAR warranty period, repairs will be made and the Equipment will be return-shipped to you free of charge. For repairs after the warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the Equipment will be returned to you at your risk and expense. If you disapprove, we will return-ship the Equipment to you at no charge to you to an address within the United States.

This limited warranty only applies if the Equipment is used in conjunction with compatible computer equipment and compatible software, as to which items Canon USA will have no responsibility. Canon USA shall have no responsibility under this limited warranty for use of the Equipment in conjunction with incompatible peripheral equipment and/or incompatible software. Non-Canon brand peripheral equipment and software which may be distributed with, or factory loaded on, the Equipment, are sold 'AS IS' without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof. If the Equipment contains a hard disk drive, Canon USA recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of failure or other malfunction of such drive.

In order to obtain warranty service, please contact the authorized Canon retail dealer from whom you purchased the Equipment or contact the CANON INFORMATION CENTER AT **855-CINE-EOS** (855-246-3367) or on the Internet at **pro.usa.canon.com/support**. You will be directed to the nearest service facility for your Equipment.

This Limited Warranty covers all defects encountered in normal use of the Equipment and does not apply in the following cases:

- A. Loss or damage to the Equipment due to abuse, mishandling, accident, improper maintenance, use of non-Canon accessories or failure to follow operating, maintenance or environmental instructions prescribed in Canon USA's user's manual;
- B. If the Equipment is defective as a result of leaking batteries, sand, dirt or water damage;
- C. If defects or damages are caused by the use of parts or supplies (other than those sold by Canon USA) that cause damage to the Equipment or that cause abnormally frequent service calls or service problems;
- D. If defects or damages are caused by service other than Canon USA's factory service centers or authorized service facilities;
- E. Any internal modification to product hardware or firmware;
- F. Any applicable fee for Maintenance of the Equipment;
- G. If the Equipment has had its serial number or dating altered or removed.

This Limited Warranty does not apply to Equipment purchased outside the United States. This Limited Warranty does not apply to accessories or consumables for the Equipment, which are sold "AS IS", without warranty of any kind by Canon USA. Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card ensures that you are contacted promptly should there be a safety inspection, modification or product recall under applicable laws or regulations.

NO IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THIS EQUIPMENT AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY OR GUARANTY (EXCEPT AS MENTIONED ABOVE) GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS EQUIPMENT SHALL BIND THE UNDERSIGNED (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU). CANON USA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, INCLUDING WITHOUT LIMITATION, LOSS OR CORRUPTION OF DATA STORED ON THE EQUIPMENT'S HARD DRIVE, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE EQUIPMENT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON USA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON USA BE GREATER THAN THE PURCHASE PRICE OF THE EQUIPMENT SOLD BY CANON USA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE EQUIPMENT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON USA (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS EQUIPMENT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## CANADA

# CANON PROFESSIONAL DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY FOR PRODUCTS PURCHASED IN CANADA

The limited warranty set forth below is given by Canon Canada Inc. ('Canon Canada') with respect to Canon Professional Digital Video Equipment (the 'Equipment') packaged with this limited warranty and purchased in Canada. This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase. The Equipment is warranted to the original end-user purchaser, when delivered in new condition in its original container, under normal use against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase. Labor: For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by Canon Canada's factory service center or designated service facilities located in Canada.

When returning Equipment under this warranty, you must pre-pay the shipping charges, and you must enclose a copy of the Bill of Sale or other proof of purchase with a complete explanation of the problem. During the ONE-YEAR warranty period, repairs will be made and the Equipment will be return-shipped to you free of charge. For repairs after the warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the Equipment will be returned to you at your risk and expense. If you disapprove, we will return-ship the Equipment to you at no charge to you to an address within Canada.

This limited warranty only applies if the Equipment is used in conjunction with compatible computer equipment and compatible software, as to which items Canon Canada will have no responsibility. Canon Canada shall have no responsibility under this limited warranty for use of the Equipment in conjunction with incompatible peripheral equipment and/or incompatible software. Non-Canon brand peripheral equipment and software which may be distributed with, or factory loaded on, the Equipment, are sold 'AS IS' without warranty of any kind by Canon Canada, including any implied warranty or condition regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof. If the Equipment contains a hard disk drive, Canon Canada recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of failure or other malfunction of such drive.

In order to obtain warranty service, please contact the authorized Canon retail dealer from whom you purchased the Equipment or contact the CANON PROFESSIONAL SERVICE CENTRE 1-800-667-2666 or on the Internet at <a href="https://www.canon.ca/pro">www.canon.ca/pro</a>. You will be directed to the nearest service facility for your Equipment.

This Limited Warranty covers all defects encountered in normal use of the Equipment and does not apply in the following cases:

- A. Loss or damage to the Equipment due to abuse, mishandling, accident, improper maintenance, use of non-Canon accessories or failure to follow operating, maintenance or environmental instructions prescribed in Canon Canada's user's manual:
- B. If the Equipment is defective as a result of leaking batteries, sand, dirt or water damage;
- C. If defects or damages are caused by the use of parts or supplies (other than those sold by Canon Canada) that cause damage to the Equipment or that cause abnormally frequent service calls or service problems;
- D. If defects or damages are caused by service other than Canon Canada's factory service centers or authorized service facilities;
- E. Any internal modification to product hardware or firmware:
- F. Any applicable fee for Maintenance of the Equipment;
- G. If the Equipment has had its serial number or dating altered or removed.

This Limited Warranty does not apply to Equipment purchased outside Canada. This Limited Warranty does not apply to accessories or consumables for the Equipment, which are sold "AS IS", without warranty of any kind by Canon Canada. Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card ensures that you are contacted promptly should there be a safety inspection, modification or product recall under applicable laws or regulations.

NO IMPLIED WARRANTY OR CONDITION, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THIS EQUIPMENT AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY OR GUARANTY (EXCEPT AS MENTIONED ABOVE) GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS EQUIPMENT SHALL BIND THE UNDERSIGNED (SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU). CANON CANADA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, INCLUDING WITHOUT LIMITATION, LOSS OR CORRUPTION OF DATA STORED ON THE EQUIPMENT'S HARD DRIVE, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE EQUIPMENT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON CANADA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON CANADA BE GREATER THAN THE PURCHASE PRICE OF THE EQUIPMENT SOLD BY CANON CANADA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE EQUIPMENT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON CANADA (SOME PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS EQUIPMENT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

# Canon

Canon Inc. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan



## ASIA and HONG KONG, S.A.R.

## Canon Hongkong Company Ltd

19/F, The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong 

✓ +852 3191 2333, □ +852 2428 3963

AUSTRALIA www.canon.com.au Canon Australia Pty Ltd (\* 13-13-83 (within Australia only) (\* (61) 02-9805-2555

#### **CANADA**

#### CANON CANADA INC.

http://www.canon.ca/pro

 Professional Product Support / Soutien des produits professionnels
 (\*800) 667-2666

## CENTRO Y SURAMÉRICA

CANON LATIN AMERICA, INC.

http://www.cla.canon.com

**EUROPE** www.canon-europe.com **Canon Europa N.V.**Bovenkerkerweg 59,

1185 XB Amstelveen, The Netherlands

## **MÉXICO**

CANON MEXICANA, S DE RL DE CV

http://www.canon.com.mx **(**\*52 (55) 5249-4905

NEW ZEALAND www.canon.co.nz

Canon New Zealand Ltd

("0800-222-666 (within New Zealand only)

#### **SINGAPORE**

Canon Singapore Pte. Ltd

(° (64) 09-489-0300

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632

**(**' (65) 6799 8888, **(** (65) 6799 8882

#### UNITED KINGDOM

Canon UK Ltd

CCI Service Centre, Unit 130, Centennial Park, Borehamwood, Hertfordshire, WD6 3SE \$\mathcal{C}\$ 0844-369-0100

#### USA

CANON U.S.A., INC.

http://pro.usa.canon.com http://pro.usa.canon.com/support (% (855) CINE-EOS (855-246-3367) (USA only)

Visit your local Canon Web site to download the latest version of this Instruction Manual.

© CANON INC. 2013